

Güralp Data Centre


Operator manual

Contents

Acquisition software components diagram
Overview
Software components
Operating system
Requirements3
Security
Configuration4
IRIS ringserver4
Ringserver miniSEED files storage location configuration4
Ringserver miniSEED files storage auto-clean configuration4
slinktool4
slink2dali5
Güralp Data Centre controller service9
Güralp Data Centre monitor service9
Güralp responder service10
Güralp Discovery application10
Operation
IRIS ringserver11
slinktool12
slink2dali12
Güralp Data Centre controller service12
Güralp Data Centre monitor service13
Güralp responder service13
Güralp Discovery application14
State of Health14
Configuration19
Support21
Version21



Acquisition software components diagram

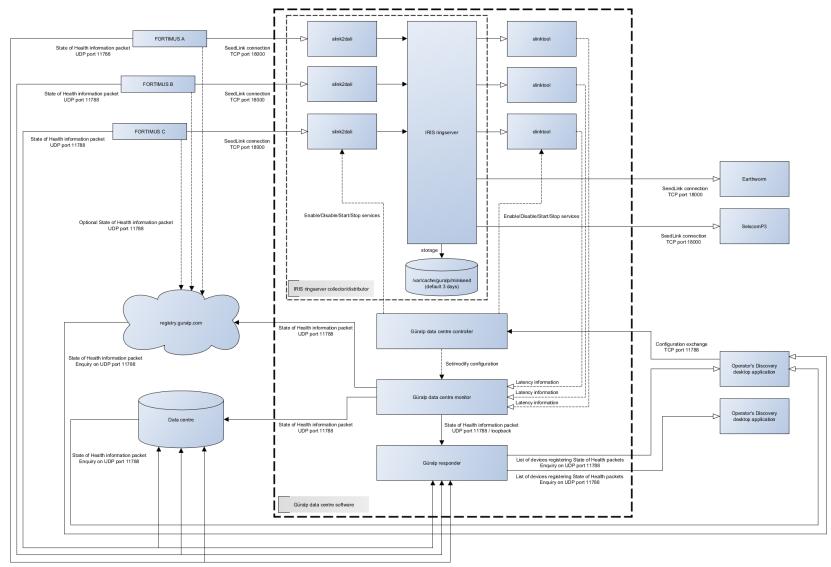



Overview

Güralp Systems Data Centre software package (Acquisition software package) consists of several applications providing system state of health monitoring, data collection and distribution, and remote configuration capabilities. This document describes how to use and configure selected components of the software package.

Software components

List of all applications present in the software components diagram:

- IRIS ringserver
- slinktool
- slink2dali
- Güralp Data Centre controller service
- Güralp Data Centre monitor service
- Güralp responder service
- Güralp Discovery application

Optional components:

- Earthworm client
- SeiscomP3 client

Operating system

Requirements

Güralp Systems Data Centre software package has been tested on the following x86_64 platforms:

- Red Hat Enterprise Linux 8 (or equivalent, e.g. Rocky Linux 8 or AlmaLinux 8)
- Amazon Linux 2

Support for other platforms might be considered upon request (minimum system dependency requirements are: systemd v239, Qt v5.12.5, polkit v0.115).

Security

Güralp Systems Data Centre software requires access to the network in order to operate correctly. Please make sure that the system security settings allow the network traffic to and from the machine on ports specified in the table below. It also might be needed to configure SELinux features in relation to the mentioned requirements.

Port	Protocol	Description
11788	UDP	Used for sending and requesting state of health information by system
		components and Discovery desktop application.
11788	ТСР	Configuration exchange protocol used by Discovery desktop application to
		configure data streaming connections.
16000	ТСР	DataLink data transmission protocol connection to IRIS ringserver.
18000	ТСР	SeedLink data transmission protocol connection to IRIS ringserver for both
		incoming and outgoing data streams.



Configuration

IRIS ringserver

IRIS ringserver does not require any specific configuration unless change in either default storage location (/var/cache/guralp/miniseed/) or time for which the data is kept on the hard drive is required. Application runs as an operating system service and listens for SeedLink connections on TCP port 18000. If required listening port is different to 18000 please contact support@guralp.com for instructions.

Ringserver miniSEED files storage location configuration

IRIS ringserver storage location is configured by the home directory of ringserver user and if required can be changed by system administrator by editing the user properties. Newly selected directory should have sufficient permission and ownership. The steps below show how to modify the home directory of the ringserver user in Red Hat linux environment (please note that commands may require elevated permissions).

1. Copy tmpfiles.d guralp-miniseed.conf file to /etc system location

cp /usr/lib/tmpfiles.d/guralp-miniseed.conf /etc/tmpfiles.d/guralp-miniseed.conf

2. Edit the copied configuration file and append a new line specifying the new storage location:

Course the shares as mode to the	a filo			
<pre>d /mnt/new/storage/direct</pre>	ory	0775 root	ringserver	3d
d /var/cache/guralp/minis	eed	0775 root	ringserver	3d
MSeedWrite %%n_%%s_%%l_%%c	%%Y_%%j.mseed			
F /run/guralp/etc/iris-ri	ngserver.conf	0640 root	ringserver	-
d /run/guralp/etc		0755 root	root	

- 3. Save the changes made to the file
- Modify the ringserver user home directory usermod -d /mnt/new/storage/directory ringserver
- 5. Reboot the system to apply the changes

Please note that only the following top directories can be used: /home /media /mnt /opt /srv /var

Ringserver miniSEED files storage auto-clean configuration

IRIS ringserver storage is controlled by system tmpfiles clean timer and can be configured by editing guralp-miniseed.conf file. In order to change the configuration of time that historical data is kept in the system please follow the steps below.

- 2. Edit the copied configuration file and change the age of storage location to the required value.

d /run/guralp/etc	0755 root	root	
F /run/guralp/etc/iris-ringserver.conf	0640 root	ringserver	-
MSeedWrite %%n_%%s_%%l_%%c_%%Y_%%j.mseed			
d /var/cache/guralp/miniseed	0775 root	ringserver	3d
where 3a is the age of temporary files (read mo	re:		
https://www.freedesktop.org/software/system	d/man/tmpfiles.d.ht	<u>tml</u>).	

3. Save and reboot the system

slinktool

Slinktool process runs as a service with parameters provided through the service name in a form of a '@' separated list of values. Under normal operation there is no requirement to manually configure (enable/disable or start/stop) the service, this task is performed by the Data Centre controller on remote request from the Discovery desktop application.

Manual service configuration can be performed but it is not recommended. In order to do that, please log in to the Data Centre computer and use systemctl command to enable/disable and/or start/stop the slinktool service. Slinktool service is run with a set of parameters:

slinktool@NC@STATC@LOCHN@CONNECTION@PORT.service

where:

- NC, is SEED network code,
- STATC, is SEED station code,
- LOCHN, is SEED location and channel codes
- CONNECTION, is the connection IP address or hostname, for latency monitoring in the Data Centre this is set to 127.0.0.1 (localhost)
- PORT, is the connection port

Wildcard character for SEED location and channel name can be used and is represented by '_' character. Also, a list of location and channel names can be provided to a given service and should be separated with '-' character.

Example:

```
slinktool@DG@0585A@_____@127.0.0.1@18000.service, will connect to station 0585A of DG network,
subscribing to any channel (wildcard selector of 5x ` ' character).
```

```
slinktool@DG@0585A@0NHHZ-0NHHN-0NHHE@127.0.0.1@18000.service, will connect to station 0585A of
DG network, subscribing to 0N.HHZ, 0N.HHN and 0N.HHE channels.
```

slink2dali

Slink2dali process runs as a service with parameters provided through the service name in a form of a '@' separated list of values. Under normal operation there is no requirement to manually configure (enable/disable or start/stop) the service, this task is performed by the Data Centre controller on remote request from the Discovery desktop application.

In order to configure the required connection (slink2dali and slinktool services) use the Discovery desktop application.

- 1. Open Discovery desktop application and change the view to "Registry" mode
- 2. Right click on the Data Centre instance

Status	Label Comet FEM_TEST_JIG	System	Name	Serial# 5210	Firmware Ver 2.1-10023	WAN Address 10.30.0.18	LAN Address 10.30.0.18	Netmask 255,255.0.0	Uptime		Longitude	Altitude	1250	Network latency	
	Cornet Test Rack	Aquarlus	AQU-145A											n/a	n/a
		Fortimus	FMUS-585A		2.1-11215	10.30.0.68	10.30.0.68		26 days 22 Hrs					n/a	n/a
And Anna	Cornet R&D	Fortimus	FMUS-9059	36953	2.1-11311	10.30.0.20	10.30.0.20		4 days 0 Hrs					n/a	n/a
	Comet Five-character serial number	Minimus	MIN-12345	74565	2.1-11547	10.30.0.11	10.30.0.11	255.255.0.0	6 days 23 Hrs	51.3612	-1.1640	114.20	97.73%	3.90s	4.53s
0	Cornet NO LABEL	Minimus	MIN-7957	31063	2.1-11312	10.30.0.49	10.30.0.49	255.255.0.0	00:36:21	51.3615	-1.1640	-12.34	99.85%	n/a	n∦a
0	Cornet NO LABEL	Minimus	MIN-9355	37717	2.0-8282	10.30.0.90	10.30.0.90	255.255.0.0	10 days 23 Hrs	-59.9000	85.5410	-12.34	4.87%	n/a	n/a
0	Comet Orac	Minimus	MIN-CC57	52311	2.1-1679	10.30.0.38	10.30.0.38	255.255.0.0	00:00:46	51.3612	-1.1640	-12.34	99.73%	n/a	n/a
0=	Cornet deck@aqu-deck-dev.guralp.lo	cal Discovery	aqu-deck-de	4C5262264CE	C 1.1-263	10.30.0.108	10.30.0.108	255.255.0.0	6 days 0 Hrs	51.3611	-1.1639	0.00	97.94%	n/a	n/a
0=	Cornet DATC@guralp.guralp.local	guralp 10.30.0.37	e consta	D850E68E7E9	6 0.3 1	10.30.0.37	10.30.0.37	255.255.0.0	02:51:00	0.0000	0.0000	0.00	67.46%	3.90s	4.47s
		te of health dasht afiguration	board												

3. Select Configuration option



4. In the configuration widget, if not preloaded with configuration, click on "Restore" button to retrieve the Data Centre configuration.

Mmmm

🝺 oregon - Data Centre Configurati	on - Discovery		-		×
General settings					
Registry group identifier:	guralp3				
Monitoring period for latency channels:	30				
Monitoring period for active channels:	60				
Monitoring period for active devices:	120				
Filter for active channels monitoring:	11.11111.11.111				
Filter for channels latency monitoring:	??.????.ON.???				
Storage information base location					
Registry servers					
127.0.0.1				Remove	
				Add serve	r
Station subscription list					
DG.06B55 (81.149.31.241:18000) ??.??	?			Remove	
		Add station from discovered	Add sta	ation manua	ally
Restore		Ca	ncel	Apply	1

 Widget populates the list of currently configured connections and provides control button to remove the connection if no longer required. Connection subscription channel list can contain multiple SEED channel names (LOCATION_CODE.CHANNEL_CODE) defined as a space (' ') separated list.

O				_	~
D oregon - Data Centre Configurat	ion - Discovery		_		×
General settings					
Registry group identifier:	guralp3				
Monitoring period for latency channels:	30				
Monitoring period for active channels:	60				
Monitoring period for active devices:	120				
Filter for active channels monitoring:	??.?????.?????				
Filter for channels latency monitoring:	??.????.ON.???				
Storage information base location					
Registry servers					
127.0.0.1				Remove	
				Add serve	er
			L	Aug bert	
Station subscription list					_
DG.06B55 (81.149.31.241:18000) ??.??	?			Remove	
		Add station from discovered	Add st	ation manu	ally
Restore		Ca	ncel	Appl	у



- 6. Connections can be quickly added from the list of stations populated in the Discovery desktop application main window through "Add station from discovered" button, or manually by clicking on "Add station manually".
 - a. Add station from discovered.

When actioned, new widget with a list of discovered stations is displayed and tickboxes are available for selecting to which stations the Data Centre should connect to. Once list contains required stations, press "Add selected" button to confirm.

MMMM

atency channels:	30	
active channels:	Select station ×	
sctive devices: als monitoring:	DG.00260 DG.0F85C	
ncy monitoring: ase location	DG.00760 DG.01A60 DG.00960	
	PG.06458 DG.0995F DG.01860	Rem Add s
t	Toggle all Cancel Add selected	Rem
		Rem
??		Rem
	Add station from discovered Add st	ation m

b. Add station manually

To add device that is not supporting Güralp Discovery mechanism, please press on "Add station manually" button which populates a simple widget asking for details required to create the connection from the Data Centre to the device. **Required fields:**

- SEED Network code
- SEED Station code
- **Connection IP address**

To confirm, click on "Add station" button.

	period for deare endiment					
Monitoring	period for active devices:	120				
Filter for a	ctive channels monitoring:	77.77777.77.777				
Filter for c	hannels latency monitoring:	77.77777.77.777				
	Enter station details - Dis	covery		-		×
12	ion information as SEED_NET nection IPv4 address:	WORK SEED_STATION (eg. DG 01234):				
Stea			Cancel		Add station	
D.9059	77.777					Remove
DG.0585A	77.777					Remove
DG.07957	27.777					Remove
DG.12345	03.??? ?N.???					Remove
			Add station from			



7. When all connections are added to the list, click "Apply" button to send the updated configuration to the Data Centre. Date Centre controller service will enable and start all required slinktool and slink2dali services. If station was removed from the list, the controller service will stop and disable the services used to connect to the removed device.

oregon - Data Centre Configurat	ion - Discovery		-		×
Seneral settings					
Registry group identifier:	guralp3				
Monitoring period for latency channels:	30				
Monitoring period for active channels:	60				
Monitoring period for active devices:	120				
Filter for active channels monitoring:	??.?????.????				
Filter for channels latency monitoring:	??.????.ON.???				
Storage information base location					
127.0.0.1				Remove	9
			[Add serv	er
Station subscription list					
DG.06B55 (81.149.31.241:18000) ??.?	17			Remove	е
		Add station from discovered	Add st	ation mani	ville

Note: Other configuration fields are explained in the <u>Discovery application configuration section</u> of <i>this document.

Manual service configuration can be performed but it is not recommended. In order to manually configure a connection, please log in to the Data Centre computer and use systemctl command to enable/disable and/or start/stop the slink2dali service. Slink2dali service is run with a set of parameters:

slink2dali@NC@STATC@LOCHN@CONNECTION@PORT@STATEFILESAVEINTERVAL.service

where:

- NC, is SEED network code,
- STATC, is SEED station code,
- LOCHN, is SEED location and channel codes
- CONNECTION, is the connection IP address or hostname
- PORT, is the connection port
- STATEFILESAVEINTERVAL, defines interval for state file save (can be blank)

Wildcard character for SEED location and channel name can be used and is represented by '_' character. Also, a list of location and channel names can be provided to a given service and should be separated with '-' character.

Example:

```
slink2dali@DG@0585A@_____@10.30.0.123@18000.service, will connect to station 0585A of DG
network using IP address 10.30.0.123 and port 18000 subscribing to any channel (wildcard
selector of 5x `_' character).
```

slink2dali@DG@0585A@ONHHZ-ONHHN-ONHHE@10.30.0.123@18000.service, will connect to station 0585A
of DG network using IP address 10.30.0.123 and port 18000 subscribing to ON.HHZ, ON.HHN and
ON.HHE channels.



Güralp Data Centre controller service

Güralp Data Centre controller does not require any specific configuration. Application runs as a service and does not need particular maintenance.

Güralp Data Centre monitor service

Güralp Data Centre Monitor service should be configured remotely by accessing Configuration widget in the Discovery application. The configuration widget is available under right-click menu of a Data Centre row.

tus	Label	System	Name	Serial#	Firmware Ver	WAN Address	LAN Address	Netmask	Uptime	Latitude	Longitude	Altitude	Free storage	Network latency	Data latency
Cor	met FEM_TEST_JIG	Aquarius	AQU-145A	5210	2.1-10023	10.30.0.18	10.30.0.18	255.255.0.0	00:00:24	0.0000	0.0000	-12.34		n/a	n/a
S 🔳 Cor	met Test Rack	Fortimus	FMUS-585A	22618	2.1-11215	10.30.0.68	10.30.0.68	255.255.0.0	26 days 22 Hrs	51.3612	-1.1643	125.00	70.99%	n/a	n/a
D 🗐 Cor	met R&D	Fortimus	FMUS-9059	36953	2.1-11311	10.30.0.20	10.30.0.20	255.255.0.0	4 days 0 Hrs	51.3614	-1.1639	-12.34	98.68%	n/a	n/a
3 🔳 Cor	met Five-character serial number	Minimus	MIN-12345	74565	2.1-11547	10.30.0.11	10.30.0.11	255.255.0.0	6 days 23 Hrs	51.3612	-1.1640	114.20	97.73%	3.90s	4.53s
3 🔳 Cor	met NO LABEL	Minimus	MIN-7957	31063	2.1-11312	10.30.0.49	10.30.0.49	255.255.0.0	00:36:21	51.3615	-1.1640	-12.34	99.85%	n/a	n/a
3 🔳 Cor	met NO LABEL	Minimus	MIN-9355	37717	2.0-8282	10.30.0.90	10.30.0.90	255.255.0.0	10 days 23 Hrs	-59.9000	85.5410	-12.34	4.87%	n/a	n/a
3 🗐 Cor	met Orac	Minimus	MIN-CC57	52311	2.1-1679	10.30.0.38	10.30.0.38	255.255.0.0	00:00:46	51.3612	-1.1640	-12.34	99.23%	n/a	n/a
D 🔳 Cor	met deck@aqu-deck-dev.guralp.local	Discovery	aqu-deck-dev	4C5262264CEC	1.1-263	10.30.0.108	10.30.0.108	255.255.0.0	6 days 0 Hrs	51.3611	-1.1639	0.00	97.94%	n/a	n/a
0 🔳 🚥	met DATC@guralp.guralp	Data Centre alp 10.30.0.37	ouralo	D850E6BE7E96	0.3-1	10.30.0.37	10.30.0.37	255.255.0.0	02:51:00	0.0000	0.0000	0.00	67.46%	3.90s	4.47s
	State o Config	f health dashb uration	board												

Manual configuration can be performed but is not recommended. Configuration is stored in a configuration file located in /var/cache/guralp/guralp-monitor.ini and contains a set of key-value entries:

Кеу	Description	Туре
registry_addresses	Comma separated IP addresses of	Comma
	Güralp responder servers to which the	separated list of
	state of health packet should be send	strings
	to	
registry_group_id	Güralp responder server group	String
	identifier string used. Please use	
	"guralp3" as a default value	
filter_monitored_channels	SEED globing style filter for channels	String
	activity monitoring	
filter_monitored_latency_channels	SEED globing style filter for channels	String
	latency monitoring	
monitoring_period_latency	Period of time in seconds that should	Integer
	be used to find the highest data latency	
monitoring_period_active_channels	Period of time in seconds that should	Integer
	be used to detect number of active	
	channels	
monitoring_period_active_devices	Period of time in seconds that should	Integer
	be used to detect number of active	
	devices	
storage_monitor_dir	Directory that should be used for	String
	storage monitoring, if this entry is not	
	present, iris ringserver working	
	directory is used.	

Example guralp-monitor.ini file content:



```
[Version_1]
filter_monitored_channels="^.{1,2}\\..{1,5}\\..N\\..{1,3}"
filter_monitored_latency_channels="^.{1,2}\\..{1,5}\\..N\\..{1,3}"
monitoring_period_active_channels=120
monitoring_period_active_devices=300
monitoring_period_latency=30
registry_addresses=127.0.0.1,
registry_group_id=guralp3
storage_monitor_dir=/var/cache/guralp/miniseed
```

Güralp responder service

Güralp responder service provides a configuration option for specifying a wildcard group identifier that grants access to all of the registered devices. Wildcard group identifier can be used in the Discovery desktop application to list all of the stations that are connected to the Data Centre even if they are registering with a different, non-matching, group identifiers.

Wildcard group identifier can be set by creating a configuration file under tmpfiles.d directory. The configuration file generates the content of /run/guralp/etc/wildcard_groupid.txt file that is read by the responder service on startup and the content is used as the wildcard. To configure a custom wildcard string please follow the steps below.

- 1. Copy tmpfiles.d configuration file to system location. cp /usr/lib/tmpfiles.d/guralp-responder.conf /etc/tmpfiles.d/guralp-responder.conf
- 2. Edit the configuration file /etc/tmpfiles.d/guralp-responder.conf to generate the selected wildcard string.

root

guralpmonitor

customWildcard

Example content of /etc/tmpfiles.d/guralp-responder.conf

d /run/guralp/etc 0755 root F /run/guralp/etc/wildcard_groupid.txt 0640 root

Where, customWildcard is the new wildcard string.

- 3. Save the modified file.
- 4. Restart the operating system.

Güralp Discovery application

Güralp Discovery desktop application when used for monitoring the state of health of the Data Centre has to be configured to use the Data Centre IP address as a Cloud registry server. Discovery supports multiple cloud registry endpoints and these are configured under File/Settings menu action, also accessible by clicking on the "Cloud server configuration" label of the application main window.

Settings Exit	Label	System	Name	Serial#	Firmware Ver	Connection Type	WAN Address	LAN Address	Uptime	Last Contact	Latitude	Longitude	Timing quality	Free storage	
EXIL	Comet Platinum	NAM2	sapphire	2989	1.0-15757	(sapphire)	0.0.0.0	10.30.0.9	178 days 3 Hrs	Just Now	0.0000	0.0000	0		
tive	Platinum	NAM	hassium	2331	1.0-15695	(hassium)	0.0.0.0	169.254.36.116	933 days 2 Hrs	Just Now	0.0000	0.0000	0		
tive	Comet Platinum	EAM	eam3467	3467	1.0-5174	(eam3467)	0.0.0.0	10.30.0.24	178 days 3 Hrs	Just Now	0.0000	0.0000	0		
tive	Cornet Platinum	EAM	eam2887	2887	1.0-5299	(eam2887)	0.0.0.0	10.30.0.42	178 days 0 Hrs	Just Now	0.0000	0.0000	0		
tive	Comet Platinum	EAM	RJDtest	TEST	1.0-5225	(RJDtest)	0.0.0.0	10.30.0.27	178 days 3 Hrs	Just Now	0.0000	0.0000	0		
0	Cornet PG-V2-TEST	Minimus Plus	MINP-6458	25688	2.1-10054	(MINP-6458)	0.0.0.0	10.30.0.43	20 days 22 Hrs	Just Now	51.3612	-1.1642	100	0.00%	
00	Comet Shawn 3T Vertical Testing	Minimus	MIN-EC57	60503	2.0-8244	(MIN-EC57)	0.0.0.0	10.30.0.28	27 days 23 Hrs	Just Now	51.3611	-1.1640	100	0.00%	
0	Comet Orac	Minimus	MIN-CC57	52311	2.1-1679	(MIN-CC57)	0.0.0.0	10.30.0.98	13 days 7 Hrs	Just Now	51.3612	-1.1640	99		
00	Comet 3T reference COMET5	Minimus	MIN-A65B	42587	2.0-8219	(MIN-A65B)	0.0.0.0	10.30.0.36	45 days 22 Hrs	Just Now	51.3612	-1.1640	100	67.12%	
0	Comet NO LABEL	Minimus	MIN-9355	37717	2.0-8282	(MIN-9355)	0.0.0.0	10.30.0.90	17 days 22 Hrs	Just Now	-59.9000	85.5410	0	75.06%	
00	Comet NO LABEL	Minimus	MIN-7957	31063	2.1-11161	(MIN-7957)	0.0.0.0	10.30.0.5	21 days 3 Hrs	Just Now	51.3612	-1.1642	100	95.21%	
0	Comet PG	Minimus	MIN-7657	30295	2.0-8282	(MIN-7657)	0.0.0.0	10.30.0.55	17 days 22 Hrs	Just Now	51.3612	-1.1642	100	63.17%	
00	Comet Murray Test	Minimus	MIN-6F55	28501	2.1-10	(MIN-6F55)	0.0.0.0	10.30.0.63	27 days 23 Hrs	Just Now	51.3609	-1.1641	100	0.00%	
	Comet PiotrP-Office1	Minimus	MIN-4156	16726	2.0-8207	(MIN-4156)	0000	10 30 0 82	329 days 1 Hrs	Just Now	51 3614	-1 1642	100	16.84%	

To add a cloud registry endpoint, please click on an "Add" button in the "Cloud registry" section and provide endpoint hostname or IP address. Please note that hostnames will get automatically translated to IP address and stored as IPv4 address.



Status	Label		Application configuration - Discovery	-	D X	ess	LAN Address	Uptime	Last Contact	Latitude	Longitude	Timing quality	Free storage	
tive	Comet Platinum	NAM2	General				10.30.0.9	178 days 3 Hrs		0.0000	0.0000	0		
ctive	Platinum	NAM	Cloud registry group identifier my_group_id123				169.254.36.116	5 933 days 2 Hrs	Just Now	0.0000	0.0000	0		
tive	Comet Platinum	EAM	Show unknown type system in application main device list				10.30.0.24	178 days 3 Hrs	Just Now	0.0000	0.0000	0		
tive	Cornet Platinum	EAM	Cloud registry				10.30.0.42	178 days 0 Hrs	Just Now	0.0000	0.0000	0		
ctive	Comet Platinum	EAM	Cloud end point address: 10.30.0.37		Delete		10.30.0.27	178 days 3 Hrs	Just Now	0.0000	0.0000	0		
00	Comet PG-V2-TEST	Minimus	Cloud end point address: 54.202.170.99		Delete		10.30.0.43	20 days 22 Hrs	Just Now	51.3611	-1.1641	100	0.00%	
906	Comet Shawn 3T Vertical Testing	Minimus	Add				10.30.0.28	27 days 23 Hrs	Just Now	51.3611	-1.1641	100	0.00%	
906	Comet Orac	Minimus	Cloud query interval: 10 seconds		~		10.30.0.98	13 days 7 Hrs	Just Now	51.3612	-1.1640	100		
906	Cornet 3T reference COMET5	Minimus	Earthquake early warning				10.30.0.36	45 days 22 Hrs	Just Now	51.3612	-1.1640	100	67.12%	
00	Cornet NO LABEL	Minimus	Highlight triggering station				10.30.0.90	17 days 22 Hrs	Just Now	-59.9000	85.5410	0	75.06%	
00	Comet NO LABEL	Minimus	Automatically clear the trigger on station information update Use sound notifications				10.30.0.5	21 days 3 Hrs	Just Now	51.3612	-1.1642	100	95.21%	
00	Comet PG	Minimus					10.30.0.55	17 days 22 Hrs	Just Now	51.3612	-1.1642	100	63.17%	
• •	Comet Murray Test	Minimus	Restore defaults C	ancel	Apply		10.30.0.63	27 days 23 Hrs	Just Now	51.3609	-1.1642	100	0.00%	
	Comet PiotrP-Office1	Minimus	MIN-4156 16726 2.0-8207 (MIN-415	56)	0.0.0.0		10 30 0.82	370 days 1 Hrs	Just Now	51 3614	-1 1647	100	16.84%	

When all of the Data Centre instances are added to the list, click on the "Apply" button to confirm the changes.

It is important to set the "Cloud registry group identifier" field to reflect the configuration of the Data Centre Monitor and the Güralp seismic stations (e.g. Minimus or Fortimus). Misconfiguring this setting will cause the list of active devices to be blank in the "Registry" mode of the Discovery application.

To reduce the amount of network traffic, the frequency of state of health information packet requests from the Cloud server can be configured by changing the "Cloud query interval" setting.

Operation

IRIS ringserver

IRIS ringserver service status is displayed in State of Health dashboard of the Data Centre instance and should be regularly monitored to assure correct operation of the software. The State of Health dashboard is available under right-click menu of the Data Centre row in the Discovery desktop application.

tus	Label	System	Name	Serial#	Firmware Ver	WAN Address	LAN Address	Netmask	Uptime	Latitude	Longitude	Altitude	Free storage	Network latency	Data latency
D 🔳 Cor	met FEM_TEST_JIG	Aquarius	AQU-145A	5210	2.1-10023	10.30.0.18	10.30.0.18	255.255.0.0	00:00:24	0.0000	0.0000	-12.34		n/a	n/a
Cor	met Test Rack	Fortimus	FMUS-585A	22618	2.1-11215	10.30.0.68	10.30.0.68	255.255.0.0	26 days 22 Hrs	51.3612	-1.1643	125.00	70.99%	n/a	n/a
Cor	met R&D	Fortimus	FMUS-9059	36953	2.1-11311	10.30.0.20	10.30.0.20	255.255.0.0	4 days 0 Hrs	51.3614	-1.1639	-12.34	98.68%	n/a	n/a
Cor	met Five-character serial number	Minimus	MIN-12345	74565	2.1-11547	10.30.0.11	10.30.0.11	255.255.0.0	6 days 23 Hrs	51.3612	-1.1640	114.20	97.73%	3.90s	4.53s
Cor	met NO LABEL	Minimus	MIN-7957	31063	2.1-11312	10.30.0.49	10.30.0.49	255.255.0.0	00:36:21	51.3615	-1.1640	-12.34	99.85%	n/a	n/a
Cor	met NO LABEL	Minimus	MIN-9355	37717	2.0-8282	10.30.0.90	10.30.0.90	255.255.0.0	10 days 23 Hrs	-59.9000	85.5410	-12.34	4.87%	n/a	n/a
Cor	met Orac	Minimus	MIN-CC57	52311	2.1-1679	10.30.0.38	10.30.0.38	255.255.0.0	00:00:46	51.3612	-1.1640	-12.34	99.23%	n/a	n/a
Cor	met deck@aqu-deck-dev.guralp.local	Discovery	aqu-deck-dev	4C5262264CEC	1.1-263	10.30.0.108	10.30.0.108	255.255.0.0	6 days 0 Hrs	51.3611	-1.1639	0.00	97.94%	n/a	n/a
		Data Centre alp 10.30.0.37	ouralo	D850E6BE7E96	0.3-1	10.30.0.37	10.30.0.37	255.255.0.0	02:51:00	0.0000	0.0000	0.00	67.46%	3.90s	4.47s
	State o Config	of health dashb uration	poard												
ocally P	egistry Cloud server configuration														

Bottom left part of the dashboard provides information about the state of services required for correct data centre operation. If for any reason service displayed as "iris-ringserver.service" is not listed as "active", please log in to the Data Centre computer and investigate using systemctl tools. If problem persists, please contact Güralp support.

güralp

Mmmm



slinktool

Slinktool service is controlled by the Data Centre controller service and does not require operational maintenance. In a rare case when the reported latency seems not to be correct, it is recommended to login to the Data Centre computer and check the relevant slinktool service status using systemctl command.

slink2dali

Slink2dali service is controlled by the Data Centre controller service and does not require operational maintenance. In a rare case when the data is not received on the client side, it is recommended to login to the Data Centre computer and check the relevant slink2dali service status using systemctl command.

Slinktool and slink2dali services can be remotely restarted by removing and re-adding the seismic station to the list of connections in the Data Centre configuration widget.

Güralp Data Centre controller service

Güralp Data Centre controller service does not require regular maintenance. If the service is not responding or configuration exchange between the Discovery desktop application and the Data Centre is not working, please ssh log in to the Data Centre computer and check the status of guralp-controller service:

systemctl status guralp-controller.service

If status returned is different from active:

```
guralp-controller.service - Güralp data centre controller
Loaded: loaded (/usr/lib/systemd/system/guralp-controller.service; enabled; vendor preset:
disabled)
Active: active (running) since Tue 2021-07-20 09:58:27 BST; 6min ago
Main PID: 1660 (guralp-controll)
Tasks: 1 (limit: 48584)
Memory: 12.2M
CGroup: /system.slice/guralp-controller.service
1660 /usr/libexec/guralp-controller -exec
```

Jul 20 09:58:27 guralp systemd[1]: Started Güralp data centre controller.



Jul 20 09:58:30 guralp guralp-controller[1660]: Service initialised Jul 20 09:58:30 guralp guralp-controller[1660]: Listening on port 11788

Restart the service using systemctl command:

systemctl restart guralp-controller.service

If problem persists, please contact Güralp Systems support team at support@guralp.com.

Güralp Data Centre monitor service

Güralp Data Centre monitor service sends periodic state of health information packet to all configured Responder servers and performs latency monitoring. If the Data Centre row in the Discovery desktop application is listed as non-responding it means that the application did not receive state of health information from the Data Centre for more than 90 seconds what may indicate that either the server is down, or the Data Centre monitor is not working, or Güralp responder service stopped working, or there is no connection between the Discovery application and the server. In such situation, please try to ssh log in to the server, and if successful check the status of the Data Centre service by running systemctl command:

systemctl status guralp-monitor.service

The service should be in active state:

```
guralp-monitor.service - Güralp data centre monitor
Loaded: loaded (/usr/lib/systemd/system/guralp-monitor.service; enabled; vendor preset:
disabled)
Active: active (running) since Tue 2021-07-20 09:58:27 BST; 20min ago
Main PID: 1659 (guralp-monitor)
Tasks: 4 (limit: 48584)
Memory: 21.2M
CGroup: /system.slice/guralp-monitor.service
1659 /usr/libexec/guralp-monitor -exec
```

Jul 20 09:58:27 guralp systemd[1]: Started Güralp data centre monitor.

If the service is not in an active state, please try to restart the service using systemctl command:

systemctl restart guralp-monitor.service

If problem persists, please contact Güralp Systems support team at support@guralp.com.

Güralp Data Centre monitor service periodically monitors the slinktool log files in order to gather accurate latency information and feed it to the Güralp responder service for further processing. The highest latency number detected in the configured latency monitoring window is set as Data Centre latency figure and is displayed in the Discovery desktop application. The service records all of the latency data information in a csv and log files stored under home directory of the "slinklat" operating system user, set by default to /var/cache/guralp/latency. Default configuration keeps the recorded data files for 10 days and older files are getting deleted through tmpfiles.d mechanism.

Güralp responder service

Güralp responder service is responsible for collecting and distributing state of health information from Güralp devices. Potential problems caused by malfunction in the service operation will cause the Discovery desktop application to display incorrect state of health information or the list of devices in the application main windows will be empty under the "Registry" mode. If the responder service is malfunctioning, please ssh log in to the Data Centre computer and verify the state of the service by executing the following systemctl command:

systemctl status guralp-responder.service



Service should be in active state:

```
guralp-responder.service - Güralp responder (a.k.a. Güralp registry server)
Loaded: loaded (/usr/lib/system/system/guralp-responder.service; enabled; vendor preset:
disabled)
Active: active (running) since Tue 2021-07-20 11:06:17 BST; 7min ago
Main PID: 1639 (guralp-responde)
Tasks: 5 (limit: 48584)
Memory: 500.0K
CGroup: /system.slice/guralp-responder.service
1639 /usr/libexec/guralp-responder -d
Jul 20 11:06:17 guralp guralp-responder[1639]: Discovery Server version 0.80-0091
Jul 20 11:06:17 guralp guralp-responder[1639]: Devices expire after one day
Jul 20 11:06:17 guralp guralp-responder[1639]: Opening pinger UDP listener, port 11788
Jul 20 11:06:17 guralp guralp-responder[1639]: Socket 4
```

If the service is not in an active state, please try to restart the service using systemctl command:


systemctl restart guralp-responder.service

If problem persists, please contact Güralp Systems support team at support@guralp.com.

Güralp Discovery application

Güralp Discovery is a standalone application dedicated to run in a desktop environment with Windows, Linux or Mac operating system. The application provides multiple functionalities for controlling, diagnosing and monitoring Güralp Systems devices and software products. For the Data Centre acquisition software solution, Discovery is used for configuration and monitoring the Data Centre server state of health.

State of Health

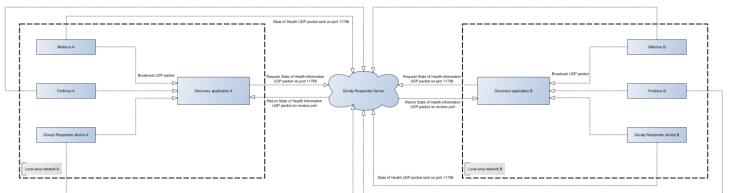

The graph above shows the state of health packet circulation in an environment with 2 local area networks and 1 Güralp responder server instance. The Data Centre software package includes Güralp responder service and the Data Centre acts as a server.

State of health information can be delivered to the Discovery application in 2 ways:

- In a local network, state of health information can be broadcasted by UDP packet sent on port 11788, Discovery is listening to the valid broadcast packets and lists the device in the applications main window table under "local" mode.
- State of health information can be sent directly to Güralp responder server where it is collected and distributed to the Discovery upon request. In "Registry" mode the application is querying the responder periodically for the latest information.



The Data Centre state of health can be monitored in the real time either in the Discovery desktop application main window by checking the status indication icons, and/or by accessing the dedicated Data Centre state of health widget.

MMMMM

Status	Label	System	Name	Serial#	Firmware Ver	WAN Address	LAN Address	Netmask	Uptime	Latitude	Longitude	Altitude	Free storage	Network latency	Data latency
0	Comet FEM_TEST_JIG	Aquarius	AQU-145A	5210	2.1-10023	10.30.0.18	10.30.0.18	255.255.0.0	00:00:24	0.0000	0.0000	-12.34		n/a	n/a
0	Cornet Test Rack	Fortimus	FMUS-585A	22618	2.1-11215	10.30.0.68	10.30.0.68	255.255.0.0	26 days 22 Hrs	51.3612	-1.1643	115.80	70.99%	n/a	n/a
	Comet R&D	Fortimus	FMUS-9059	36953	2.1-11311	10.30.0.20	10.30.0.20	255.255.0.0	4 days 0 Hrs	51.3614	-1.1639	-12.34	98.68%	n/a	n/a
00	Comet Five-character serial number	Minimus	MIN-12345	74565	2.1-11547	10.30.0.11	10.30.0.11	255.255.0.0	6 days 23 Hrs	51.3612	-1.1640	113.50	97.73%	3.90s	4.50s
	Comet NO LABEL	Minimus	MIN-7957	31063	2.1-11312	10.30.0.49	10.30.0.49	255.255.0.0	00:35:51	51.3615	-1.1640	-12.34	99.85%	n/a	n/a
0	Comet NO LABEL	Minimus	MIN-9355	37717	2.0-8282	10.30.0.90	10.30.0.90	255.255.0.0	10 days 23 Hrs	-59.9000	85.5410	-12.34	4.87%	n/a	n/a
	Cornet Orac	Minimus	MIN-CC57	52311	2.1-1679	10.30.0.38	10.30.0.38	255.255.0.0	00:00:46	51.3612	-1.1640	-12.34	99.23%	n/a	n/a
	Comet deck@aqu-deck-dev.guralp.local	Discovery	aqu-deck-dev	4C5262264CEC	1.1-263	10.30.0.108	10.30.0.108	255.255.0.0	6 days 0 Hrs	51.3611	-1.1639	0.00	97.94%	n/a	n/a
2 =	Comet DATC@guralp.guralp.local	Data Centre	guralp	D850E6BE7E96	0.3-1	10.30.0.37				0.0000					

First status icon indicates the active state of the Data Centre. Active state traffic light colour scheme indicates the following:

- Green background state of health information was received in last 30 seconds.
- Amber background system is booting.
- Red background state of health information was not received for more than 90 seconds.

Status	Label	System	Name	Serial#	Firmware Ver	WAN Address	LAN Address	Netmask	Uptime	Latitude	Longitude	Altitude	Free storage	Network latency	Data latency
	Comet FEM_TEST_JIG	Aquarlus	AQU-145A	5210	2.1-10023	10.30.0.18	10.30.0.18	255.255.0.0	00:00:24	0.0000	0.0000	-12.34		n/a	n/a
	Comet Test Rack	Fortimus	FMUS-585A	22618	2.1-11215	10.30.0.68	10.30.0.68	255.255.0.0	26 days 22 Hrs	51.3612	-1.1643	115.80	70.99%	n/a	n/a
0	Comet R&D	Fortimus	FMUS-9059	36953	2.1-11311	10.30.0.20	10.30.0.20	255.255.0.0	4 days 0 Hrs	51.3614	-1.1639	-12.34	98.68%	n/a	n/a
00	Comet Five-character serial number	Minimus	MIN-12345	74565	2.1-11547	10.30.0.11	10.30.0.11	255.255.0.0	6 days 23 Hrs	51.3612	-1.1640	113.50	97.73%	3.90s	4.50s
	Cornet NO LABEL	Minimus	MIN-7957	31063	2.1-11312	10.30.0.49	10.30.0.49	255.255.0.0	00:35:51	51.3615	-1.1640	-12.34	99.85%	n/a	n/a
0	Cornet NO LABEL	Minimus	MIN-9355	37717	2.0-8282	10.30.0.90	10.30.0.90	255.255.0.0	10 days 23 Hrs	-59.9000	85.5410	-12.34	4.87%	n/a	n/a
	Comet Orac	Minimus	MIN-CC57	52311	2.1-1679	10.30.0.38	10.30.0.38	255.255.0.0	00:00:46	51.3612	-1.1640	-12.34	99.23%	n/a	n/a
	Comet deck@aqu-deck-dev.guralp.local	Discovery	aqu-deck-dev	4C5262264CEC	1.1-263	10.30.0.108	10.30.0.108	255.255.0.0	6 days 0 Hrs	51.3611	-1.1639	0.00	97.94%	n/a	n/a
0 =	Comet DATC@guralp.guralp.local	Data Centre	quralp	D850E6BE7E96	0.3-1	10.30.0.37	10.30.0.37	255.255.0.0	02:50:30	0.0000	0.0000	0.00	67.46%	3.90s	4.50s

Second status icon indicates the latency status of the data coming in to the Data Centre. Data Centre monitors the latency of all channels received and satisfied by the latency channels monitoring filter and sends the highest latency in the state of health information packet. The latency status traffic light colour scheme indicates the following:

- Green background the highest latency value is below 1 second.
- Amber background the highest latency value is between 1 second and 1.5 second.
- Red background the highest latency value is above 1.5 second.




tatus	Label	System	Name	Serial#	Firmware Ver	WAN Address	LAN Address	Netmask	Uptime	Latitude	Longitude	Altitude	Free storage	Network latency	Data latency
0	Comet FEM_TEST_JIG	Aquarius	AQU-145A	5210	2.1-10023	10.30.0.18	10.30.0.18	255.255.0.0	00:00:24	0.0000	0.0000	-12.34		n/a	n/a
0	Comet Test Rack	Fortimus	FMUS-585A	22618	2.1-11215	10.30.0.68	10.30.0.68	255.255.0.0	26 days 22 Hrs	51.3612	-1.1643	115.80	70.99%	n/a	n/a
0	Comet R&D	Fortimus	FMUS-9059	36953	2.1-11311	10.30.0.20	10.30.0.20	255.255.0.0	4 days 0 Hrs	51.3614	-1.1639	-12.34	98.68%	n/a	n/a
0	Comet Five-character serial number	Minimus	MIN-12345	74565	2.1-11547	10.30.0.11	10.30.0.11	255.255.0.0	6 days 23 Hrs	51.3612	-1.1640	113.50	97.73%	3.90s	4.50s
0 🔳	Cornet NO LABEL	Minimus	MIN-7957	31063	2.1-11312	10.30.0.49	10.30.0.49	255.255.0.0	00:35:51	51.3615	-1.1640	-12.34	99.85%	n/a	n/a
0 f	Cornet NO LABEL	Minimus	MIN-9355	37717	2.0-8282	10.30.0.90	10.30.0.90	255.255.0.0	10 days 23 Hrs	-59.9000	85.5410	-12.34	4.87%	n/a	n/a
0	Comet Orac	Minimus	MIN-CC57	52311	2.1-1679	10.30.0.38	10.30.0.38	255.255.0.0	00:00:46	51.3612	-1.1640	-12.34	99.23%	n/a	n/a
0 =	Comet deck@aqu-deck-dev.guralp.local	Discovery	aqu-deck-dev	4C5262264CEC	1.1-263	10.30.0.108	10.30.0.108	255.255.0.0	6 days 0 Hrs	51.3611	-1.1639	0.00	97.94%	n/a	n/a
0 =	Comet DATC@guralp.guralp.local	Data Centre	quralp	D850E6BE7E96	0.3-1	10.30.0.37	10.30.0.37	255.255.0.0		0.0000	0.0000				

MMMMM

The last, third status icon shows the Data Centre storage status. The traffic light colour scheme for the Data Centre storage indicates the following:

- Green background more than 50% of disk space is free.
- Amber background between 20% and 50% of disk space is free.
- Red background less than 20% of disk space is free.

More descriptive tooltip is provided when hovering over the status icons of a given device:

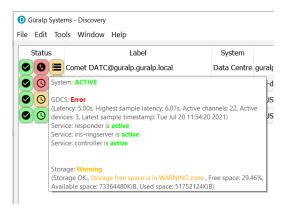


Data Centre state of health dashboard widget can be accessed through right-click menu of selected instance:

atus	Label	System	Name	Serial#	Firmware Ver	WAN Address	LAN Address	Netmask	Uptime	Latitude	Longitude	Altitude	Free storage	Network latency	Data latency
3) 🗖	Comet FEM_TEST_JIG	Aquarius	AQU-145A	5210	2.1-10023	10.30.0.18	10.30.0.18	255.255.0.0	00:00:24	0.0000	0.0000	-12.34		n/a	n/a
3	Comet Test Rack	Fortimus	FMUS-585A	22618	2.1-11215	10.30.0.68	10.30.0.68	255.255.0.0	26 days 22 Hrs	51.3612	-1.1643	125.00	70.99%	n/a	n/a
0	Comet R&D	Fortimus	FMUS-9059	36953	2.1-11311	10.30.0.20	10.30.0.20	255.255.0.0	4 days 0 Hrs	51.3614	-1.1639	-12.34	98.68%	n/a	n/a
0	Comet Five-character serial number	Minimus	MIN-12345	74565	2.1-11547	10.30.0.11	10.30.0.11	255.255.0.0	6 days 23 Hrs	51.3612	-1.1640	114.20	97.73%	3.90s	4.53s
0	Comet NO LABEL	Minimus	MIN-7957	31063	2.1-11312	10.30.0.49	10.30.0.49	255.255.0.0	00:36:21	51.3615	-1.1640	-12.34	99.85%	n/a	n/a
0	Comet NO LABEL	Minimus	MIN-9355	37717	2.0-8282	10.30.0.90	10.30.0.90	255.255.0.0	10 days 23 Hrs	-59.9000	85.5410	-12.34	4.87%	n/a	n/a
	Comet Orac	Minimus	MIN-CC57	52311	2.1-1679	10.30.0.38	10.30.0.38	255.255.0.0	00:00:46	51.3612	-1.1640	-12.34	99.23%	n/a	n/a
0=	Comet deck@aqu-deck-dev.guralp.local	Discovery	aqu-deck-dev	4C5262264CEC	1.1-263	10.30.0.108	10.30.0.108	255.255.0.0	6 days 0 Hrs	51.3611	-1.1639	0.00	97.94%	n/a	n/a
0=	gur	Data Contro alp 10.30.0.37 of health dashb uration		D850E6BE7E96	0.3-1	10.30.0.37	10.30.0.37	255.255.0.0	02:51:00	0.0000	0.0000	0.00	67.46%	3.90s	4.47s


The state of health dashboard widget is divided into 4 main parts:



- Top-left widget is a latency graph displaying the highest historical latency value for up to last 30 minutes.

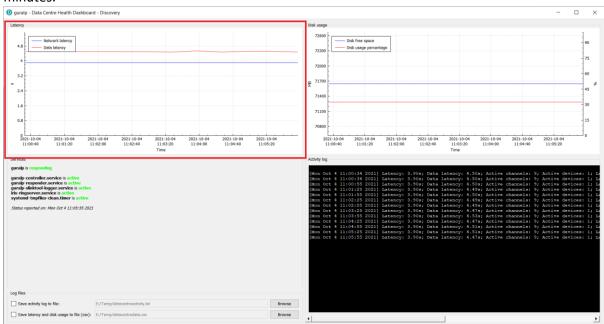


Top-right widget is a disk usage graph displaying the disk free space in MB (blue graph, left y axis) and disk used space percentage (red graph, right y axis)

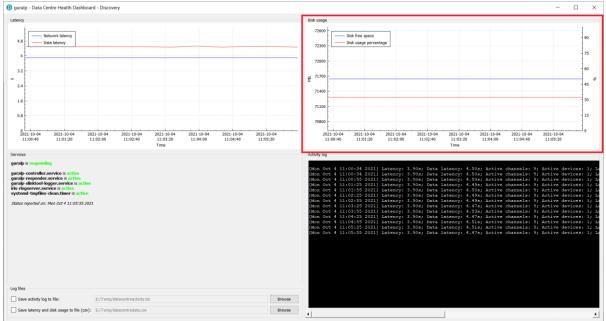


- Bottom-left widget displays the state of services running on the Data Centre and allows to configure the logfile and output data file for activity log and latency/disk usage data



respectively

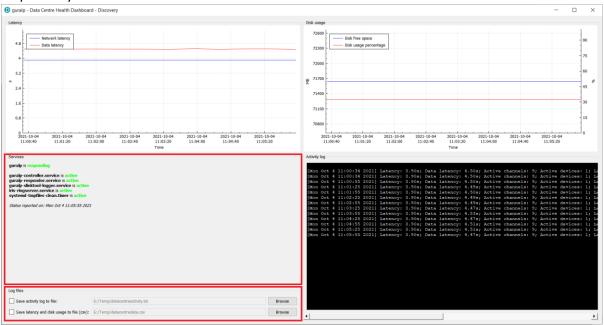

- Bottom-right widget displays the activity log based on state of health information packets received

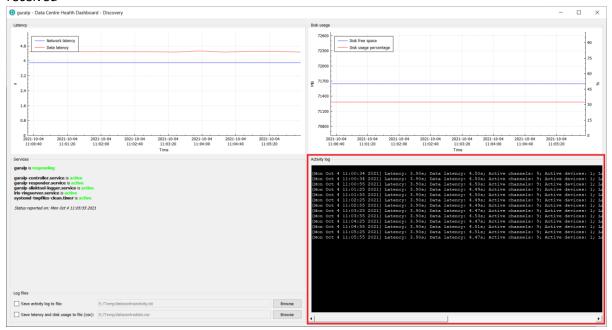

Log line contains the following information:

- o Timestamp
- o Latency value
- o Sample latency value
- Number of active channels
- Number of active devices
- o Latest sample timestamp
- Available disk space in KB
- o Disk used space in KB
- Percentage value of free disk space



And is logged as single line in the following format:

{[Timestamp]} Latency: {Latency value}s; Sample latency: {Sample latency value}s; Active channels: {Number of active channels}; Active devices: {Number of active devices}; Latest sample timestamp: {Latest sample timestamp}; Disk available: {Available disk space in KB}; Disk used: {Disk used space in KB}; Disk free: {Percentage value of free disk space}%;

Example:

[Fri Jul 9 13:50:34 2021] Latency: 1.50s; Sample latency: 1.81s; Active channels: 26; Active devices: 2; Latest sample timestamp: Fri Jul 9 13:49:43 2021; Disk available: 73364480; Disk used: 54698232; Disk free: 25.44%;

Configuration

Under normal operation tweaks to the health monitor configuration, list of connected devices or Güralp responder server connections might be required. For connecting or disconnecting from the stations please refer to <u>Configuration/Slink2dali</u> section of this document, and for modification of the Discovery desktop application responder server connection please refer to <u>Configuration/Güralp</u> <u>Discovery application</u> section.

Güralp Discovery application provides a configuration widget for the Data Centre accessible through right-click menu in the application main window.

itus	Label	System	Name	Serial#	Firmware Ver	WAN Address	LAN Address	Netmask	Uptime	Latitude	Longitude	Altitude	Free storage	Network latency	Data latency
Cornet	FEM_TEST_JIG	Aquarius	AQU-145A	5210	2.1-10023	10.30.0.18	10.30.0.18	255.255.0.0	00:00:24	0.0000	0.0000	-12.34		n/a	n/a
Comet	Test Rack	Fortimus	FMUS-585A	22618	2.1-11215	10.30.0.68	10.30.0.68	255.255.0.0	26 days 22 Hrs	51.3612	-1.1643	125.00	70.99%	n/a	n/a
Cornet	R&D	Fortimus	FMUS-9059	36953	2.1-11311	10.30.0.20	10.30.0.20	255.255.0.0	4 days 0 Hrs	51.3614	-1.1639	-12.34	98.68%	n/a	n/a
Comet	Five-character serial number	Minimus	MIN-12345	74565	2.1-11547	10.30.0.11	10.30.0.11	255.255.0.0	6 days 23 Hrs	51.3612	-1.1640	114.20	97.73%	3.90s	4.53s
Comet	NO LABEL	Minimus	MIN-7957	31063	2.1-11312	10.30.0.49	10.30.0.49	255.255.0.0	00:36:21	51.3615	-1.1640	-12.34	99.85%	n/a	n/a
Comet	NO LABEL	Minimus	MIN-9355	37717	2.0-8282	10.30.0.90	10.30.0.90	255.255.0.0	10 days 23 Hrs	-59.9000	85.5410	-12.34	4.87%	n/a	n/a
Cornet	Orac	Minimus	MIN-CC57	52311	2.1-1679	10.30.0.38	10.30.0.38	255.255.0.0	00:00:46	51.3612	-1.1640	-12.34	99.23%	n/a	n/a
Cornet	deck@aqu-deck-dev.guralp.local	Discovery	aqu-deck-dev	4C5262264CEC	1.1-263	10.30.0.108	10.30.0.108	255.255.0.0	6 days 0 Hrs	51.3611	-1.1639	0.00	97.94%	n/a	n/a
🕽 🔳 Comet		Data Centre alp 10.30.0.37	ouralo	D850E6BE7E96	0.3-1	10.30.0.37	10.30.0.37	255.255.0.0	02:51:00	0.0000	0.0000	0.00	67.46%	3.90s	4.47s
	State o Config	of health dashb uration	board												

The configuration widget is split in 3 parts:

- General settings, providing a set of text edit fields for Güralp Data Centre monitor:
 - Registry group identifier Group identifier used for registration to the Güralp responder server.
 - Monitoring period for latency channels Period of time in seconds that should be used for detecting the highest channel latency value.
 - Monitoring period for active channels Period of time in seconds that should be used for detecting the number of active channels.
 - Monitoring period for active devices Period of time in seconds that should be used for detecting the number of active devices.
 - Filter for active channels monitoring A SEED globing pattern defining the channels that are monitored for being active. Accepts a space (' ') separated list.
 - Filter for channels latency monitoring A SEED globing pattern defining the channels that are monitored for latency calculation. Accepts a space (' ') separated list.
 - Storage information base location Location that should be used for disk space information gathering. Leave blank for default (the service working directory).



× D oregon - Data Centre Configuration - Discovery stry group identifier: guralp3 ing period for latency channels: 30 ing period for active channels: 60 Monitoring period for active devices: 120 Filter for active channels monitoring: 77.77777.777 Filter for channels latency monitoring: 27.7777.0N.777 ge information base location Registry 127.0.0.1 Remove Add server Station subscription list DG.06855 (81.149.31.241:18000) ??.??? Remove Add station from discovered Add station manually Cancel Apply Restore

 Registry servers, containing a list of Güralp responder server addresses that the Data Centre should notify its state of health to. At least one entry connecting to local loopback address (local instance of the responder service) should be configured. Additional servers can be added for redundancy and access extension by clicking on "Add server" button and providing the connection details.

General settings giralp3 Registry group identifier: giralp3 Montaring period for active dynamisis: 30 Montaring period for active dawnesis: 66 Montaring period for active devices: 130 Pitter for active dawnesis: 100 Fitter for channels latency monitoring: 727727.727 Storage information base location Registry servers 127.0.0.1			
Montoring period for latency channels: 30 Montoring period for active channels: 60 Montoring period for active devices: 120 Filter for active channels monitoring: 72.72727.27.772 Filter for channels latency monitoring: 72.72727.01.772 Storage information base location Registry servers			
Monitoring period for active channels: 60 Monitoring period for active devices: 120 Filter for active channels monitoring: 27.27272.77.772 Filter for channels latency monitoring: 27.27272.01.727 Storage information base location Registry servers			
Monitoring period for active devices: 120 Filter for active channels monitoring: 27,7777,77,777 Filter for channels latency monitoring: 27,7777,01,777 Storage information base location Registry servers			
Filter for other ehannels monitoring: ????????????????????????????????????			
Filter for channels latency monitoring: ???????.014.??? Storage information base location			
Storage information base location			
Registry servers			
Station subscription list			
DG.06855 (81.149.31.241:18000) ??.???			Remove
Add s	station from discovered	Add sta	ition mani

- Station subscription list, defining a list of all of the stations and channels that the Data Centre should connect to as described in <u>Configuration/slink2dali</u> section.

) oregon - Data Centre Configura	tion - Discovery		-)
Seneral settings					
Registry group identifier:	guralp3				
Aonitoring period for latency channels:	30				
fonitoring period for active channels:	60				
fonitoring period for active devices:	120				
ilter for active channels monitoring:	??.?????.???				
ilter for channels latency monitoring:	??.????.ON.???				
Storage information base location					
Registry servers					
127.0.0.1				Re	move
				Add	server
itation subscription list					
G.06B55 (81.149.31.241:18000) ??.?	22			De	move
0.00855 (81.149.51.241.18000)	"			Rei	nove
		Add station from di		dd station i	



Mmmm

Support

For support enquiries, please contact support@guralp.com.

 \sim

Güralp Systems Limited Midas House, Calleva Park, Aldermaston, Reading, RG7 8EA, United Kingdom

Tel: +44 118 981 9056 Fax: +44 118 981 9943

E-mail: sales@guralp.com

Version

Version	Date	Author	Comment
1	2021/08/03	P Grabalski	Initial upload
2	2021/08/04	P Grabalski	Spelling corrections
3	2021/08/24	P Grabalski	Update of "Configuration/Güralp responder service" section to show latest configuration file content (pipe file configuration line added)
4	2021/10/04	P Grabalski	Screenshots update to reflect widgets from Discovery version 1.1-267
5	2021/11/01	P Grabalski	Screenshots update to contain default data centre group ID "guralp3". Security sub-section added to operating system section to explain the networking requirements.