

# Güralp Minimus2



including Güralp Discovery software and the GÜVÜ app

## ***Technical Manual***

*Document Number: MAN-MIN-0002*

*Issue B 18/10/2024 10:19:06*

---

# Table of Contents

## Contents

---

<b>1</b>	<b>Preliminary Notes .....</b>	<b>7</b>
1.1	Proprietary Notice .....	7
1.2	Cautions and Notes .....	7
1.3	Manuals and Software .....	7
1.4	Conventions.....	7
1.5	System Overview.....	8
1.6	Key features.....	8
1.7	Typical applications.....	8
<b>2</b>	<b>System description .....</b>	<b>9</b>
2.1	Güralp Minimus2 digitiser .....	9
2.1.1	LED indicator.....	9
2.1.2	Bluetooth connectivity .....	9
2.1.3	Data storage.....	10
2.1.4	Web interface .....	11

---

2.2	Accessory package.....	12
2.2.1	Ethernet cable .....	12
2.2.2	Compact GNSS receiver and cable .....	12
2.2.3	Power cable .....	12
2.2.4	Diagnostic GNSS to Serial cable adapter .....	13
2.3	Güralp Discovery software.....	14
2.4	Güralp GüVü Android app.....	15
2.5	System set-up.....	16
2.6	Güralp Discovery software installation.....	16
2.7	Viewing waveforms and system state-of-health.....	18
2.7.1	Using Discovery’s “Live View” window .....	18
2.7.2	Using Scream!.....	21
2.8	Web Page login .....	23
2.9	System status .....	23
2.10	Data streams .....	24
2.10.1	Low Bandwidth Considerations .....	25
2.11	Station meta-data .....	25
2.12	Network configuration .....	26
2.12.1	IP address and gateway.....	26
2.12.2	NTP (Network Timing Protocol) configuration .....	26
2.13	GDI push (auto-connection).....	27
2.14	Data storage .....	27
2.15	Storage .....	29
2.15.1	Recording status .....	29
2.15.2	MicroSD card data flushing and unmounting.....	30
2.15.3	Downloading recorded data .....	30
2.15.4	Downloading data for specific time-intervals .....	31
2.15.5	Bulk data extraction.....	32
2.15.6	The contents of the microSD card.....	32
2.15.7	Time based download via Network.....	35
2.15.8	Request data from microSD card via Network .....	35
2.16	Data transmission .....	35
2.16.1	Scream! (GCF format + Scream protocol).....	36
2.16.2	GDI-link protocol .....	37
2.16.3	SeedLink Protocol .....	37
2.17	Synchronisation of the sample-clock .....	40
2.17.1	GNSS lock status .....	41
2.17.2	PTP (Precision Time Protocol) .....	41
2.18	Configuration and control of connected analogue instruments .....	42

2.18.1	Setting instrument type .....	42
2.18.2	Setting instrument (sensor) gain for Güralp Fortis.....	42
2.18.3	Setting digitiser gain.....	42
2.18.4	Mass control.....	43
2.18.5	Instrument response parameters .....	43
2.19	Configuration and control of connected digital instruments .....	47
1.1.1	Inject a calibration signal.....	47
2.20	Earthquake Early Warning .....	48
2.20.1	Trigger Configuration.....	48
2.20.2	EEW Configuration.....	49
2.20.3	CAP receiver .....	49
2.20.4	STA/LTA Streams .....	51
2.20.5	Seismic Event Table.....	51
2.21	Using a Registry .....	52
2.21.1	Configuring a Minimus2 for use with a registry.....	52
2.21.2	Configuring Discovery for use with a registry .....	53
2.21.3	Registry mode: using WAN or LAN addresses.....	54
2.22	Updating Minimus2 Firmware .....	55
2.23	Import / Export an existing configuration.....	56
2.24	Scripting.....	56
2.25	Enabling.....	56
2.26	Sending a script file .....	57
2.27	Commands within the script file .....	58
2.28	Example to instigate calibration .....	58
2.29	Status of the script running process.....	59
2.30	Example futrcmds.txt file.....	59
2.31	GüVü app .....	60
2.32	Getting started .....	60
2.33	Selecting data sources .....	61
2.34	View settings.....	61
2.35	Instrument control .....	61
2.35.1	Setting the PIN code .....	62
2.36	Emailing a deployment report.....	62
2.37	Using Guralp's Power Pack Module .....	64

---

### **3 Advanced troubleshooting .....65**

3.1	Reset all settings during boot phase.....	66
-----	---	----

---

<b>4</b>	<b>Appendix 1 – Instrument/channel names .....</b>	<b>67</b>
<b>5</b>	<b>Appendix 2 - Digital interconnectivity and devices .....</b>	<b>68</b>
<b>6</b>	<b>Appendix 3 – network ports.....</b>	<b>69</b>
<b>7</b>	<b>Appendix 4 – Connector pin-outs .....</b>	<b>70</b>
7.1	Ethernet .....	70
7.2	Power .....	70
7.3	GNSS/serial.....	72
7.4	Digital.....	72
7.5	Analogue 1 and Analogue 2.....	73

---

<b>8</b>	<b>Appendix 5 – Dimensions and drawings .....</b>	<b>75</b>
<b>9</b>	<b>Appendix 6 – Güralp Discovery installation.....</b>	<b>76</b>
9.1	Installation in Linux .....	76
9.2	Installation in Mac.....	77
9.3	Installation in Windows .....	78
9.4	Configuring Windows Firewall .....	80
9.5	Update .....	82

---

<b>10</b>	<b>Appendix 6 – IP address configuration on PC or Laptop.....</b>	<b>85</b>
10.1	On Linux .....	85
10.2	On macOS.....	85
10.3	On Windows .....	87
10.4	EU Declaration of Conformity .....	88



# Preliminary Notes

## 1. Proprietary Notice

The information in this document is proprietary to Güralp Systems Limited and may be copied or distributed for educational and academic purposes but may not be used commercially without permission.

Whilst every effort is made to ensure the accuracy, completeness and usefulness of the information in the document, neither Güralp Systems Limited nor any employee assumes responsibility or is liable for any incidental or consequential damages resulting from the use of this document.

## 2. Cautions and Notes

Cautions and notes are displayed and defined as follows:

**Caution:** A yellow triangle indicates a chance of damage to or failure of the equipment if the caution is not heeded.

**Note:** A blue circle indicates a procedural or advisory note.

## 3. Manuals and Software

All manuals and software referred to in this document are available from the Güralp Systems website: [www.guralp.com](http://www.guralp.com) unless otherwise stated.

## 4. Conventions

Throughout this manual, examples are given of command-line interactions. In these examples, a fixed-width typeface will be used:

`Example of the fixed-width typeface used.`

Commands that you are required to type will be shown in bold:

**Example of the fixed-width, bold typeface.**

Where data that you type may vary depending on your individual configuration, such as parameters to commands, these data are additionally shown in italics:

*Example of the fixed-width, bold, italic typeface.*

Putting these together into a single example:

System prompt: **user input with variable parameters**

---

## 5. System Overview

Thank-you for purchasing a Güralp Minimus<sub>2</sub> digitiser.

This section describes the key components of a Minimus<sub>2</sub> system. The Minimus<sub>2</sub> unit is the main, standard product in the system; other components and accessories are optional and can be purchased separately. Please check your order confirmation to see which components were purchased with your system.

The Minimus<sub>2</sub> has four fully-featured analogue input channels.

---

## 6. Key features

- 24-bit, four-channel digitiser with nominal 2.44  $\mu\text{V}/\text{count}$  sensitivity.
  - Compact form, measuring just 134 × 99 × 45 mm and weighing just 0.6 kg.
  - Compatible with all analogue seismic sensors with a voltage output.
  - Simultaneously accommodates one triaxial sensor(s), one infra-sound sensor(s).
  - Supports automatic Identification of IP addresses via Güralp Discovery software and a cloud-based or organisational registry server.
  - Remote instrument and data management via Discovery.
  - Bluetooth Android app for installation integrity checking.
  - Low-latency mode for Earthquake Early Warning (< 40 ms).
  - Hot-swappable data storage with dual redundant microSD cards.
  - GNSS time-synchronisation, compatible with Navstar (GPS), GLONASS, Galileo and BeiDou constellations.
- 

## 7. Typical applications

- Earthquake Early Warning systems.
- Volcanology.
- Multi-scale seismic networks.
- Structural health monitoring.
- Hydrocarbon exploration.
- Permanent reservoir monitoring.
- Induced seismicity detection.
- Explosion monitoring.



# System description

## 1. Güralp Minimus<sub>2</sub> digitiser

The Güralp Minimus<sub>2</sub> is a combined digitiser and advanced communications unit. The Minimus<sub>2</sub> acquires data from – and allows direct control (where appropriate) of – connected analogue instruments (*e.g.* Güralp Fortis, 3-series, 5-series, 40T and 6T sensors) and digital instruments (*e.g.* the Güralp Certis).


When used with newer version of Güralp 3T instruments and the Certis Instrument, the digital serial connection available on the 26-way instrument connector is used to convey additional state of health information as well as calibration and response information.

## 1. LED indicator

The Minimus<sub>2</sub> has an LED indicator on the upper surface, which provides status and configuration information.

-   
**White:** This occurs from power-up until software starts

- 

-   
Three flashes followed by a pause, then repeat.

- Each flash is either Red or Green
- First Flash – Internal SD card good and recordings (Green)
- Second Flash – External Removable SD card is good and recording (Green)
- Third Flash - GPS Time lock is good (Green)

-   
**1 blue flash:** a trigger event has been detected.

## 2. Bluetooth connectivity

The Minimus<sub>2</sub> features Bluetooth connectivity, allowing sensor and state-of-health data to be monitored using the Güralp GüVü app (see section 4 on page 1515) on an Android mobile phone or tablet.

The Bluetooth can be disabled via software to save processor usage but the hardware module cannot be switched off. BLE (Bluetooth Low Energy) technology is used to

minimise the power requirement. The Bluetooth transmitter/receiver is in permanent standby mode and always ready to receive a connection from a phone or tablet.

See Chapter 35 on page 6161 for further details on connecting to the Minimus<sub>2</sub> and its attached sensors using a phone or tablet.

---

### 3. Data storage

The Minimus<sub>2</sub> uses microSD (non-volatile) memory technology to store seismic data locally. The Minimus<sub>2</sub> features two such microSD cards in order to provide redundancy; this helps to protect the recorded data in the unlikely event of any corruption or problem with the memory cards. One card is internal and cannot be removed by the customer; the other is hot-swappable and easily accessible without any technical knowledge.

The Minimus<sub>2</sub> is supplied with two microSD cards that are of equal storage capacity (*e.g.* two 64 GB cards).

Güralp recommends the use of industrial-grade SD cards

---

#### 1. External microSD card – new style

The upper surface of the Minimus<sub>2</sub> has a waterproof screw-in card-holder that is sealed by an O-ring.

To insert or replace a microSD card, proceed as follows:

1. Rotate the card-holder in an anti-clockwise direction, unscrewing it from the body of the digitiser.



**Caution:** The card holder connects electrically to the Minimus2 via a series of slip-rings which ride on metal fingers in the main body of the digitiser:

It is very important that the slip-rings and the metal finger-contacts do not become damaged or tarnished. Take care not to touch either part. If a Minimus2 has had its card-holder removed, do not leave it exposed to the elements. If a card-holder is to be transported when it is not installed in a Minimus2, enclose it in a protective bag or covering so that it cannot be scratched or contaminated.

2. The microSD card is accessible via the slot in the side of the card-holder. Push the card in gently and then release the pressure: the card will spring outwards a little. It can now be grasped and withdrawn.
3. To insert a new card, line it up with the slot as shown and push it gently into place. Once you feel the spring pressure, continue pushing until more resistance is felt and then release the pressure: the card will lock into place.
4. Finally, replace the cap and rotate clockwise until hand-tight. Do not over-tighten and do not use tools.

**Note:** In order to ensure data integrity and security, Güralp only recommends the use of the supplied industrial-grade microSD cards.

---

## 2. *Internal microSD card*

The second microSD card is factory-installed in a slot inside the unit.

**Caution:** The internal microSD card is not accessible by the user. Attempts to remove or replace it will void the warranty.

---

## 4. **Web interface**

The Minimus<sub>2</sub> contains on-board firmware that presents monitoring and configuration interfaces. These are accessible through Güralp's Discovery software (see section 3 on page 1414) or, with the built-in web server, via Discovery's browser interface or any standards-conformant web browser.

The Discovery interface allows a number of instrument monitoring, control and configuration options:

- Sensor readings and instrument State-of-Health
- Network configuration and authentication
- Sensor, timing, and station configuration/information
- Remote data-streaming configuration
- Local data-storage configuration

---

## 2. Accessory package

---

### 1. Ethernet cable

The Ethernet connector allows use of 10BASE-T, 100BASE-T networks. The cable that connects to the Minimus<sub>2</sub> has a metal cover which is IP68-rated and ensures consistent connections in harsh installation environments. At the other end of the blue Ethernet cable, there is a standard 8P8C modular jack (often incorrectly called an RJ45) for attachment to all common networking devices (*e.g.* PC, laptop, router, switch, modem etc.).

Please see section 1 on page 7070 for the pin-out and further details.

---

### 2. Compact GNSS receiver and cable

The Minimus<sub>2</sub> is supplied with a new-generation compact GNSS receiver with an in-built antenna that supports the GPS (Navstar), GLONASS, BeiDou and Galileo satellite constellations.

The receiver comes with a black RS-422 cable that has an over-moulded 14-way LEMO connector. LEMO connectors use an innovative latching mechanism which is different to the bayonet connectors used elsewhere. To mate, simply line up the red marks – one on the chassis and one on the free connector – and gently push the connector into place until they latch together with a click. To disconnect (un-mate), grasp the outer sleeve of the connector and pull gently.

**Caution:** Do not twist the connector or use any tools.



Please see section 3 on page 7272 for pin-out details.

---

### 3. Power cable

The Minimus<sub>2</sub> comes with a dedicated power cable with a standard military-specification bayonet connector on one end and bare ends at the other. Two pins are employed to carry power. The second pair of pins carry a serial port. When used in conjunction with a Güralp Power Pack Module, these carry information about charge status, solar panel operation, battery capacity etc.

**Note:** The does not use a grey/blue combined power/data cable, as used with many other Güralp products.

Please see section 2 on page 7070 for the pin-out details.

---

#### 4. Diagnostic GNSS to Serial cable adapter

The Minimus<sub>2</sub> comes with an adapter to connect the GNSS LEMO connector to a female nine-pin D-subminiature connector (DE9f), which can be used with a standard serial port to allow diagnosis and debugging of the using a serial terminal emulator (see section 3 on page 6565).

A serial-to-USB converter (not supplied) may need to be used to connect to PCs or laptops that don't have a nine-pin serial connector. Please see section 3 on page 72 for full pin-out details.

### 3. Güralp Discovery software

Güralp Discovery is a software application for seismometer configuration and control, state-of-health monitoring, and waveform viewing and acquisition.

An important benefit of Discovery is that it allows the user to identify the instruments' IP addresses on a LAN or via a cloud-based or organisational registry server without the need for static IP addresses at the stations.

Discovery also provides simple, convenient instrument and data management with access to hardware State-of-Health (SoH), data streaming; GNSS location; response and calibration data.

Discovery can download Minimus2 firmware from the Internet and remotely install it onto any connected digitisers.


Running Discovery on a network connected PC will show any connected Güralp products as below:

Status	Label	System	Name	Serial #	Firmware Ver	Identifier	WAN Address	LAN Address	Network	Uptime	Last Contact	Latitude	Longitude	Altitude	Timing qual
⚠	Midas NO LABEL	Nameless	ANON-8067	8067	2.1-21242	(ANON-8067)	0.0.0.0	10.20.0.52	255.255.0.0	00:02:02	2023-08-04T10:56:49	51.3608	-1.1633	122.56	1
⚠	Midas NO LABEL	Nameless	ANON-8667	8667	2.1-21242	(ANON-8667)	0.0.0.0	10.20.0.92	255.255.0.0	00:01:49	2023-08-04T11:03:42	51.3608	-1.1640	59.39	0
⚠	Comet NO LABEL	Aquarius	AQU-0155	0155	2.1-18558	(AQU-0155)	0.0.0.0	10.30.0.48	255.255.0.0	254days 17Hrs	Just Now	-59.9000	85.1029	-12.34	0
⚠	Midas NO LABEL	Certimus	CERT-2067	2067	2.1-21242	(CERT-2067)	0.0.0.0	10.20.0.95	255.255.0.0	00:02:51	2023-08-04T09:37:48	51.3606	-1.1634	94.40	100
⚠	Midas NO LABEL	Certimus	CERT-2067	2067	2.1-21242	(CERT-2067)	0.0.0.0	10.20.0.5	255.255.0.0	2days 0Hrs	Just Now	51.3607	-1.1634	-12.34	100
⚠	Midas NO LABEL	Certimus	CERT-2F67	2F67	2.1-21242	(CERT-2F67)	0.0.0.0	10.20.0.229	255.255.0.0	00:02:28	2023-08-04T10:58:29	51.3607	-1.1635	116.20	100
⚠	Midas NO LABEL	Certimus	CERT-3167	3167	2.1-21242	(CERT-3167)	0.0.0.0	10.20.0.1	255.255.0.0	1days 20Hrs	Just Now	51.3606	-1.1633	-12.34	100
⚠	Midas NO LABEL	Certimus	CERT-3466	3466	2.1-21159	(CERT-3466)	0.0.0.0	10.20.0.231	255.255.0.0	00:02:36	2023-08-03T17:17:31	51.3606	-1.1635	114.00	0
⚠	Midas NO LABEL	Certimus	CERT-3566	3566	2.1-21159	(CERT-3566)	0.0.0.0	10.20.0.140	255.255.0.0	00:01:18	2023-08-04T10:31:00	51.3608	-1.1633	108.60	37
⚠	Midas NO LABEL	Certimus	CERT-3567	3567	2.1-21242	(CERT-3567)	0.0.0.0	10.20.0.138	255.255.0.0	00:03:52	Just Now	51.3608	-1.1634	117.60	100
⚠	Midas NO LABEL	Certimus	CERT-3C67	3C67	2.1-21242	(CERT-3C67)	0.0.0.0	10.20.0.71	255.255.0.0	1days 17Hrs	Just Now	51.3606	-1.1634	-12.34	100
⚠	Midas NO LABEL	Certimus	CERT-3067	3067	2.1-21242	(CERT-3067)	0.0.0.0	10.20.0.230	255.255.0.0	00:03:27	2023-08-03T16:30:12	51.3607	-1.1634	111.30	100
⚠	Comet NO LABEL	Certimus	CERT-3F67	3F67	2.1-21242	(CERT-3F67)	0.0.0.0	10.30.0.6	255.255.0.0	2days 18Hrs	Just Now	51.3608	-1.1632	-12.34	0
⚠	Midas Certimus Temp Train RIG 1	Certimus	CERT-4167	4167	2.1-17870	(CERT-4167)	0.0.0.0	10.20.0.66	255.255.0.0	03:26:18	Just Now	-59.9000	103.2950	-12.34	99
⚠	Midas Certimus Temp Train RIG 2	Certimus	CERT-4267	4267	2.1-17870	(CERT-4267)	0.0.0.0	10.20.0.185	255.255.0.0	00:01:07	2023-08-04T07:41:51	51.3608	-1.1633	-12.34	0
⚠	Midas Certimus Temp Train RIG 4	Certimus	CERT-EF5C	EF5C	2.1-17870	(CERT-EF5C)	0.0.0.0	10.20.0.59	255.255.0.0	03:27:02	Just Now	51.3608	-1.1633	-12.34	99
⚠	Midas Certimus Temp Train RIG 3	Certimus	CERT-FE5D	FE5D	2.1-21242	(CERT-FE5D)	0.0.0.0	10.20.0.45	255.255.0.0	03:27:05	Just Now	51.3612	-1.1636	-12.34	99
⚠	Midas Platinum	EAM	EAM5752	5752	1.0-15089	(EAM5752)	0.0.0.0	10.20.0.218	255.255.0.0	533days 23Hrs	Just Now	0.0000	0.0000	0.00	0
⚠	Midas DM Fortimus Jig	Fortimus	FMUS-165A	165A	2.1-1102	(FMUS-165A)	0.0.0.0	10.20.0.130	255.255.0.0	00:00:25	Just Now	51.3608	-1.1632	136.50	100
⚠	Midas NO LABEL	Fortimus	FMUS-2466	2466	2.1-18558	(FMUS-2466)	0.0.0.0	10.20.0.188	255.255.0.0	00:06:41	Just Now	51.3608	-1.1634	124.20	0
⚠	Midas SUPRT-FMUS	Fortimus	FMUS-4067	4067	2.1-21242	(FMUS-4067)	0.0.0.0	10.20.0.215	255.255.0.0	19:20:55	Just Now	51.3607	-1.1634	114.00	100
⚠	Comet Test Rack 3	Fortimus	FMUS-545A	545A	2.1-21159	(FMUS-545A)	0.0.0.0	10.30.0.72	255.255.0.0	1days 22Hrs	Just Now	51.3602	-1.1641	-12.34	100
⚠	Midas NO LABEL	Fortimus	FMUS-6466	6466	2.1-18558	(FMUS-6466)	0.0.0.0	10.20.0.75	255.255.0.0	10:57:20	2023-08-04T11:03:00	51.3607	-1.1634	114.00	100
⚠	Midas NO LABEL	Fortimus	FMUS-6566	6566	2.1-18558	(FMUS-6566)	0.0.0.0	10.20.0.214	255.255.0.0	00:17:31	2023-08-03T16:44:31	51.3607	-1.1634	-12.34	0
⚠	Midas NO LABEL	Fortimus	FMUS-6766	6766	2.1-18558	(FMUS-6766)	0.0.0.0	10.20.0.185	255.255.0.0	21:27:40	2023-08-04T11:03:00	51.3606	-1.1633	90.20	100
⚠	Midas NO LABEL	Fortimus	FMUS-6866	6866	2.1-18558	(FMUS-6866)	0.0.0.0	10.20.0.94	255.255.0.0	00:08:20	Just Now	51.3608	-1.1633	132.60	99

## 4. Güralp GüVü Android app

For added confidence during deployments in the field, Güralp GüVü, a Bluetooth App, displays waveforms, orientation, temperature and humidity data for instant checking of installation integrity.

Please refer to Chapter 0on page 5959 for installation and usage instructions. Its available on PlayStore.

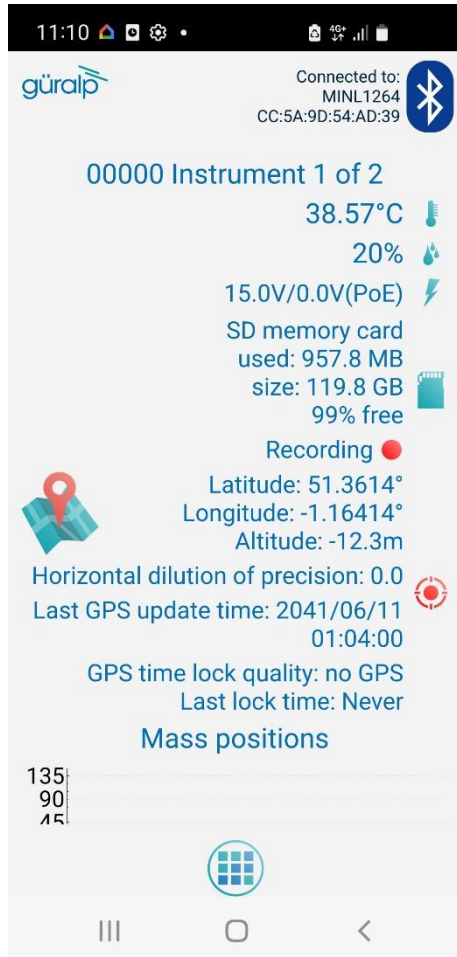

### 5. System set-up

Güralp highly recommends exploring and gaining familiarity with the inside your lab before installation in an outdoors environment.

A typical set-up for the connected to an analogue sensor.

Power up the using a power supply with a DC output of between 10 and 36 Volts. We recommend fitting an in-line 3.5 A anti-surge fuse in the positive power lead to protect the external wiring of the installation. The will, in turn, provide power to all connected instruments. Alternatively, the system can be powered by POE (Power over ethernet).

If the Minimus<sub>2</sub> is directly connected to a laptop or PC using the blue Ethernet cable, make sure that the laptop or PC is configured to obtain an IP address automatically. More details on how to correctly configure the connection using APIPA (Automatic Private IP Addressing) are in section 6 on page 8585.

---

### 6. Güralp Discovery software installation

Discovery is a convenient way to identify a device without having to know its IP address. It allows easy access to the WEB configuration page as well as live waveforms, and to control and configure the Minimus<sub>2</sub> and connected sensors.

Visit [www.guralp.com/sw/download-discovery.shtml](http://www.guralp.com/sw/download-discovery.shtml) for links for all available platforms (currently Windows 32-bit and 64-bit, macOS 64-bit and Linux 64-bit).

Download the installer appropriate for your architecture and operating system, run the installer and follow the instructions on screen. (Full details of installation and upgrading are in section 6 on page 1616.)

Under Windows, the first time that you start Discovery, Windows may ask you to specify how you wish Discovery to interact with the Windows Firewall. Because Discovery requires network communication in order to function, it is important that allow access.

The Discovery software 'looks' on the local network for any connected Güralp devices. These are displayed as shown below:



Güralp Systems - Discovery

File Edit Tools Window Help

Status	Label	System	Name	Firmware Ver	WAN Address	LAN Address	Uptime	Last Contact	Latitude	Longitude
	CERTIS_TEST PK	Minimus	MIN-CC57	2.1-19716	0.0.0.0	10.30.0.67		1970-01-20T11:30:17	51.3604	-1.1640
	Radian Test String	Minimus	MIN-E657	2.1-12720	0.0.0.0	10.30.0.44		1970-01-20T11:30:17	-59.9000	87.7900
	CERTIS_TEST4	Minimus	MIN-E857	2.1-20890	0.0.0.0	10.30.0.16		1970-01-20T11:30:17	51.3610	-1.1636
	CERTIS_TEST1	Minimus	MIN-EC57	2.1-20890	0.0.0.0	10.30.0.55		1970-01-20T11:30:17	-59.9000	87.8080
	Tim's	Minimus Lite	MINL-1264	2.1-8863	0.0.0.0	10.30.0.1		1970-01-20T11:30:17	51.3612	-1.1640
	NO LABEL	Minimus Lite	MINL-1364	2.1-8860	0.0.0.0	10.30.0.31		1970-01-20T11:30:17	51.3589	-1.1640
	JOHNO	Minimus Lite	MINL-5764	2.1-8647	0.0.0.0	10.30.0.79		1970-01-20T11:30:17	51.3607	-1.1640
	test5	Minimus Lite	MINL-6765	2.1-8872	0.0.0.0	10.30.0.3		1970-01-20T11:30:17	51.3612	-1.1640
	CERTIS_TESTB	Minimus Lite	MINL-6965	2.1-8544	0.0.0.0	10.30.0.11		1970-01-20T11:30:17	51.3611	-1.1642
	CERTIS_TEST7	Minimus Lite	MINL-6A65	2.1-8540	0.0.0.0	10.30.0.90		1970-01-20T11:30:17	51.3612	-1.1641
	CERTIS_TEST9	Minimus Lite	MINL-6C65	2.1-8540	0.0.0.0	10.30.0.93		1970-01-20T11:30:17	51.3612	-1.1641
	CERTIS_TEST8	Minimus Lite	MINL-6F65	2.1-8540	0.0.0.0	10.30.0.91		1970-01-20T11:30:17	51.3612	-1.1641
	NO LABEL	Minimus Lite	MINL-7465	2.1-8540	0.0.0.0	10.30.0.92		1970-01-20T11:30:17	51.3612	-1.1640

Scan Locally Registry [Cloud server configuration](#)

Local Systems

Any device on the same subnet will be displayed. The protocol uses a 'broadcast' UDP packet to request a response from connected systems. This will likely not penetrate routers, firewalls etc unless expressly permitted.


However, any device on a local ethernet hub or switch should respond. This allows connection without using or typing specific IP addresses.

In an office environment, a local DHCP server will likely offer an address to any connected device. Güralp digitisers have DHCP enabled by default so making connection to the network trivial. Discovery will display the device as above without any worry about addresses.

You can choose which information is shown for each device in the main window. You can select which columns to display – and hide unwanted ones – by clicking on "Show" from the "View" menu.

The "Status" column is composed of three icons that represent the Minimus<sub>2</sub> connectivity status (whether device is reachable/active or not), timing status (GNSS or PTP) and storage status (primary/secondary) respectively.

Hovering the mouse over any of these three icons will display tool-tips giving a brief description of the status including, for the timing indicator, details of which timing subsystems are operating:

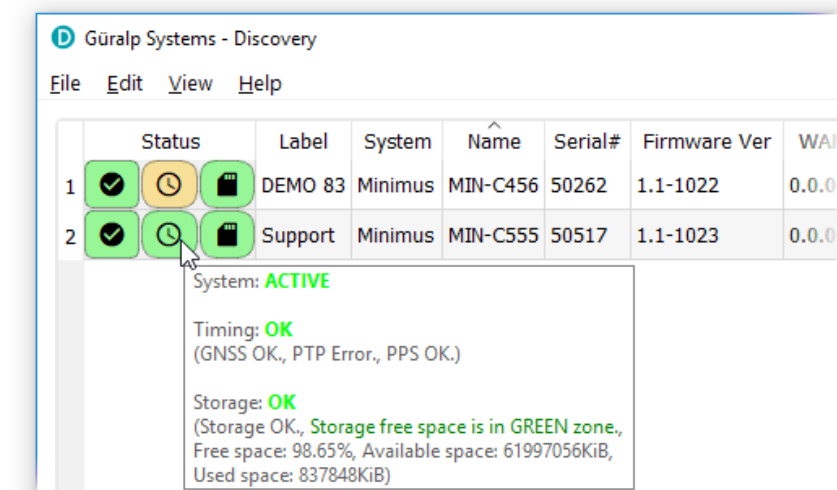

Within Discovery, internal and connected sensors are referred to as follows:

## 7. Viewing waveforms and system state-of-health

Waveform data recorded by the ' internal sensors and other connected sensors can be viewed using several methods, which are described in the following sections.

### 1. Using Discovery's "Live View" window

#### 1. Main features

Discovery offers a versatile live waveform/data viewer. To open the Viewer, in Discovery's main window, select an instrument and, from the View tab in the toolbar, select "Live View".

The menu will then present three options for data streaming:

- GDI and GCF channels
- GDI only
- GCF only


The GCF option uses the Scream! Protocol to stream data in GCF packets of, typically, 250, 500 or 1,000 samples. The GDI protocol streams data sample-by-sample and also allows the sending of each instrument's calibration parameters so that data can be expressed in terms of physical units rather than digitiser counts.

Güralp recommends using the "GDI only" option for waveform viewing. Metadata (including Calibration) is automatically sent with a stream. The display is thus shown in real units – not just counts.

The main features of – and the key buttons within – the Live View window are shown in the following screen-shot. Basic amplitude and time zoom functions are



given in the Window zoom controls panel and streams can be easily added to or removed from the window by using the check-boxes in the left panel.

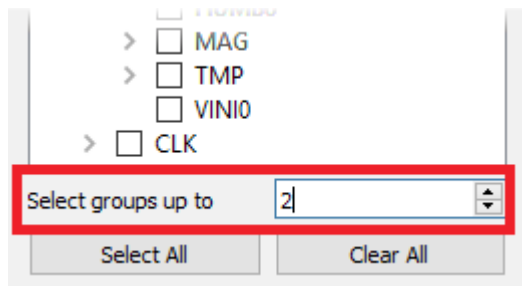The channels are divided in groups with different hierarchical importance. The most important are the velocity/acceleration channels with higher sample rates: these belong to group 1. The least important belong to group 6, which includes humidity, temperature, clock diagnostics *etc.* When the live view is launched, only the channels in group 1 are selected. It is possible to change this setting by selecting a different group number from the “Select group up to” box at the bottom of the channel list.



When only few channels are selected for viewing, the channel name labels also show data statistics, including the maximum, minimum and average amplitudes in physical units.












If too many channels are in view for this information to be visible, you can left-click on a label and the label and trace will then expand to half the height of the screen, revealing these statistics. The other channels will be compressed into the remaining space. Another left-click on the same channel will return the window to normal. Alternatively, a left-click on a different channel will shrink the original one and expand the newly-selected one.

By selecting and dragging the mouse over a window of waveform data, the viewer will display similar statistics for the data within the selected window. When a window of data is selected, use the  key to subtract the ADC offset from the maximum, minimum and average values. Use the  key to calculate the integral of the selected data. By right-clicking on the window, you can perform advanced analysis on the data, including plotting power spectral density graphs (PSDs), spectrograms and discrete Fourier transforms (DFTs), as shown below:

## 2. Window control short-cuts

You can change the display of the waveforms with based on a combination of keystrokes and mouse-wheel scrolling (or track- / touch-pad scrolling on a laptop).

These commands are shown in the table below:

Command	Window control
<b><i>Amplitude control</i></b>	
	Increase/decrease amplitude of all traces
 + hover cursor over channel label	Increase/decrease amplitude of individual trace
 +  + hover cursor over channel label	Shift individual trace offset up/down
<b><i>Time control</i></b>	
 + 	Pan time-scale right/left
 + 	Zoom time-scale in/out
<b><i>Trace focus</i></b>	
 on trace label	Focus on individual trace
<b><i>Trace selection</i></b>	
 + hover cursor over on individual trace / trace label	Remove / de-select trace from Viewer window
<b><i>Details control</i></b>	
 + hover cursor over on individual trace / trace label	Reset the maximum and minimum values to the average value of the selected data

## 3. GDI connection settings

The GDI protocol allows a receiver, such as Discovery, to select which channels to receive by use of a “channel subscription list”. This feature can be useful in cases where the connection between Minimus<sub>2</sub> and Discovery has limited bandwidth. To subscribe to specific channels, right-click on a digitiser in Discovery’s main window and select “GDI Configuration” from the context menu.

The resulting window has two very similar tabs. The “Subscription configuration” tab refers to channels selected for transmission and the “Storage configuration” tab affects which channels are selected for recording.

Click on the  button to connect to the GDI server.

By default, Discovery subscribes to all channels. To alter this behaviour, change the radio-button from “Automatically subscribe to all available channels” to “Use subscription list”. In subscription list mode, the channels in the list on the left-hand

side are those to which Discovery subscribes. All available channels are listed on the right-hand side.

Channels can be moved between lists – *i.e.* switched between being subscribed and being unsubscribed – by using the arrow buttons on the middle:

<<	Subscribe to all channels shown in the <b>Available channels</b> list
<	Subscribe to all selected channels in the <b>Available channels</b> list
>	Unsubscribe from all selected channels in the <b>Subscribed channels</b> list
>>	Unsubscribe from all channels in the <b>Subscribed channels</b> list

#### 4. Backfill from microSD card

Gaps in the waveforms due to network disconnections can be backfilled by requesting missing data to the local storage.

In the Discovery GDI “Live View”, highlight the portion of data including the gap, right-click and select “Request backfill”.



The gaps are backfilled automatically for all the streams selected, if the requested data is available in the microSD card.

## 2. Using Scream!

Data from the Minimus<sub>2</sub> and attached sensors can also be viewed and analysed using Güralp's Scream! Software.

For full usage information on Scream!, please refer to the on-line Güralp manual [MAN-SWA-0001](#).

In Scream!'s Network Control window, add a UDP or TCP Server using the address reported under “LAN Address” in Discovery's main window (as described in section 3 on page 14).

	Status	Label	System	Name	Serial#	Firmware Ver	WAN Address	LAN Address	Uptime	Latitude	Longitude
1	  	Support	Minimus	MIN-C555	50517	1.1-1022	0.0.0.0	10.10.0.13	00:15:10	51.3607	-1.1630

Right-click on the newly-added server and select `GCFSEND:B` (or `Connect`) from the context menu. This sends a command to the Minimus<sub>2</sub> to start data transmission. Once the `GCFSEND:B` (or `Connect`) command has been issued, the instruments and their associated streams should begin to appear in Scream!'s main window.

Scream!

File View Windows Help

MIN-6B55	Stream ID	Rec.	Comp.	SPS	End Time	Date	RIC
Sensor0	1AXLE0	No	16 bit	100	13:30:55	14/07/2016	130
MN6B55-AXL	1AXLNO	No	8 bit	100	13:30:58	14/07/2016	-8237
MN6B55-CLKC	1AXLZO	No	16 bit	100	13:30:56	14/07/2016	14271
MN6B55-HUM	1INTE0	No	8 bit	100	13:30:59	14/07/2016	-12068
MN6B55-INT	1INTNO	No	8 bit	100	13:30:58	14/07/2016	-8782
MN6B55-MAG	1INTZO	No	8 bit	100	13:30:57	14/07/2016	-22655
MN6B55-MAG	1MAGE0	No	8 bit	5	13:29:23	14/07/2016	-5322
MN6B55-MAS	1MAGNO	No	8 bit	5	13:29:51	14/07/2016	-6660
MN6B55-OVIN	1MAGZO	No	8 bit	5	13:28:55	14/07/2016	-1344
MN6B55-PLLC	1MASE0	No	16 bit	100	13:30:55	14/07/2016	-4506
MN6B55-ROT	1MASNO	No	16 bit	100	13:30:56	14/07/2016	3732
MN6B55-TMP	1MASZO	No	16 bit	100	13:30:59	14/07/2016	-1655
MN6B55-VEL	1ROTPO	No	8 bit	5	13:28:11	14/07/2016	0
MN6B55-XAXL	1ROTRO	No	8 bit	5	13:28:11	14/07/2016	0
Sensor1	1ROTY0	No	8 bit	5	13:28:11	14/07/2016	-30336
RA03ED-1AXL	1TMPA0	No	8 bit	5	13:28:11	14/07/2016	4222
RA03ED-1INT	1VELE0	No	32 bit	200	13:31:00	14/07/2016	-590772
RA03ED-1MAG	1VELEC	No	32 bit	200	13:31:00	14/07/2016	-2006039
RA03ED-1MAS	1VELNO	No	32 bit	200	13:31:00	14/07/2016	-1617447
RA03ED-1ROT	1VELNC	No	32 bit	200	13:31:00	14/07/2016	-1512488
RA03ED-1TMP	1VELZO	No	32 bit	200	13:31:00	14/07/2016	-493488
RA03ED-1VEL	1VELZC	No	32 bit	200	13:31:00	14/07/2016	-201964
	AXLE0	No	16 bit	100	13:30:56	14/07/2016	-672
	AXLNO	No	8 bit	100	13:30:58	14/07/2016	-296

Server: 10.10.0.5:1567      51 streams      1,372,140 Kb stream buffer      PC Time (UTC): 13:31:06

To configure the Minimus<sub>2</sub>, double-click on its entry to open its web page.

---

## System configuration

System configuration, control and configuration tools are available by selecting an instrument in Discovery, right-clicking its entry and selecting "View Web Page". Alternatively, the web interface can be viewed by navigating to the LAN or WAN address of the instrument from any common web browser.

Some changes in config. Require a reboot to take effect. The banner at the top of the WEB page reflects this if required.

---

## 8. Web Page login

The web interface can be protected by username and password. There are two levels of access to the web page: normal user and administrator.

If the login is required, the web interface will initially show a status display only.

Clicking on "Login" opens allows to type in the user-name and password to access the content of the web page.



Logging in with normal user account unlocks only basics configuration and control features in order to prevent any advanced settings to be modified. The default user-name for normal user login is user and password of user.

Logging in with the administrator account unlocks all the configuration and control features available in the web page. The default user-name for administrator user login is admin and password of admin.

Once logged in, the "Web Login" drop-down menu in the Network tab allows to disable the request of login every time the web page is accessed. The user-name and password for both normal user and administrator login are configurable in the "Network" tab.

---

## 9. System status

The "Status" tab of the web browser interface provides state-of-health information about the Minimus<sub>2</sub> and connected instruments.

Host Label can be set in the Setup page. This is also visible on the Discovery front page.

The map requires access to the internet to display correctly. The computer used to view the Minimus<sub>2</sub> must therefore be internet connected.

The MicroSD Used item acts as a verification that the system is truly recording data. If this item shows periodic changes, the data is being written to the card.

The screenshot shows the 'Minimus Lite' web interface. At the top, there is a navigation menu with 'Status' selected. Below the menu, system information is displayed: 'System type: Minimus Lite | Host label: CERTIS\_TESTB | Host name: MINL-6965 (10.30.0.11) | Serial number: 6965'. The main content is divided into three sections: 'General Status', 'GNSS Status', and 'Data Record Status'. A map of the location is also visible.

General Status					
Host name	MINL-6965	Host label	CERTIS_TESTB	System type	Minimus Lite
Serial number	06965	Firmware version	2.1-8544	IPv4 address	10.30.0.11 (Static)
Digitiser temperature	37.897 °C	Digitiser humidity	18.96%	Input voltage	0.000 V
System time	8:48:36 AM Tue 2-May-2023	Uptime	5d 18h 20m 2s	Restarts	Restarts:45 Crashes:0 Power:27
				Product type	Minimus Lite
				SEED network and station	DG.00000 (No site)
				Power over Ethernet voltage	24.250 V
				ETH status	sckt: 0/0 data: 0/6

GNSS Status			
GNSS connection status	Connected	Last timestamp	2023-05-02 08:48:36
Last lock time	2023-04-26 14:36:48	GNSS stability	100%
Latitude	51.361267	Longitude	-1.164259
Altitude	117.5	Horizontal dilution of precision	1.21
GNSS PPS status	Trusted Pulsing	GNSS NMEA stream	Input OK
GNSS Lock state	3D locked	Number of satellites	Used: 8 In view: 15

Data Record Status			
microSD status	Recording	microSD total	124868608 KIB
		microSD used	8251808 KIB
		microSD free	94%

Map location: North Wessex Downs ADNB, London.

Footer: Guralp Systems Limited, Midas House, Calveva Park, Aldermaston, Reading, RG7 8EA, UK. Tel: +44 118 981 8056, Fax: +44 118 981 9943, E-Mail: sales@guralp.com, support@guralp.com


## 10. Data streams

In addition to the main seismic streams, there are a number of other data streams. These can be seen from the Data Stream or Records tabs. Use hover help on the stream name to gain more insight as to what the stream represents.

Many of the additional streams should be recorded at low sample rates during deployment. They are a vital tool to understanding the deployment and environment.


E.g.: The temperature and GPS time phase measurement (PLL) together can be used to diagnose possible reasons for time lock degrading in a deployment. In the event of snow covering the GPS antenna, the temperature and Phase measurements will show significant changes. A stable phase of a few counts from zero is expected as the GPS time is compared to internal time. Flatlining of the phase implies a loss of GPS time signal. When signal is regained, the phase will start with a larger value and gradually reduce as timelock ensues.



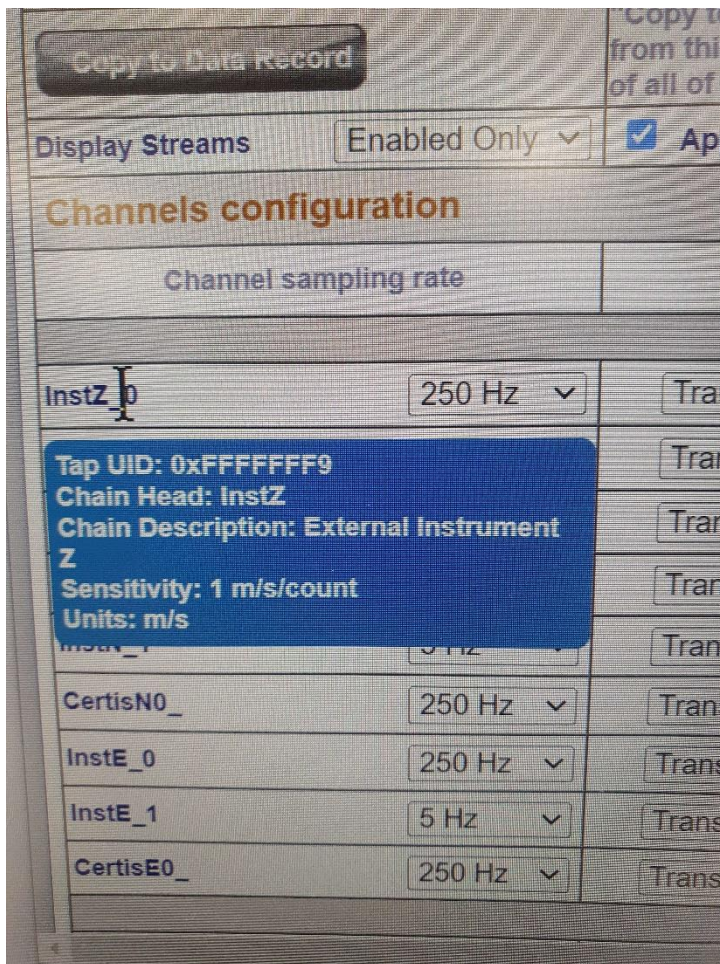

## 1. Low Bandwidth Considerations

If streaming data with a low bandwidth connection, it is advised to minimise channel sampling rates where possible to prevent issues with data streaming. The default calibration sampling rate is 4000 Hz, it would be recommended to reduce this in the case of a low bandwidth connection. This channel is not always enabled so if it doesn't appear within the 'Data Stream' tab, select 'All' under 'Display Streams' and it will appear.

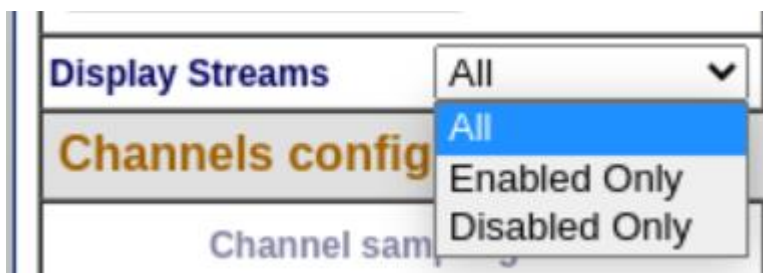

If connecting to the Minimus<sub>2</sub> via a modem, such as in our Rapid Deployment Kit, a low bandwidth would be expected and the above should apply.

## 11. Station meta-data

Discovery provides a number of flexible station meta-data inputs. These are accessible from the "Setup" tab of the instrument's web page.

“**Label**” and “**Site Name**” are used in Discovery only and appears in the list of instruments in the main window.

“**Station Name**”, “**Network Code**” are all standard meta-data header values used by the miniSEED file format, which will be included in locally-stored miniSEED files (see section 15.6 on page 3232).

---

## 12. Network configuration

---


### 1. IP address and gateway

By default, the Minimus<sub>2</sub> uses DHCP (Dynamic Host Configuration Protocol) to acquire its network configuration but static addressing can be used if required.


To configure static addressing, visit the “Network” tab of the instrument’s web page and, under “DHCP”, change the mode from “Enabled” to “Disabled” in the drop-down menu. In this mode, it is possible to specify the IP address, the Netmask and the address of the Gateway (default router), as shown:



Network configuration			
LAN Enable	Enabled	DHCP	Enabled
Static IP addr	192.168.64.0	Net Mask	255.255.0.0
Gateway	169.254.0.1		
DNS1	209.244.0.3	DNS2	84.200.69.80

Before any changes made here will take effect, the Minimus<sub>2</sub> must be re-booted. To do this, click the  button.

Network settings are also available in Discovery by right-clicking on the entry in Discovery’s main window and selecting “Edit Network Address”.

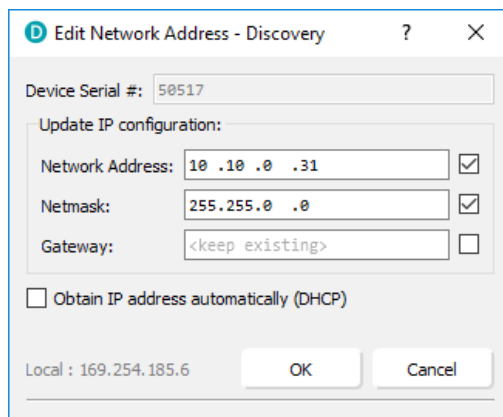

Dialog box: Edit Network Address - Discovery

Device Serial #: 50517

Update IP configuration:

Network Address: 10 .10 .0 .31

Netmask: 255.255.0 .0

Gateway: <keep existing>

Obtain IP address automatically (DHCP)

Local : 169.254.185.6

Buttons: OK, Cancel

---

### 2. NTP (Network Timing Protocol) configuration

This gives the system time to within 1 second. It is not generally recommended that this is used as the main time source for deployments. GNSS offers accurate time for this purpose.

By default, the NTP server option (located under the “Setup” tab of the instrument’s web page) is set to “Pool” which uses the virtual server pool `pool.ntp.org`. This accesses a dynamic collection of networked computers that voluntarily provide moderately accurate time via the NTP to clients worldwide.

Alternatively, it is possible to specify the IP address of your preferred NTP server. To do this, select the "Static" option from the "NTP server" drop-down menu, which activates the "NTP IP Addr" setting, and enter the IP address of your NTP server here.

Network Timing			
PTP Mode	Disabled	PTP Offset Correction	0 nanoseconds
		PTP Transmission Mode	Multicast
NTP Server	Pool		
	Disabled		
Registry	Pool		
	Static		
Registry Update	Even	Group ID	SOF
		Registry Address	52.34.40.123

## 13. GDI push (auto-connection)

A Minimus<sub>2</sub> normally acts as a GDI server, where a client initiates a connection in order to pull data from it. This is the mechanism used when the GDI viewer in Discovery is launched.

The "GDI auto-connection" feature enables the Minimus<sub>2</sub> to establish *outgoing* network connections in order to *push* data to one or more remote clients, such as Platinum systems or an Earthworm system running the `gdi2ew` plug-in.

To configure an auto-connection, type either the IP address or the host-name of the target client, a colon (':') and the port number (*e.g.* `192.0.2.91:1566` or `affinity10.example.com:1566`), into any of the connection fields in the "Network" tab of the web page.

GDI auto-connection settings			
Connection		Connection	
Connection		Connection	

When auto-connection from a Minimus<sub>2</sub> to a host is configured, the Minimus<sub>2</sub> will attempt to open a connection to the host. If it fails, it will re-try every 60 seconds. A suitably configured host will accept the connection and the Minimus<sub>2</sub> will then negotiate a link and start streaming data.

If the connection drops, the Minimus<sub>2</sub> will attempt every 60 seconds to reconnect.

Note: The default port number for a GDI-link receiver is 1566. Push servers will normally connect to this port. The default port number for a GDI-link transmitter is 1565. Receivers wishing to pull data will normally connect to this port. See Chapter [X](#) on page 6969 for a list of the network ports used by the Minimus<sub>2</sub>.

## 14. Data storage

The main panel of the "Data Record" tab in the web interface is shown here:

Data Record			
		The "Disable All" and "Restore default" button will ALSO affect settings of any other sensors	
	"Copy to Data Stream" will apply settings from this page to streaming configuration of all of the sensors.	Recording status <b>Recording</b>	For more information about microSD cards status please visit "Storage" tab
Display Streams <input type="button" value="Enabled Only"/>	<input checked="" type="checkbox"/> Apply configuration for tap groups		Display On Page <input type="button" value="Sensor 0"/>
Channels configuration			
Channel sampling rate	Data transform	SEED name - please use check-box to modify the default	RESPonse file - if available
Seismic channels			
InstZ_sd <input type="button" value="250 Hz"/>	<input type="button" value="Transforms not available on Minimus2"/>	<input type="checkbox"/> DG.00000,1,CHZ	<a href="#">RESP_file_7</a>
InstN_sd <input type="button" value="250 Hz"/>	<input type="button" value="Transforms not available on Minimus2"/>	<input type="checkbox"/> DG.00000,1,CHN	<a href="#">RESP_file_10</a>
InstE_sd <input type="button" value="250 Hz"/>	<input type="button" value="Transforms not available on Minimus2"/>	<input type="checkbox"/> DG.00000,1,CHE	<a href="#">RESP_file_13</a>
Mass position channels			
MassZ_sd <input type="button" value="1 Hz"/>	<input type="button" value="Transforms not available on Minimus2"/>	<input type="checkbox"/> DG.00000,1,LMZ	<a href="#">RESP_file_17</a>
MassN_sd <input type="button" value="1 Hz"/>	<input type="button" value="Transforms not available on Minimus2"/>	<input type="checkbox"/> DG.00000,1,LMN	<a href="#">RESP_file_19</a>
MassE_sd <input type="button" value="1 Hz"/>	<input type="button" value="Transforms not available on Minimus2"/>	<input type="checkbox"/> DG.00000,1,LME	<a href="#">RESP_file_21</a>

This page allows to configure the recording channels for each of the connected instruments and sensors internal to the Minimus<sub>2</sub>.

The names and contents of each channel are described in Section 18.5 on page 6767.

Note: When changing a setting in the Minimus<sub>2</sub> web page, ensure that you wait until the page refreshes before changing another setting. This allows time for the previous change to take effect.


The drop-down box at the top-left of the page named "Display Streams" filters out visible channels among All, Enabled and Disabled. The option "Apply configuration for tap groups" automatically apply the same configuration to three streams that belong to the same tap, *e.g.* InstZ, InstN, InstE. The drop-down box at the top-right of the page named "Display On Page" is used to select the Sensor configuration to display on the page.

The page is divided in four columns:

- In the left-most column, drop-down boxes are available for each channel to either select a sample rate or to exclude the channel from streaming (by selecting the "Disabled" option). All streaming can be stopped by clicking the button. The same configuration can be applied to real-time transmission channels by clicking the button. The default channel configuration can be applied by clicking the button.
- In third column from left, Location and Channel SEED codes can be configured. Cells are greyed out by default (default values applied) and they can be edited by clicking on the check-box;
- In most-right column contains links to the RESP files associated to each of the seismic channels (see Section 18.5 on page 4343).

Upon changing the sample rate, or changing Location and Channels codes, the Minimus<sub>2</sub> needs to be restarted for the changes to come into effect; this can be done by pressing the button.

During the reboot, the LEDs will flash, displaying the starting-up sequence (see Section 1.1 on page 99) and the instrument web page will display the following screen.

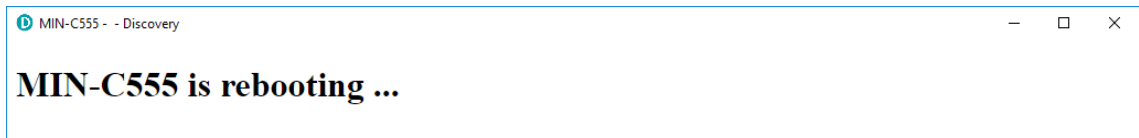

Once the Minimus<sub>2</sub> has successfully restarted, the full web browser display and controls will be available for use again.

## 15. Storage

### 1. Recording status

MicroSD cards need to be specifically formatted to operate with the Minimus<sub>2</sub>. The cards shipped with the Minimus<sub>2</sub> are supplied pre-formatted.

Data are stored on the microSD cards in miniSEED format. Each channel is saved as a series of 128 MiB files. Instrument and station meta-data (*e.g.* instrument response, coordinates, compression type etc.) are stored in "Dataless SEED" format.

The MicroSD card and data recording status can be monitored in the upper panel of the "Storage" tab.

The left-hand column provides details of the external (primary, removable) microSD card and the right-hand column shows the status of the internal (backup, fixed) card.

SD Cards status			
Internal microSD card present	PRESENT	External microSD card present	NOT PRESENT
Internal microSD card is recording samples	RECORDING	External microSD card is recording samples	NOT RECORDING
Number of 128-MiB miniSEED files	11	Percentage Free	100

Sections of this panel indicate the status of the following:

- Whether a card is inserted;
- Whether an inserted card is usable (*i.e.* correctly formatted); and
- Whether the card is recording data.

Note: If the recording status of the cards is marked NOT RECORDING, clicking on the Quick Format button may solve the issue. Note that the quick format simply moves the write-pointer to the beginning of the recording space, hence overwriting any existing data.


The card re-formatting process fills the card with 128 MiB files. Each file is given a temporary, place-holder name. When data are written, these files are renamed and then over-written with data.


The quick format mode should be used for pre-deployment tests (*e.g.* stomp/huddle tests) to ensure that the instruments are operating properly. This mode simply marks

the existing files as empty without deleting their contents. The formatting process formats both fixed and removable cards, simultaneously.

---

## 1. Quick format


Ensure that the external microSD card is correctly inserted. Click the  button in the “Storage” tab: The button legend will change to ask for confirmation. Press a second time to start the format: The progress bar should immediately start at 1% and take about 5 minutes to complete.

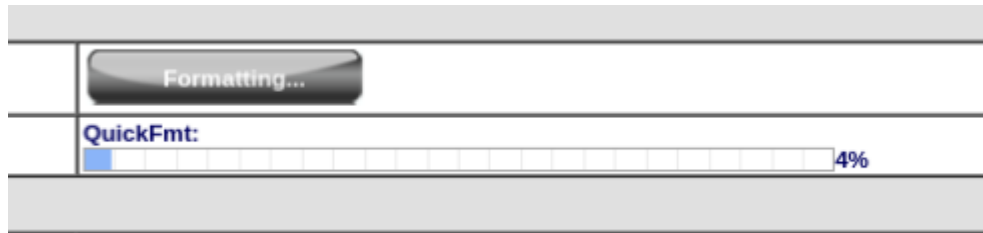


The instrument web page will refresh and return to the “Status” tab. The reformatting operation is now complete.

---

## 2. MicroSD card data flushing and unmounting

The  button flushes data still in the buffer into the microSD card storage. Perform a flushing before downloading data from the Storage tab if the very latest data is required. Data is written roughly every 2 minutes.

The  button flushes the data from the buffers into the microSD cards and interrupts the recording. The recording restarts if a new card is inserted in the slot or if a quick-format (or full-format) is performed.

---


## 3. Downloading recorded data

The “Storage” tab of the web browser interface displays the miniSEED files stored on the microSD card:

SD Card files				
	Filename	Size (bytes)	Start data timestamp	Last data timestamp
<input type="checkbox"/>	000_InstZ_sd.mseed	134217728	2023-06-22 16:20:39	--> 2023-06-30 12:43:08
<input type="checkbox"/>	001_InstN_sd.mseed	134217728	2023-06-22 16:20:39	--> 2023-06-30 12:47:02
<input type="checkbox"/>	002_InstE_sd.mseed	134217728	2023-06-22 16:20:39	--> 2023-06-30 12:40:07
<input type="checkbox"/>	003_InstX_sd.mseed	54644736	2023-06-22 16:20:39	--> 2023-07-03 12:40:09
<input type="checkbox"/>	004_Temperatur_sd.mseed	7405568	2023-06-22 16:26:48	--> 2023-07-03 12:30:05
<input type="checkbox"/>	005_Humidity_sd.mseed	8916992	2023-06-22 16:26:48	--> 2023-07-03 12:26:37
<input type="checkbox"/>	006_Voltage_sd.mseed	5984256	2023-06-22 16:26:48	--> 2023-07-03 12:35:44
<input type="checkbox"/>	007_Power_sd.mseed	14512128	2023-06-22 16:26:48	--> 2023-07-03 12:30:16
<input type="checkbox"/>	008_Phase_sd.mseed	466944	2023-06-22 16:26:48	--> 2023-07-03 08:59:50
<input type="checkbox"/>	009_DAC_sd.mseed	471040	2023-06-22 16:26:48	--> 2023-07-03 08:59:50
<input type="checkbox"/>	010_MassZ_sd.mseed	471040	2023-06-22 16:26:48	--> 2023-07-03 08:59:50
<input type="checkbox"/>	011_MassN_sd.mseed	471040	2023-06-22 16:26:48	--> 2023-07-03 08:59:50
<input type="checkbox"/>	012_MassE_sd.mseed	471040	2023-06-22 16:26:48	--> 2023-07-03 08:59:50
<input type="checkbox"/>	013_InstE_sd.mseed	93237248	2023-06-30 12:40:18	--> 2023-07-03 12:41:25
<input type="checkbox"/>	014_InstZ_sd.mseed	93171712	2023-06-30 12:43:19	--> 2023-07-03 12:41:24
<input type="checkbox"/>	015_InstN_sd.mseed	93085696	2023-06-30 12:47:14	--> 2023-07-03 12:41:25

Download selected files

Clicking on the file from the list automatically starts a download using your browser's standard mechanism:

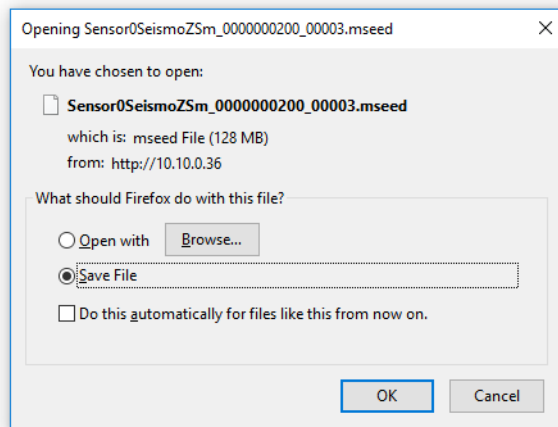


Multiple files can be downloaded simultaneously by ticking the boxes on the left of each link and clicking on **Download selected files** button.


The microSD cards are formatted with empty files which are filled with data as they become available. The file-names are also changed when the files are written to. Until they are written to, they are marked as "hidden" files, so that it is easier to see how many files contain data when looking at the contents of the card.

## 4. Downloading data for specific time-intervals

Data for a single stream spanning a specific time-interval can be downloaded from the Storage page of the web interface. To do this, start by selecting the desired stream from the drop-down menu:

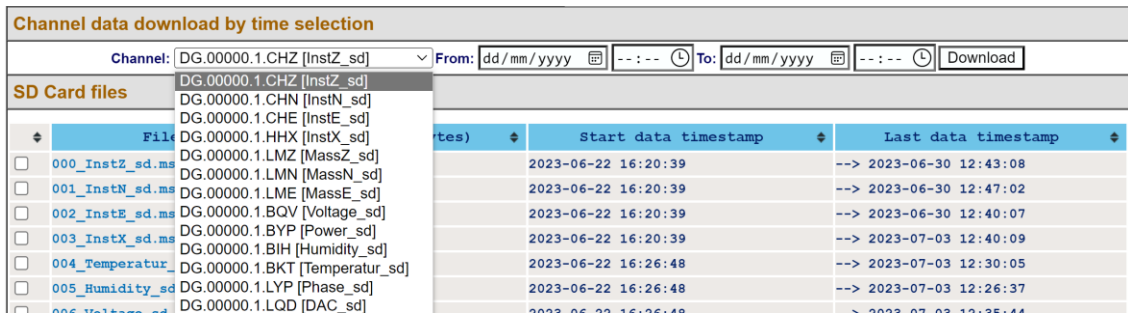

... then select the start and end dates and times using the pop-up calendars:

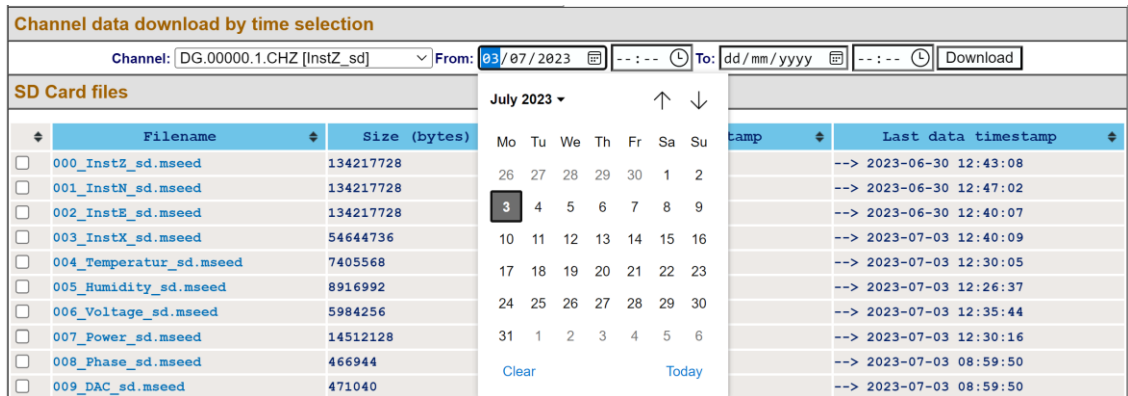

Lastly, click the **Download** download button to initiate a file transfer using your browser's standard mechanism.

## 5. Bulk data extraction

To view files saved on the external microSD card, remove the card, as described in Section 1.3.1 on page 1010. Insert the card into a microSD card reader (external or in-built) on your PC/laptop. Within a few seconds, the card should appear as a removable disk/drive.

A microSD card formatted for the Minimus<sub>2</sub> contains many "hidden" files. They are created at format time with no contents and then renamed, unhidden and filled with data as required.

When viewing files in Windows Explorer, it may be helpful to configure your system so that "hidden" files are not shown. In Windows 10, this can be done by clearing the "Hidden items" check-box within the ribbon of Windows Explorer.

## 6. The contents of the microSD card

The Storage tab on the web interface shows a list of files present on the SD card:



The screenshot displays the Minimus Lite web interface. At the top, there is a logo for 'güralp' with the tagline 'UNDERSTAND OPTIMISE PROTECT' and the device name 'Minimus Lite'. Below this is a navigation menu with options: Status, Network, Setup, Power, Trigger, Data Stream, Data Record, Storage (selected), Login, and Help. The system information section shows: System type: Minimus Lite | Host label: NO LABEL | Host name: MINL-1364 (10.30.0.31) | Serial number: 1364.

The 'SD Card control' section contains three buttons: 'Flush data', 'Unmount Cards', and 'Quick Format'. Below these is a 'QuickFmt:' progress indicator at 0%.

The 'SD Cards status' section contains two tables:

Internal microSD card present	PRESENT	External microSD card present	NOT PRESENT
Internal microSD card is recording samples	RECORDING	External microSD card is recording samples	NOT RECORDING
Number of 128-MiB miniSEED files	183	Percentage Free	85
SSM communications status	LOOKING FOR SSM	SSM microSD card status	DISABLED
microSD card raw capacity	124868608 KIB		

The 'Channel data download by time selection' section has a form with the following fields: Channel: DG.01364.1.CHZ [Inst\_sd], From: dd/mm/yyyy, To: dd/mm/yyyy, and a Download button.


The 'SD Card files' section contains a table with the following columns: File name, Size (bytes), Start data timestamp, and Last data timestamp.

File name	Size (bytes)	Start data timestamp	Last data timestamp
006_InstX_sd.mseed	134250496	1970-01-01 00:00:13	--> 2023-03-04 00:46:58
005_InstE_sd.mseed	134230016	2023-02-28 10:31:48	--> 2023-03-02 00:16:32
004_InstN_sd.mseed	134250688	2023-02-28 10:31:48	--> 2023-03-02 00:17:48
003_InstZ_sd.mseed	134230016	2023-02-28 10:31:48	--> 2023-02-28 10:31:52
007_Voltage_sd.mseed	134184960	2023-02-28 10:31:48	--> 2023-04-15 05:27:05
008_Power_sd.mseed	134217728	2023-02-28 10:31:48	--> 2023-04-15 05:40:33
009_Temperatur_sd.mseed	134217728	2023-02-28 10:31:48	--> 2023-04-15 05:11:56
010_Humidity_sd.mseed	40360000	2023-02-28 10:31:48	--> 2023-03-17 14:47:37
011_MassZ_sd.mseed	3788800	2023-02-28 13:07:57	--> 2023-03-17 09:20:45
012_MassN_sd.mseed	3788800	2023-02-28 13:07:57	--> 2023-03-17 09:20:45
013_MassE_sd.mseed	3788800	2023-02-28 13:07:57	--> 2023-03-17 09:20:45

The root directory of the disk contains seven items:

- a file named `init.log`. This “write-once” file contains the first 32 MiB of system log information since the card was last formatted.
- a file named `system.log`. This “re-use” file contains the last 64 MiB of the system log;
- a file named `status.log`. This “re-use” file contains the last 32 MiB of dumps of system state of health information. A new dump is generated every 20 minutes.
- a disk image file which Güralp technical support may ask you to use if you have problems with the card;
- a file named `table_of_events.bin`. This is not human readable: it is used by the Seismic Events Table in the “Trigger” tab
- a directory named `all_miniSEED_files_are_in_here`. Within this directory, there will be a miniSEED file for each recording channel. The file-name prefix is the same as the channel name description given in the “Data Record” tab. Each file is 128 MiB in size.

The typical contents of the `all_miniSEED_files_are_in_here` directory looks like this:

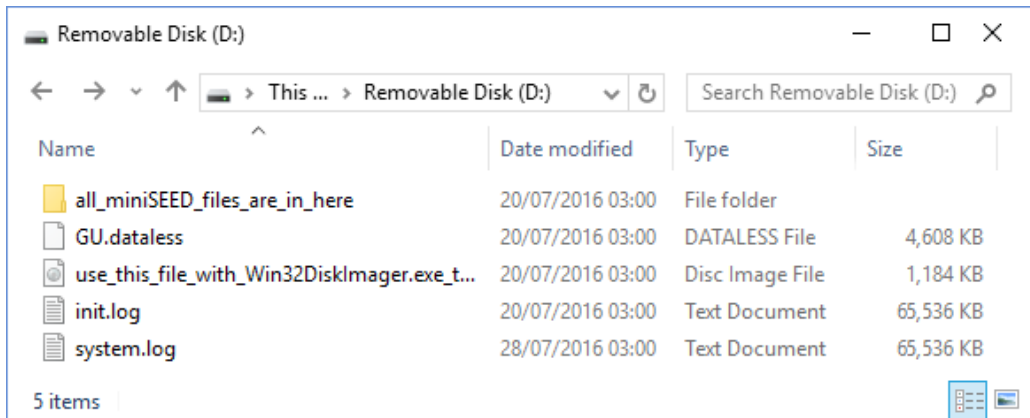

The file-name consists of four components:

- The stream name, truncated to 16 characters - see Section 4 on page 67 for a full list of these;
- The sample rate (in samples per second) as a ten-digit decimal number, left-padded with zeros;
- A number which functions as a counter to ensure unique file-names for all files. Each time a file is created, this number is incremented so that the next file to be created will use the next value; and
- The `.mseed` extension which identifies this as a miniSEED file.

The "Storage" tab also shows links to five auxiliary files, which are either saved in the flash RAM or are dynamically generated:

Auxiliary files	
Filename	Description
DG.dataless	Dataless SEED file
fram.log	FRAM log file
calvals.txt	SCREAM! calibration values
polezero.txt	SCREAM! zeros, poles and gains
calib.txt	Calibration text file

- `network.DATALESS` : This is a Dataless SEED volume that contains meta-data including instrument responses, coordinates, compression type and more. It is generated from the RESP files for each channel. The first component of the file name depends on the two-character Network code defined in the "Setup" tab. If, for example, this is `GU`, the file is called `GU.DATALESS`.
- `fram.log` : this is the FRAM log file. It is stored in FRAM.
- `calvals.txt` : this file contains calibration information in a format compatible with the Scream software package. It is dynamically generated.
- `calib.txt` - this file contains calibration information with poles, zeros etc expressed in hexadecimal notation. It is stored in FRAM.
- `polezero.txt` : this file contains definitions of frequency responses in a format compatible with the Scream software application. It is dynamically generated.

---

## 7. Time based download via Network

```
wget -v -t 50 --retry-connrefused --waitretry=10 -OinstZ.mseed
http://\$hx/data?channel=InstZ\_sd\&from=UTCSECSSINCE1970\&to=UTCSECSSINCE1970+3600 || rm -f instZ.mseed
```

The above wget run from a computer will fetch a one-hour (3600 second) miniSEED file from the main seismic Z channel. The channel names “InstZ\_sd” come from the Data Record Tab.

Time is specified as seconds since 1970 in standard Linux form.

\$hx represents the IP address or hostname of the Minimus<sub>2</sub>.

---

## 8. Request data from microSD card via Network

Files stored on the SD card can be downloaded using HTTP. The example bash script below can be used from a Linux PC or from the WSL shell on a Windows PC: It extracts all files from the SD Card into a directory named after the date and the network address of the Minimus<sub>2</sub>.

```
#!/bin/bash # Invoke with one argument: the network # address of the Minimus2
set -x

if [ "$#" -ne 1 ] ; then echo "Usage: $(basename $0) network_address" exit 1 fi

NET_ADDRESS=$1 DATE=$(date --iso-8601) SAVEDIR = ${DATE}_${NET_ADDRESS}

echo Saving to $$SAVEDIR mkdir $$SAVEDIR cd $$SAVEDIR

wget -rnp http://$NET_ADDRESS/tab9.html

cd ..

echo Done
```

---

## 16. Data transmission

The monitoring and configuration of transmitted data is handled using the “Data Stream” tab of the instrument’s web page.

Three streaming protocols are supported:

GDI – Güralp data interchange. This is used with Discovery and offers live, low latency data combined with channel metadata. All calibration and response information is contained within the stream

GCF – A legacy protocol for use with Güralp Scream.

SeedLink – An industry standard, packet-based protocol. The packetising causes potentially significant delays. Güralp has implemented various extensions to the protocol to reduce packet size and payload to speed up for early warning applications. The meta data is not conveyed within the stream. The dataless file is required to be




transferred separately to give calibration and response information. This can be error prone!


All 3 servers are active. Making the connection starts the stream.

This page allows to configure the transmitted channels for each of the connected instruments and sensors internal to the Minimus<sub>2</sub>.


The drop-down box at the top-left of the page named "Display Streams" filters out visible channels among Enabled and Disabled. The option "Apply configuration for tap groups" automatically apply the same configuration to three streams that belong to the same tap, *e.g.* OVELZ0, OVELN0, OVELE0. The drop-down box at the top-right of the page named "Display On Page" allows to move from different instruments, *e.g.* Sensor 1.

The page is divided in four columns:

- In most-left column, drop-down boxes are available for each channel to either select a sample rate or to exclude the channel from streaming (by selecting the "Disabled" option). All streaming can be stopped by clicking the  button. Same configuration can be applied to recorded channels by clicking the  button. Default channel configuration can be applied by clicking the  button.
- In third column from left, Location and Channel SEED codes can be configured. Cells are greyed out by default (default values applied) and they can be edited by clicking on the check-box;
- In most-right column contains links to the RESP files associated to each of the seismic channels (see Section 18.5 on page 4343).

Upon changing the sample rate, or changing Location and Channels codes, the Minimus<sub>2</sub> will need to be restarted for the changes to come into effect; this can be done by pressing the  button.

During the reboot, the LEDs will flash, displaying the starting-up sequence (see Section 1.1 on page 99) and the instrument web page will display the following screen.

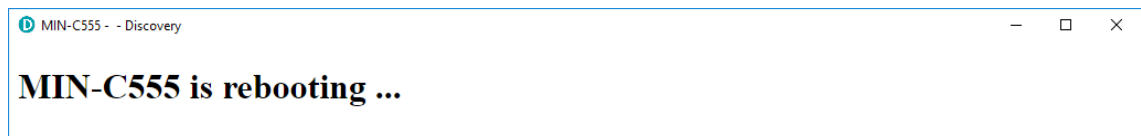

Once the Minimus<sub>2</sub> has successfully restarted, the full web browser display and controls will be available for use again.

---

## 1. Scream! (GCF format + Scream protocol)

The Minimus<sub>2</sub> can act as a Scream! Server and stream data by sending GCF (Güralp Compressed Format) packets over a network connection using the scream data-transmission protocol.

This is primarily intended to support Güralp's Scream! Software (see Section 7.2 on page 2121) or any software that can communicate using the Scream! Protocol, including Earthworm.

These include:

- Güralp instruments with embedded acquisition modules (*e.g.* 40TDE)
- Güralp DM24 and CD24 digitisers with embedded acquisition modules (*e.g.* Güralp DM24SxEAM[U])
- Güralp Affinity digitiser
- Network Acquisition Module (Güralp NAM)

---

## 2. GDI-link protocol

The Minimus<sub>2</sub> can transmit data using the GDI-link protocol. GDI-link can currently be used with:

- Güralp instruments with embedded acquisition modules (*e.g.* 40TDE)
- Güralp DM24 and CD24 digitisers with embedded acquisition modules (*e.g.* Güralp DM24SxEAM[U])
- Güralp Affinity digitisers
- Güralp NAM (Network Acquisition Module)
- Earthworm software ([www.isti.com/products/earthworm/](http://www.isti.com/products/earthworm/))

GDI-link supports both data push and pull from/to the Minimus<sub>2</sub>. See Section 13 on page 2727 to configure data push to one or more remote clients, *e.g.* NAM.

GDI-link provides a highly efficient, low latency method of exchanging data via TCP between seismic stations and data centres. The protocol allows state-of-health information to be attached to samples during transmission. The topology can be many-to-one or one-to-many. This means that a receiver can accept data from multiple transmitters and a single transmitter can send data to multiple receivers, allowing maximum flexibility for configuring seismic networks. GDI-link streams data sample-by-sample (instead of assembling them into packets) to minimise transmission latency.

A significant advantage of GDI-link is that it has the ability to stream data pre-converted into real physical units instead of just as raw digitiser counts, obviating a requirement for receivers to be aware of calibration values.

For more information on GDI-link, please refer to Güralp manual [SWA-RFC-GDIL](#).

---

## 3. SeedLink Protocol

The Minimus<sub>2</sub> can act as a SeedLink server to send SeedLink data packets over a network connection. The SeedLink server is enabled by default but it can be disabled and re-enabled if desired. The server has a configurable back-fill buffer.

In the “Network” tab of the ' web page, select the desired SeedLink mode:

SeedLink settings			
SeedLink	Enabled, 65536 records	Send status.txt Every	300 seconds
		SeedLink Data Packet Format	Optimal
		Send SeedLink EEW Packet Every	0 deciseconds

The choices are:

- “Enabled” - This is the normal operating mode. Choose between backfill buffer sizes of 2,048 records, 65,536 records or 139,264 records.
- “Disabled” - turns off the SeedLink server.
- “Debug” - this mode produces additional messages in the file `seedlink.log` which may be helpful if trying to diagnose a problem. It is available with backfill buffer sizes as before and, additionally, a 512-record buffer. (622,592 is listed but not implemented).

Standard SeedLink has a fixed packet size of 512 Bytes and each miniSEED packet is completely populated with data before it is transmitted. The Minimus<sub>2</sub> supports a modified version of SeedLink that allows the transmission of incomplete packets. This improves latency.

The user can specify the rate at which miniSEED packets must be transmitted. If populating complete packets would result in this rate not being achieved, incomplete packets are transmitted instead. The number of samples in each packet, therefore, depends both upon this setting and on the sample rate.

In the “Network” tab of the web page, select the interval in deciseconds (1 decisecond = 100 ms or 0.1 seconds) between miniSEED packets (“Send SeedLink EEW Packets Every”).

Network Config					
DHCP	Enabled				
DNS1	209.244.0.3	DNS2	84.200.69.80	Reboot	
Web Login	Required	Username (Normal)	user	Password (Normal)	***** HTTP Port 80
Web Timeout	Never	Username (Admin)	admin	Password (Admin)	*****
SeedLink	Enabled, 65536 records	Send status.txt Every	300 seconds	SeedLink Data Packet Format	Optimal
Data Record Size	512 Bytes	TFTP Server	10.30.255.197	TFTP File	
				Send SeedLink EEW Packet Every	10 deciseconds

The modified SeedLink protocol also allows the use of 256-byte records as an alternative to the standard 512-byte format. The “Data Record Size” drop-down menu on the “Network” tab of the web page controls this behaviour.

Network Config					
DHCP	Enabled				
DNS1	209.244.0.3	DNS2	84.200.69.80	Reboot	
Web Login	Required	Username (Normal)	user	Password (Normal)	***** HTTP Port 80
Web Timeout	Never	Username (Admin)	admin	Password (Admin)	*****
SeedLink	Enabled, 65536 records	Send status.txt Every	300 seconds	SeedLink Data Packet Format	Optimal
Data Record Size	512 Bytes	TFTP Server	10.30.255.197	TFTP File	
				Send SeedLink EEW Packet Every	10 deciseconds
Network Timing	512 Bytes				
	256 Bytes				
PTP		PTP Offset		PTP	

**Note:** Not all SeedLink clients can accept 256-byte records. Consult your client's documentation if in doubt.

To test the SeedLink server, Güralp recommends using the *slinktool* software for Linux, which is distributed by IRIS. For more information and to download a copy, see <http://ds.iris.edu/ds/nodes/dmc/software/downloads/slinktool/>.

To show a list of available miniSEED streams, issue the command:

```
slinktool -Q IP-Address
```

Which produces output like the following:

```
DG TEST 00 CHZ D 2016-09-13 10:42:18 - 2016-09-13 10:46:56
DG TEST 01 HHZ D 2016-09-13 10:42:18 - 2016-09-13 10:46:56
DG TEST 00 CHN D 2016-09-13 10:42:18 - 2016-09-13 10:46:56
DG TEST 01 HHN D 2016-09-13 10:42:18 - 2016-09-13 10:46:56
DG TEST 00 CHE D 2016-09-13 10:42:18 - 2016-09-13 10:46:56
DG TEST 01 HHE D 2016-09-13 10:42:18 - 2016-09-13 10:46:56
DG TEST 00 MHZ D 2016-09-13 10:42:18 - 2016-09-13 10:46:56
DG TEST 00 MHN D 2016-09-13 10:42:18 - 2016-09-13 10:46:56
DG TEST 00 MHE D 2016-09-13 10:42:18 - 2016-09-13 10:46:56
:
```

To print miniSEED data records of a single channel, you will need the following command:

```
slinktool -p -S DG_TEST:00HNZ.D IP-Address
```

Which produces the following output:

```
DG_TEST_00_HNZ, 412 samples, 100 Hz, 2016,257,10:43:42.000000
(latency ~2.9 sec)
DG_TEST_00_HNZ, 415 samples, 100 Hz, 2016,257,10:43:46.120000
(latency ~2.6 sec)
DG_TEST_00_HNZ, 416 samples, 100 Hz, 2016,257,10:43:50.270000
(latency ~3.0 sec)
DG_TEST_00_HNZ, 413 samples, 100 Hz, 2016,257,10:43:54.430000
(latency ~2.6 sec)
DG_TEST_00_HNZ, 419 samples, 100 Hz, 2016,257,10:43:58.560000
(latency ~3.0 sec)
DG_TEST_00_HNZ, 418 samples, 100 Hz, 2016,257,10:44:02.750000
(latency ~2.6 sec)
DG_TEST_00_HNZ, 415 samples, 100 Hz, 2016,257,10:44:06.930000
(latency ~3.0 sec)
:
```

The SEEDlink server on the Minimus<sub>2</sub> also supports the use of the “?” character as a wild-card within network, station and channel codes. This allows you to request multiple streams using a single command.


**Note:** Because the ? character has special meaning to the shell, it is safest to quote this character with a preceding backslash ('\') when used in command arguments.

## 1. MiniSEED extractor

The miniSEED extractor serves two purposes:

- When an SD card is quick-formatted, each file is marked as unused but previously recorded data can still remain in them. Subsequent recordings overwrite these files from the beginning but, if the previous recording had a longer duration, old data will remain in the files. When the files are copied from the SD card to a PC, these older data can cause problems.
- The format used on the SD cards consists of fixed-length, 128 MiB files. Some recordings might not use all of this space. When the files are copied from the SD card to a PC, this can cause wasted disk space.

The miniSEED extractor reads miniSEED files on the PC and copies them to a selected Destination folder, keeping track of the latest block time-stamp as it goes. If it encounters either an unused block or a time-stamp which is earlier than the previous one, it stops copying, truncating the output file at that point. This guarantees that each output file contains only blocks in time order and contains no wasted space.

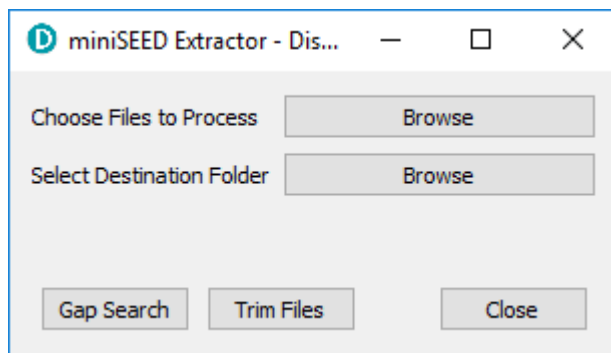

To use the tool, select "miniSEED Extractor" from the Edit menu. Click the first  button to select which files you wish to process and then the second  button to select the folder into which you wish the output files to be written. Finally, click the  button to extract the valid data from the selected files into new files in the selected destination folder.

The same tool can also generate a report of any gaps in the data from the input files. To use, select the input files as before and then click  to view the report.

---

## 17. Synchronisation of the sample-clock

The Minimus<sub>2</sub> system synchronises its sample clock using an attached GNSS receiver or, if that is not available, Precision Time Protocol (PTP).

The currently supported GNSS systems are Navstar (GPS), GLONASS, BeiDou and Galileo.




**Note:** The GNSS can use only three different types of satellites simultaneously and GPS is always used, if available. The other two spots available can be either GLONASS, BeiDou or Galileo.

If visibility of the satellite constellation is available, this is the most accurate way to synchronise your digitiser. The Minimus<sub>2</sub> accessory pack includes a combined GNSS antenna and receiver for this purpose: see Section 2.2 on page 1212 for details.

## 1. GNSS lock status

This is available in the “Status” tab of the instrument’s web page.

GNSS Status			
GNSS connection status	Connected	Last timestamp	2023-07-03 13:12:11
Last lock time	2023-07-03 10:56:43	GNSS stability	100%
Latitude	51.361225	Longitude	-1.164062
Altitude	113.7	Horizontal dilution of precision	1.00
GNSS PPS status	Trusted Pulsing	GNSS NMEA stream	Input OK
GNSS Lock state	3D locked	Number of satellites	Used: 9 In view: 14

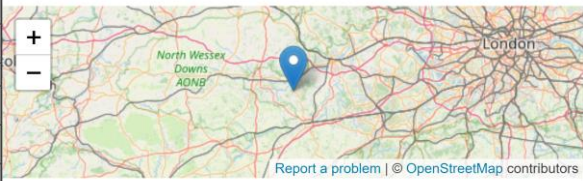

A number of GNSS reporting parameters are given, including:

- Connection status
- Last GNSS update (sync) & last GNSS lock date/time
- GNSS Stability:
  - 0% = no receiver connected;
  - 1% = receiver connected, but waking up (this can occur if the GNSS receiver has been moved a long distance since last power-up).
  - 2-99% = view of sky obstructed.
  - 100% = normal operation with clear view of sky
- Latitude, longitude, altitude
- Horizontal dilution of precision (quality of satellite fix due to position of satellites relative to receiver)
- GNSS PPS status
- GNSS NMEA streaming
- GNSS lock state (2D/3D)
- Number of available satellites (in use / in view)
- 

## 2. PTP (Precision Time Protocol)

The Minimus<sub>2</sub> system currently does NOT support PTP.

---

## 18. Configuration and control of connected analogue instruments

---

### 1. Setting instrument type

The analogue sensor type is user-selectable and the Minimus<sub>2</sub> includes a choice of several Güralp sensors and accelerometers. If the sensor is not in the list, select “Generic velocity” or “Generic acceleration”, according to the instrument's response.

A reboot is required after this change.

---

### 2. Setting instrument (sensor) gain for Güralp Fortis

The Güralp Fortis strong-motion accelerometer features a remotely-switchable gain option that can be controlled from inside Discovery. First, ensure that the physical gain switch on the underside of the Fortis is set to position “3” (as indicated by the engraving). See [MAN-FOR-0001](#) for more details.

To change the gain electronically, first, set the “Instrument Type” to “Güralp Fortis”. Setting this option will then enable the “Instrument Gain” control. Under the “Instrument Gain”, select a gain setting (options:  $\pm 0.5g$ ;  $\pm 1g$ ;  $\pm 2g$ ;  $\pm 4g$ ).

Setting the instrument type to “Fortis” will also change the miniSEED channel names to indicate that data are recorded from an accelerometer, *e.g.* “HNZ”.

Analogue Sensors			
Analogue to Digital Converter			
Input gain	x1.0	Input range	+/- 20.48 V
		Input resolution	2.441 uV/count
Identification			
Sensor type	Guralp Fortis		
Response			
Fortis Range	-0.5g; +0.5g	Fortis Loop	Normal
	-0.5g; +0.5g		
Mass Centring			
Centre Mass	-1.0g; +1.0g	Mass Readout Z	-0.00375 V
	-2.0g; +2.0g	Mass Readout N	-0.00312 V
	-4.0g; +4.0g	Mass Readout E	-0.00375 V
Calibration			
Calibration		Amplitude	100%
		Channel	Normal

---

### 3. Setting digitiser gain

The input gain can be controlled from the "Setup" tab of the web page using the “Input Gain” drop-down box. Digitiser gain options available are: Unity,  $\times 2$ ,  $\times 4$ ,  $\times 8$  and  $\times 12$ .

Analogue Sensors			
Analogue to Digital Converter			
Input gain	x1.0	Input range	+/- 20.48 V
	x1.0	Input resolution	2.441 uV/count
	x2.0	Identification	
Sensor type	Guralp Fortis		
	x4.0	Response	
Fortis Range	-0.5g	Fortis Loop	Normal
	x8.0		
	x12.0	Mass Centring	
Centre Mass		Mass Readout Z	-0.00375 V
		Mass Readout N	-0.00312 V
		Mass Readout E	-0.00375 V
Calibration			
Calibration	Off	Amplitude	100%
		Channel	Normal

The input range and resolution change automatically when the gain is selected and the gain in the RESP files and Dataless SEED is updated automatically.

## 4. Mass control

The Minimus<sub>2</sub> can lock, unlock and centre the masses of connected instruments.

### 1. Mass centring

Many broadband seismometers (*e.g.* Güralp 3T and 3ESPC) support remote/electronic mass centring. Change the polarity of the control signal using the drop-down menu if necessary.

Identification					
Sensor type	Generic velocity	Status LED	Idle		
Mass Centring					
Centre Mass	Mass Readout Z	-0.00375 V	Mass Readout N	-0.00312 V	
	Mass Readout E	-0.00375 V			
Mass Locking					
Lock Mass		Unlock Mass			
Calibration					
Calibration	Off	Amplitude	100%	Channel	Normal
Control Polarity					
Mass Lock Polarity	Active Low	Mass Unlock Polarity	Active Low	Centring Polarity	Active Low
					Active Low
					Active High
Digital Sensors					
Selection					

Mass centring can be controlled from the "Setup" tab of the web page using the [Centre Mass](#) button. Mass centring status and control can also be found in the Centring tab of the instrument Control Centre window.

### 2. Mass locking

Some seismometers require their masses to be locked for transportation. Mass locking can be controlled from the "Setup" tab of the web page using the [Lock Mass](#) and [Unlock Mass](#) buttons. Change the polarity of the control signals using the drop-down menu, if necessary.

**Note:** The mass lock control buttons are not displayed unless the selected sensor type has a mass-locking mechanism.

## 5. Instrument response parameters

Calibration is a procedure used to verify or measure the frequency response and sensitivity of a sensor. It establishes the relationship between actual ground motion and the corresponding output voltage. Calibration values, or response parameters, are the results of such procedures.

Response parameters typically consist of a sensitivity or "gain", measured at some specified frequency, and a set of poles and zeros for the transfer function that expresses the frequency response of the sensor. A full discussion of poles and zeros is beyond the scope of this manual.

The gain for a seismometer is traditionally expressed in volts per  $\text{ms}^{-1}$  and, for an accelerometer, in volts per  $\text{ms}^{-2}$ . Other instruments may use different units: an electronic thermometer might characterise its output in mV per  $^{\circ}\text{C}$ .

A calibration procedure is also used to establish the relationship between the input voltage that a digitiser sees and the output, in counts, that it produces. The results are traditionally expressed in volts per count. Each Minimus<sub>2</sub> is programmed at the factory so that it knows its own calibration values.

Although the Minimus<sub>2</sub> automatically receives calibration parameters from connected digital instruments (*e.g.* Güralp Certis), calibration values need to be entered manually for connected analogue sensors (*e.g.* Güralp Fortis).

To enter the calibration values for your analogue instruments, right-click the Minimus<sub>2</sub> in Discovery's main window and select "Calibration" → "Calibration Editor".


This form has one tab for each seismic component, for the mass positions and calibration channel. The instrument's response values should be entered in the here. These are:

- The **Digitiser Volts per Count (VPC)** – the ratio between the input voltage and the digitised output value ("counts"). This field will be populated automatically with the correct value for this input channel of the Minimus<sub>2</sub>.
- **Analogue Instrument Gain** – this specifies the output voltage of the seismometer per unit of ground motion, as measured at 1 Hertz. This information is normally provided on a calibration document that is shipped with the instrument.
- The **ADC offset** is the quiescent output seen when digitiser input is zero. This field will be populated automatically with the correct value for this input channel of the Minimus<sub>2</sub>.
- The **Coil constant** is the coil constant for the component being calibrated, in  $\text{A}/\text{ms}^{-2}$ , as given on the analogue sensor calibration sheet.
- The **Calibration resistor** is the value of the calibration resistor, in  $\Omega$ , as given on the sensor calibration sheet. This is common to all sensor components.
- The **Normalising factor** specifies the value that the transfer function (as specified by the poles and zeros) must be multiplied by in order to provide unity gain at 1 Hz.
- The **Poles** and **Zeros** describe the frequency and phase response of the component. They must be specified in Hertz. This information is normally provided on a calibration document that is shipped with the instrument.


The calibration parameters for one component can be copied to any other component of the same instrument, or other instruments. This is especially useful for poles and zeros, because they are typically identical for all three components of all instruments in a class.

The drop-down menu in the "Component configuration" section allows selection of what to copy: poles and zeros, gains or everything. The destination sensor and component(s) can be selected in the subsequent drop-down menus. Click on the

button to copy and paste the selected values. Finally click on  button to send the calibration values to the digitiser and save them permanently. Repeat this last step for the other axis. Note that  only sends the calibration of the selected axis.

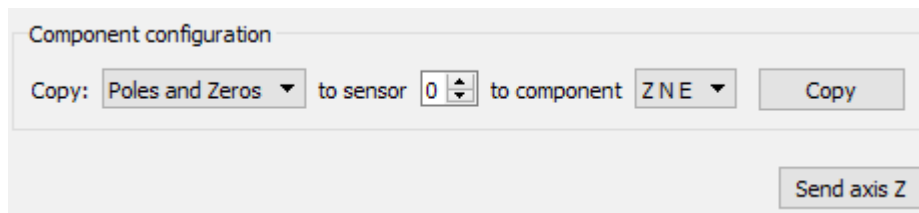

The overall system calibration parameters can be exported and saved in a file for future use by clicking on the  button under "System calibration values".

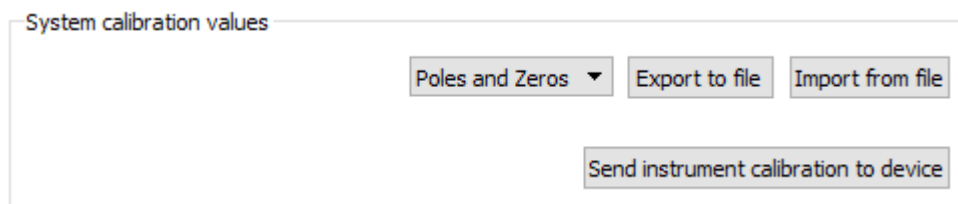

The resulting file-name will have the extension `.conf`. Values from an existing calibration file can be imported using the  button. The associated drop-down menu allows specification of what to import: poles and zeros, gains or everything. Click on  to send the calibration values to the digitiser and save them permanently. Note that this action will only send the calibration of the selected sensor. Click on the  button to send the complete calibration to the digitiser.

When transmitting MiniSEED data, the responses of the instruments and digitisers are encoded in a message called a "Dataless SEED" volume. The contents of these volumes can be displayed in human-readable form, known as RESP, by clicking on the "RESP file" link of each channel in the "Data Stream" and "Data Record" tab of the web page.


Clicking on a RESP file link produces a page like this:

```


#          << Guralp SEED response file builder v2.1-10402 >>
#
#          ===== CHANNEL RESPONSE DATA =====
B050F03  Station:      00000
B050F16  Network:       DG
B052F03  Location:        1
B052F04  Channel:         CHZ
B052F22  Start date:     2023,184,10:44:18
B052F23  End date:       No Ending Time
#
#          +-----+-----+
#          |                                     |
#          | Channel Sensitivity, 00000 ch CHZ |
#          +-----+-----+
#
B058F03  Stage sequence number:      0
B058F04  Sensitivity:                4.184100E+05
B058F05  Frequency of sensitivity:  1.000000E+00 HZ
B058F06  Number of calibrations:    0
#
#          +-----+-----+
#          |                                     |
#          | Response (Poles & Zeros), 00000 ch CHZ |
#          +-----+-----+
#
#
B053F03  Transfer function type:      A [Laplace Transform (Rad/sec)]
B053F04  Stage sequence number:      1
B053F05  Response in units lookup:    M/S - Velocity in Metres Per Second
B053F06  Response out units lookup:     V - Volts
B053F07  A0 normalization factor:    1.000000E+00
B053F08  Normalization frequency:     1.000000E+00
B053F09  Number of zeroes:              0
B053F14  Number of poles:              0
#
#          +-----+-----+
#          |                                     |
#          | Channel Gain, 00000 ch CHZ |
#          +-----+-----+
#
#
B058F03  Stage sequence number:      1
B058F04  Gain:                      1.000000E+00
B058F05  Frequency of gain:           1.000000E+00 HZ
B058F06  Number of calibrations:    0
#

```

Right-click anywhere and select "Back" to return to the web page.

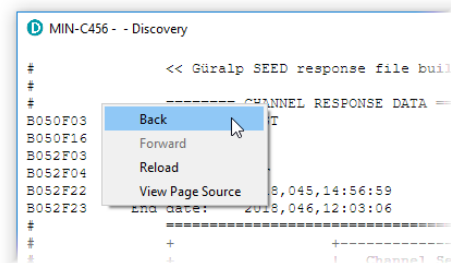

To save a RESP file, right click on it in the main list and select "Save Link":

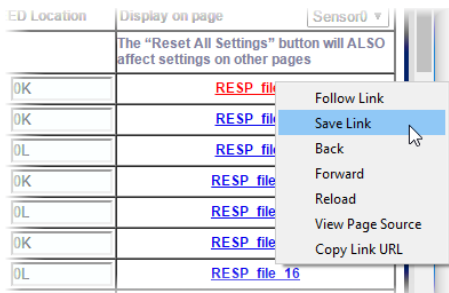

## 19. Configuration and control of connected digital instruments


Minimus<sub>2</sub> supports the Güralp Certis instrument. This can be connected either as a Digital instrument or a traditional Analogue device. The same cable is used in either case.

In the case of the digital connectivity, the serial connection conveys meta data in addition to the seismic signals. Information such as temperature, internal humidity, mass positions are all made available.

### 1.1.1 Inject a calibration signal


To check whether the analogue sensor(s) connected to the Minimus<sub>2</sub> is correctly calibrated, go to the Setup tab of the web page and use the drop-down menu to choose between Triangle, Square and White Noise signal to be injected into the sensor's feedback loop.

Adjust the calibration signal amplitude at 100%, 50%, 25% or 12.5% of the DAC full range.

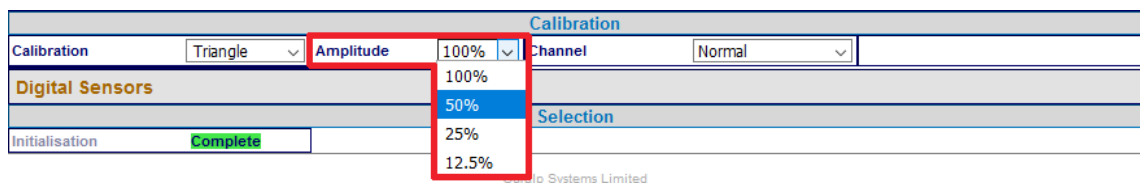

The screenshot shows a web interface for calibration. At the top, there is a 'Calibration' section with a dropdown menu set to 'Triangle', an 'Amplitude' dropdown menu set to '100%', and a 'Channel' dropdown menu set to 'Normal'. Below this is a 'Digital Sensors' section with a 'Selection' dropdown menu. The 'Amplitude' dropdown menu is open, showing options: 100%, 50%, 25%, and 12.5%. The '50%' option is highlighted. At the bottom left, there is a status indicator 'Initialisation Complete'.


Finally, enable the calibration on all three components of the selected analogue sensor.

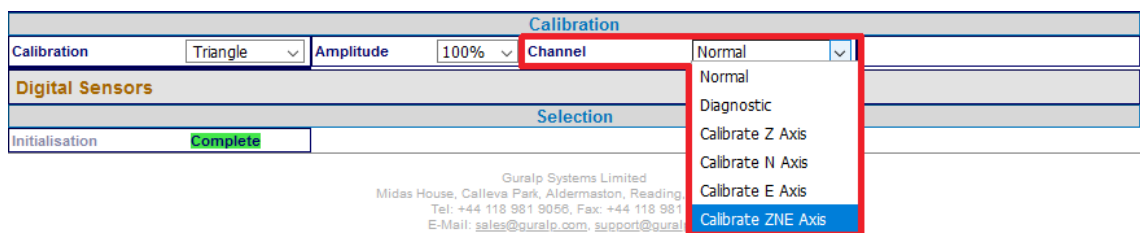

The screenshot shows the same web interface as above. The 'Channel' dropdown menu is open, showing options: Normal, Diagnostic, Calibrate Z Axis, Calibrate N Axis, Calibrate E Axis, and Calibrate ZNE Axis. The 'Calibrate ZNE Axis' option is highlighted. At the bottom, there is contact information for Güralp Systems Limited: Midas House, Calleva Park, Aldermaston, Reading, Tel: +44 118 981 9058, Fax: +44 118 981, E-Mail: sales@guralp.com, support@guralp.com.

**Note:** The calibration channel, named *nVELCO* (or *nACCCO*), produces an output if and only if the calibration is in progress.

While the calibration is in progress, the webpage shows the warning message **Calibration in progress** and Discovery flags the status icon in yellow.

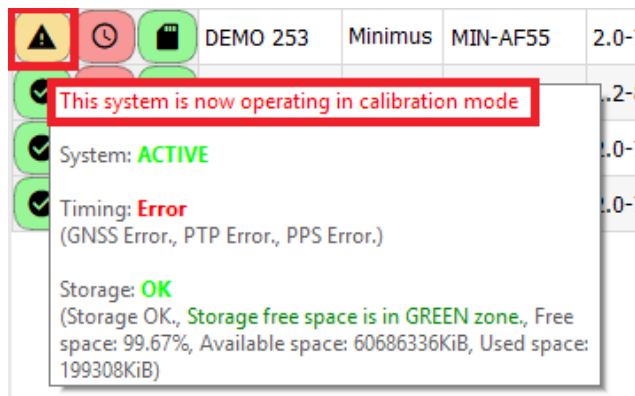

---

## 20. Earthquake Early Warning

The “Trigger” tab is dedicated to Earthquake Early Warning settings. These are disabled by default because of the amount of processing resource – and hence, power – consumed by triggering calculations.

---

### 1. Trigger Configuration

The Trigger Configuration section of the web page under the Triggers tab enables the user to configure the triggering system. The trigger taps should first be selected from the drop-down list of all possible triggering sources.

Once this is selected, options will appear to enable the sending of a CAP message, registering the event under the event table, and the sample rate the trigger will use. This sample rate is recommended to keep the same as the source. Ie a 100sps instrument channel should be sampled at 100sps to perform the best STA/LTS calculations.

The heart of the Earthquake Early Warning subsystem are the triggering algorithms: an STA/LTA (Short-Time-Average divided by Long-Time-Average) and level (threshold) algorithms.

The STA/LTA algorithm continuously calculates the average values of the absolute amplitude of a seismic signal in two simultaneous moving-time windows. The short-time-average (STA) is sensitive to seismic events while the long-time-average (LTA) provides information about the current amplitude of seismic background noise at the site.

When the ratio of STA to LTA exceeds the set threshold value an event is “declared”, and this event ends when the ratio falls below the de-trigger threshold. The STA/LTA periods and the cut-off frequency of the high pass filter can be modified when trigger type is set to STA/LTA.

The threshold algorithm, instead, declares the presence of an event when the raw data in input passes above or below a pre-set threshold value, and ends when the event raises above this value. To trigger below a value instead of above, simply set the de-trigger threshold to be higher than the trigger threshold.



Trigger Configuration							
Trigger 0 Configuration							
Trigger Tap 0	CertisZ0	Cap Enabled 0	yes	Event Table Enabled 0	yes	Trigger SPS 0	200 Hz
Trigger Threshold 0	10	Detrigger Threshold 0	6	Trigger Type 0	STA/LTA		
STA Period 0	0.4 s	LTA Period 0	60 s	HPF Cutoff 0	10 Hz		
Trigger 1 Configuration							

## 2. EEW Configuration

The EEW Configuration section of the web page under the triggers tab controls the CAP message configuration parameters, which include the IP address and Port No. of the CAP message receiver as well as other configuration parameters for the contents of the CAP message.

## 3. CAP receiver

Güralp Discovery includes a CAP (Common Alerting Protocol) receiver. It listens on a specified UDP port for incoming CAP messages. When one arrives, it is displayed and plotted on a map. In addition, the receiver can open a TCP connection to the cloud-based registry server and display CAP messages that have been sent to the registry server. See Section 21 on page 52 for information about configuring a registry server.

All CAP messages can be stored in a log-file. The full message is recorded so that it can be re-loaded later, if required.

The CAP receiver functionality is accessed using the context (right-click) menu in Discovery or clicking on “Edit” in the menu bar:

The screenshot shows the 'Güralp Systems — Discovery' application window. A table lists various systems with columns for System, Name, Firmware Ver, WAN Address, LAN Address, Uptime, Last Contact, Latitude, Longitude, and Tini. A context menu is open over the 'CAP Receiver' system, showing options like 'Status', 'MiniSEED Extractor', 'Powerboard Control', 'OBS', 'Sensor Test', 'Sensor Assign', 'Binder Interface', 'Database Entry Form', 'Comet NO LABEL', 'Comet Tin's', and 'Comet NO LABEL'. The 'CAP Receiver' system is highlighted in blue.

System	Name	Firmware Ver	WAN Address	LAN Address	Uptime	Last Contact	Latitude	Longitude	Tini
CAP Receiver	MIN-7763	2.1-20848	0.0.0.0	10.30.0.27	20:40:44	Just Now	51.3612	-1.1640	100
MiniSEED Extractor	MIN-7063	2.1-20675	0.0.0.0	10.30.0.80		Just Now	-59.9080	99.4750	99
Powerboard Control	MIN-6658	2.1-17622	0.0.0.0	10.30.0.36		Just Now	51.3611	-1.1641	100
OBS	MIN-7063	2.1-20675	0.0.0.0	10.30.0.39		Just Now	51.3616	-1.1640	0
Sensor Test	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Sensor Assign	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Binder Interface	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Database Entry Form	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Comet NO LABEL	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Comet Tin's	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Comet NO LABEL	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Comet test3	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Comet test1	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Comet test2	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Comet test6	MIN-6657	2.1-12720	0.0.0.0	10.30.0.44		Just Now	-59.9080	87.7900	0
Active Platinum	NAM	hassium	1.0-15695	0.0.0.0	169.254.36.116	Just Now	0.0000	0.0000	0
Active Comet Platinum	NAM2	sapphire	1.0-15809	0.0.0.0	10.30.0.121	Just Now	0.0000	0.0000	0


The CAP receiver window allows specification of the listening port. Each digitiser from which messages should be received must have this value specified as the “CAP Port” in its triggering settings. The value should be between 1025 and 65535. You should avoid numbers in the list at


[https://en.wikipedia.org/wiki/List\\_of\\_TCP\\_and\\_UDP\\_port\\_numbers](https://en.wikipedia.org/wiki/List_of_TCP_and_UDP_port_numbers).


The reception of CAP messages can be enabled or disabled clicking on the



Start

If you wish to forward the CAP messages to a server, type its IP address into the field and tick the check-box named “Use forwarding server”. An error message is displayed if the entered IP address is not valid.

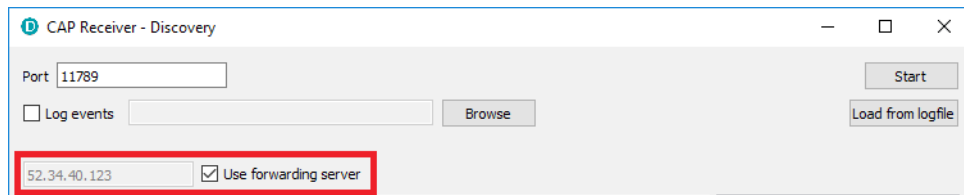


To log CAP messages to a file, tick the “Log events” check-box and use the  button to select an appropriate location for the database file.

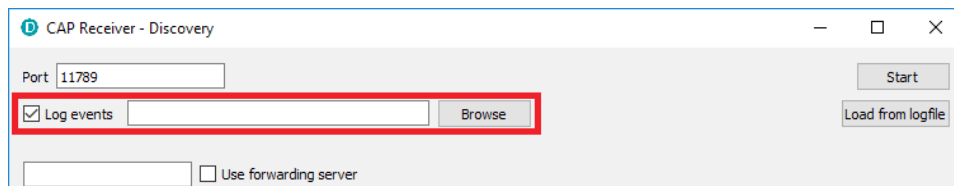


To import an existing database of events, first enable logging, then browse to the file using the  button and, finally, click the  button to load the file. If no file is specified, the logging is automatically switched off and a pop-up message is displayed.

When an event is detected and a CAP message is received, the location of the digitiser that generated the trigger is identified by a pointer displayed on the map. The events and the information contained in the CAP message are displayed at the right-hand side of the window. This includes the SEED identifiers, network, station, channel and location, along with the time, the recipients and the threshold value which was exceeded.

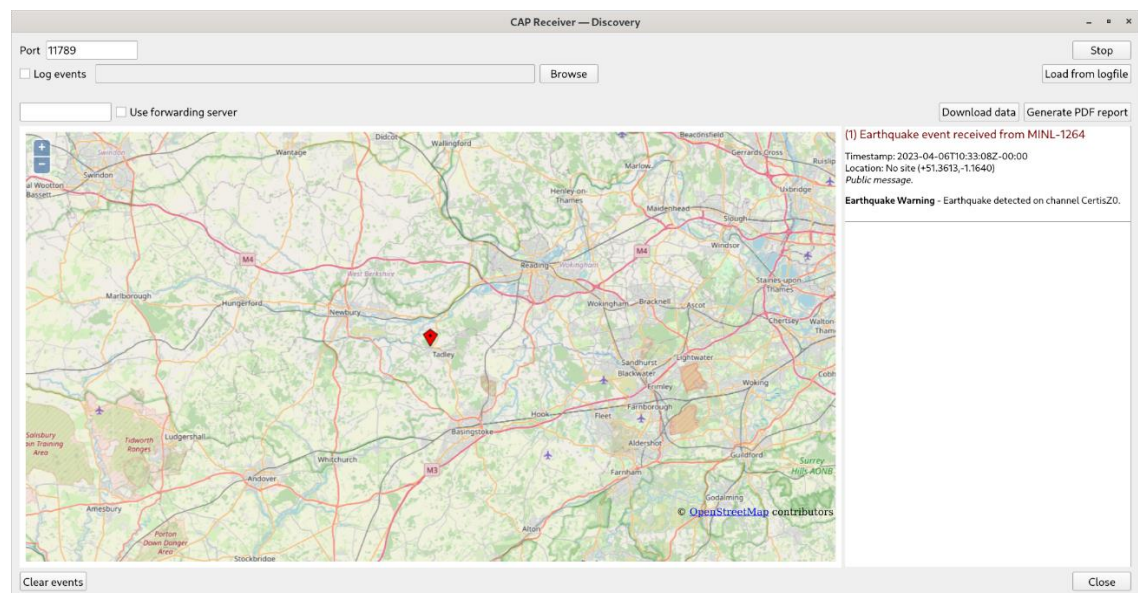


If the EEW parameters are enabled in a particular source, after the first CAP message containing the event information, three other messages with the PGA/PGV/PGD details are sent, one for each component.

Click on the  button to clear markers from the map and descriptions from the right-hand-side list. This action does not affect the contents of the log-file.

## 4. STA/LTA Streams

Once a trigger has been enabled a reboot is required. Additional streams will then be available showing the calculated STA (Short term average), LTA (Long term average) and Ration of STA/LTA

The value of this ration is thresholded as configured in the above menu. It is useful to vie the streams to get a feel for the ratio values and time constants.

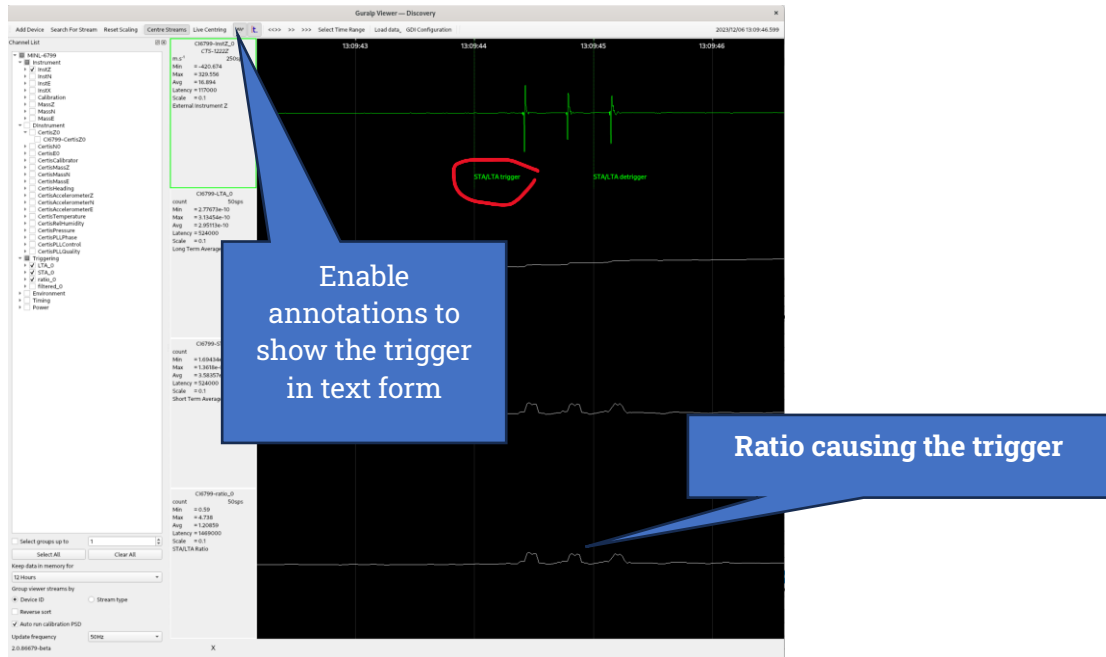

## 5. Seismic Event Table

The Minimus<sub>2</sub> can generate a “Seismic Event Table”. This is list of events detected by the STA/LTA or threshold trigger enabled on taps. It contains information about the time when the event occurred, its duration, the channel that generated the trigger and the peak magnitude of the event. The seismic data before, during and after the event are saved in miniSEED format and can be downloaded using links in the table.

The table is located at the top of the “Trigger” tab in the web page.

Download Settings:		Seconds Pre	Seconds Post		
		10	10		
Time of Event	Duration	Trigger Function (Tap)	Max Signal Diff	Download Source Tap	Download
Wed Apr 5 18:00:59 2023	< 1 second	STA/LTA trigger on channel CertisZ0	(CertisZ0_tr)246 m.s	CertisZ0_sd	<a href="#">Request Event Data</a>
Wed Apr 5 17:34:00 2023	< 1 second	STA/LTA trigger on channel CertisZ0	(CertisZ0_tr)255 m.s	CertisZ0_sd	<a href="#">Request Event Data</a>
Wed Apr 5 17:31:27 2023	1 seconds	STA/LTA trigger on channel CertisZ0	(CertisZ0_tr)255 m.s	CertisZ0_sd	<a href="#">Request Event Data</a>
Wed Apr 5 17:12:09 2023	1 seconds	STA/LTA trigger on channel CertisZ0	(CertisZ0_tr)197 m.s	CertisZ0_sd	<a href="#">Request Event Data</a>

---

## 21. Using a Registry

Discovery can maintain a list of digitisers in a local or cloud-based registry, simplifying management of medium to large networks and removing the need for static IP addresses at telemetered stations. Registered digitisers appear in the selection list in the main screen, regardless of whether they are on the local network or not.

Administrators can create their own registry servers by installing a simple program on a server (contact [support@guralp.com](mailto:support@guralp.com) for more details). The server itself must have a static IP address and be accessible to all connected Minimus<sub>2</sub> units, as well as the PCs running discovery. Registry server's programs are currently available for Linux and Windows. Please contact Guralp technical support for details.

For administrators not wishing to install their own registry, Guralp provide a shared registry server in the cloud at 52.34.40.123 which customers are welcome to use.

Registered digitisers must be assigned to groups, each of which has a **Group Identifier**. Instances of Discovery must also be configured with a Group ID and can only display registered digitisers from the matching group. This allows partitioning of large networks into smaller administrative domains. It also makes possible the simultaneous use of the Guralp shared registry server by multiple organisations.


To use a registry:


1. Choose whether to use the Guralp shared registry or to deploy your own. If deploying your own, install the software on your chosen server and note its public IP address.
2. Choose one or more Group IDs for your digitisers.
3. Set the Registry server address and Group ID in each Minimus<sub>2</sub>.
4. Set the Registry server address and Group ID in each instance of Discovery.

---

### 1. Configuring a Minimus2 for use with a registry

The address of the registry server and the chosen Group ID must be set individually for each participating digitiser.

To do this, first connect the Minimus<sub>2</sub> to the same network as a PC running Discovery and click the  button, so that the Minimus<sub>2</sub> appears in the main

Discovery list. Right-click () on the digitiser's entry and select "View Web Page" from the context menu:

In the resulting web page, select the “Network” tab. The Registry parameters can be found near the bottom of the resulting screen:

Registry					
Registry Update	Every 10Secs ▾	Group ID	NothernArray	Registry Address	52.34.40.123


These are:

- **Registry Update:** the frequency at which the registry is updated with details of this digitiser can be specified here, using the drop-down menu;
- **Group ID:** the chosen Group Identifier should be entered here;
- **Registry Address:** the IP address of the registry should be entered here. To use the Güralp shared cloud server, enter 52 . 34 . 40 . 123.

Once you have set the correct values, the digitiser must be rebooted before they will take effect. To do this, click the  button.

## 2. Configuring Discovery for use with a registry


To specify a registry server for an instance of discovery, type its address into the field at the bottom left of the main screen:

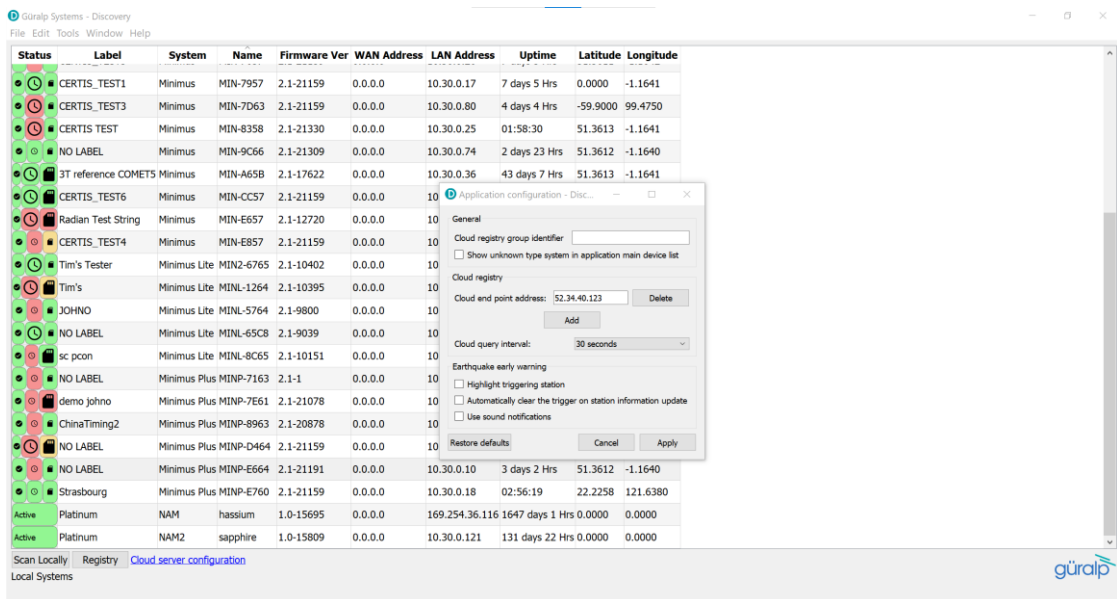

Status	Label	System	Name	Firmware Ver	WAN Address	LAN Address	Uptime	Latitude	Longitude
🟢	CERTIS_TEST1	Minimus	MIN-7957	2.1-21159	0.0.0.0	10.30.0.17	7 days 5 Hrs	0.0000	-1.1641
🟢	CERTIS_TEST3	Minimus	MIN-7D63	2.1-21159	0.0.0.0	10.30.0.80	4 days 4 Hrs	-59.9000	99.4750
🟢	CERTIS TEST	Minimus	MIN-8358	2.1-21330	0.0.0.0	10.30.0.25	01:58:30	51.3613	-1.1641
🟢	NO LABEL	Minimus	MIN-9C66	2.1-21309	0.0.0.0	10.30.0.74	2 days 23 Hrs	51.3612	-1.1640
🟢	3T reference COMETS	Minimus	MIN-A65B	2.1-17622	0.0.0.0	10.30.0.36	43 days 7 Hrs	51.3613	-1.1641
🟢	CERTIS_TEST6	Minimus	MIN-CC57	2.1-21159	0.0.0.0	10			
🟢	Radian Test String	Minimus	MIN-E657	2.1-12720	0.0.0.0	10			
🟢	CERTIS_TEST4	Minimus	MIN-E857	2.1-21159	0.0.0.0	10			
🟢	Tim's Tester	Minimus Lite	MIN2-6765	2.1-10402	0.0.0.0	10			
🟢	Tim's	Minimus Lite	MINL-1264	2.1-10395	0.0.0.0	10			
🟢	JOHNO	Minimus Lite	MINL-5764	2.1-19800	0.0.0.0	10			
🟢	NO LABEL	Minimus Lite	MINL-65C8	2.1-9039	0.0.0.0	10			
🟢	sc pcon	Minimus Lite	MINL-8C65	2.1-10151	0.0.0.0	10			
🟢	NO LABEL	Minimus Plus	MINP-7163	2.1-1	0.0.0.0	10			
🟢	demo johno	Minimus Plus	MINP-7E61	2.1-21078	0.0.0.0	10			
🟢	ChinaTiming2	Minimus Plus	MINP-8963	2.1-20878	0.0.0.0	10			
🟢	NO LABEL	Minimus Plus	MINP-D464	2.1-21159	0.0.0.0	10			
🟢	NO LABEL	Minimus Plus	MINP-E664	2.1-21191	0.0.0.0	10.30.0.10	3 days 2 Hrs	51.3612	-1.1640
🟢	Strasbourg	Minimus Plus	MINP-E760	2.1-21159	0.0.0.0	10.30.0.18	02:56:19	22.2258	121.6380
Active	Platinum	NAM	hassium	1.0-15695	0.0.0.0	169.254.36.116	1647 days 1 Hrs	0.0000	0.0000
Active	Platinum	NAM2	sapphire	1.0-15809	0.0.0.0	10.30.0.121	131 days 22 Hrs	0.0000	0.0000


To set the Group ID in Discovery:


1. Select "Settings " from the “File” menu:

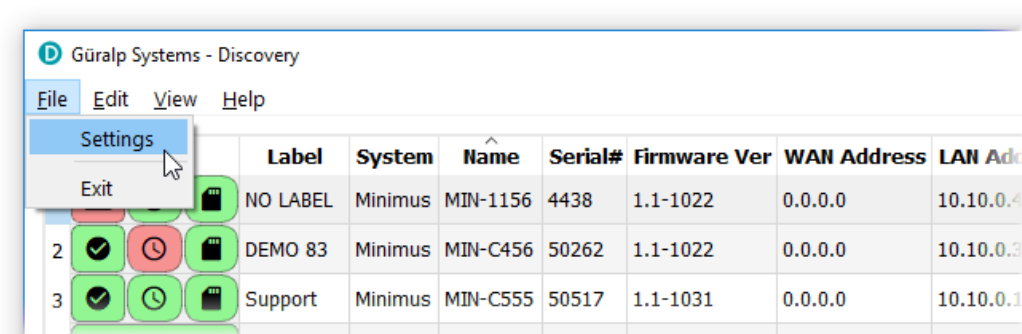

Label	System	Name	Serial#	Firmware Ver	WAN Address	LAN Address
NO LABEL	Minimus	MIN-1156	4438	1.1-1022	0.0.0.0	10.10.0.4
DEMO 83	Minimus	MIN-C456	50262	1.1-1022	0.0.0.0	10.10.0.3
Support	Minimus	MIN-C555	50517	1.1-1031	0.0.0.0	10.10.0.1

2. Type the chosen Group ID in the “Cloud registry group identifier” field and click .

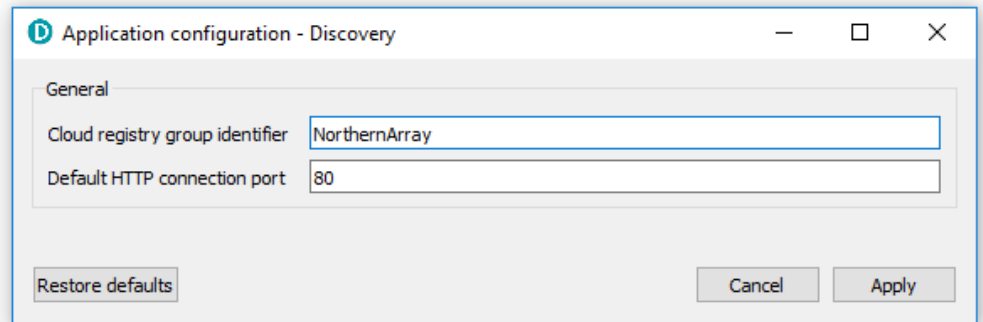

Return to the main windows and test the configuration by clicking the  button. All digitisers using the same Registry server and Group ID should appear in the main list.

---

### 3. Registry mode: using WAN or LAN addresses

When Discovery displays a list of devices found from a local scan, all access to those systems is initiated via the LAN address. When displaying a list of registered devices, you have the option of using either the LAN address or the WAN address. This can be useful when the WAN address has been configured but is not yet available or when a registered device is installed remotely and not available on the LAN. The feature is controlled by exactly where you right-click in the list of devices.

If you right-click anywhere other than in the LAN address column, the WAN address is used and the behaviour is otherwise exactly as previously documented. To access the digitiser via its LAN address, right-click in the LAN address column, as shown below:

When you click on the LAN address of an entry, the context menu changes:

Entries for firmware updates, system and GDI configuration and web page access all now use the LAN address rather than the WAN address.

In addition, all options on the Live View sub-menu use the LAN address:

and the calibration page editor is also invoked using the LAN address:

For these techniques to work, the digitiser and PC must be connected to the same LAN.

---


---

## 22. Updating Minimus2 Firmware

The firmware of the Minimus<sub>2</sub> is upgradeable. New releases appear regularly – mostly to add new features but, occasionally, to fix problems. Güralp recommends that the Minimus<sub>2</sub> is regularly checked for availability of firmware updates and, when convenient, these updates should be installed.

Once this is complete, to upgrade :

1. Run Discovery.
2. Right-click on the Minimus<sub>2</sub> in Discovery main window and select “File Exchange”.
3. In the “File Exchange” tab, select the new software binary file with the Browse button as below:

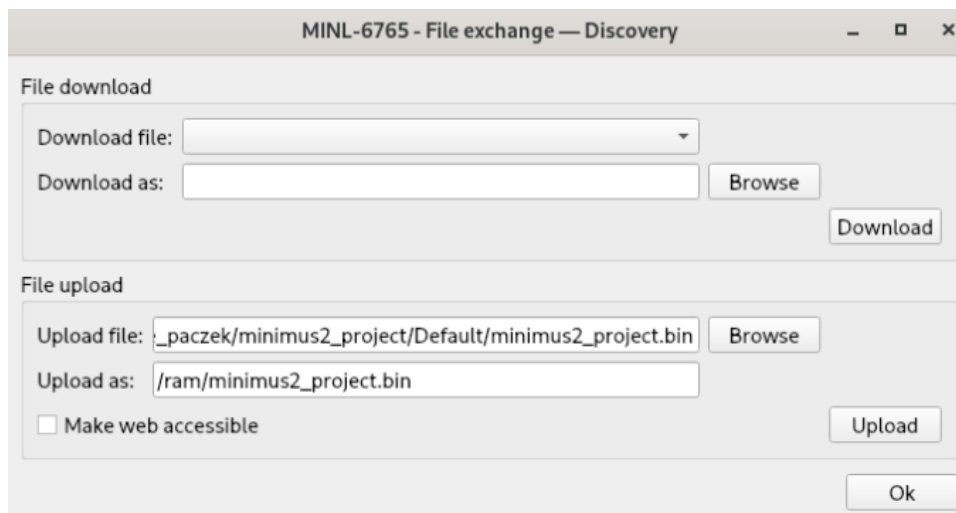

4. Set the upload file name exactly as shown below. Note: the *ram* is prepended automatically.
5. Press upload.
6. The upload takes approx. 40 seconds. The LED on the Minimus<sub>2</sub> should change colour after the upload completes: persistent red erasing internal FLASH memory, then persistent blue during programming, then finally persistent white when complete.
7. DO NOT remove power before the white LED!!!
8. IP address, system name, netmask are all preserved. To preserve general settings, offload the config first. Use Discovery, right click and select “System Configuration”. Download first and upload after the update. As described below:

---

## 23. Import / Export an existing configuration

Updating the firmware can, occasionally, cause loss of configuration. We recommend that you export and save the current configuration before proceeding with an upgrade. This operation can be done through Discovery by right-clicking on the digitiser in the list and selecting "System Configuration" from the context menu:

Select "Use configuration from one of the devices". If more than one device is available, select the one from which the configuration should be downloaded. Click the **Download configuration** button and browse to a suitable location (on your PC) into which to save the configuration file.

After the firmware update is successfully completed, the previous configuration can be imported, if required, by following the instructions below.

Right-click on the digitiser's entry in the Discovery list and select "System Configuration" from the context menu. Select the "Use configuration from file" option.

Select the configuration file from where it was saved in the File Explorer and confirm. Use the check-boxes to select the devices to which the configuration should be uploaded and click on the **Upload configuration** button.

Wait until the process finishes. To apply the new configuration, the unit has to be rebooted: the **Reboot selected** button can be used to perform the required system restarts.

---

## 24. Scripting

The digitiser is capable of running a script file that contains commands to execute at specific dates and time.

This can be used for operations such as scheduled instrument calibrations.

The script file is written on a computer as a .txt file. It is then sent to the digitiser as a file transfer from Discovery (running on a PC, Laptop or Linux system)

---

## 25. Enabling

This capability needs to be enabled (once) on the digitiser as follows:

On the serial diagnostics port of the device type the command below. The serial port can be accessed from Discovery by double clicking the device in the list and selecting the console tab.



MINP-7163-> resource add futrcmds 1



## 26. Sending a script file

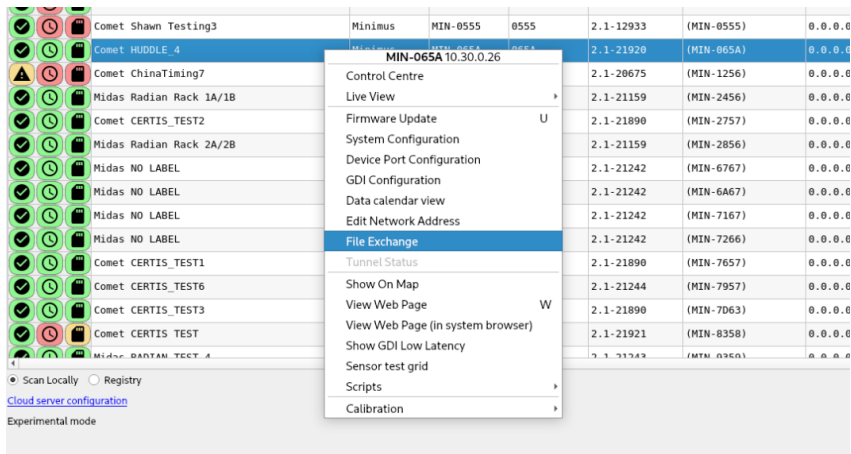


Figure 1 Choosing digitiser to transfer script file


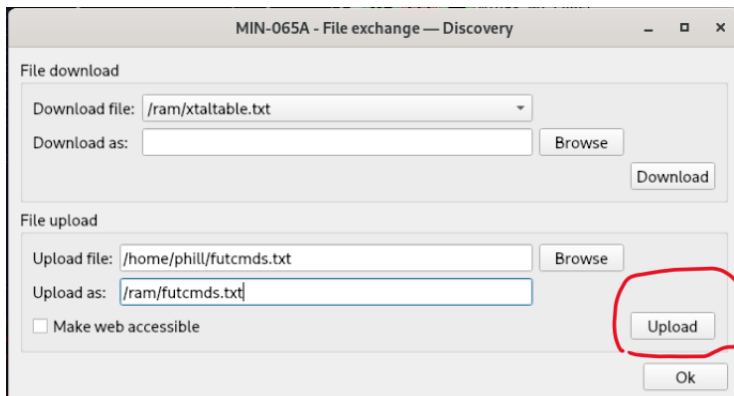


Figure 2 Figure 2 Selecting the script file

The next command due to be executed is displayed in the Network Tab as shown below:

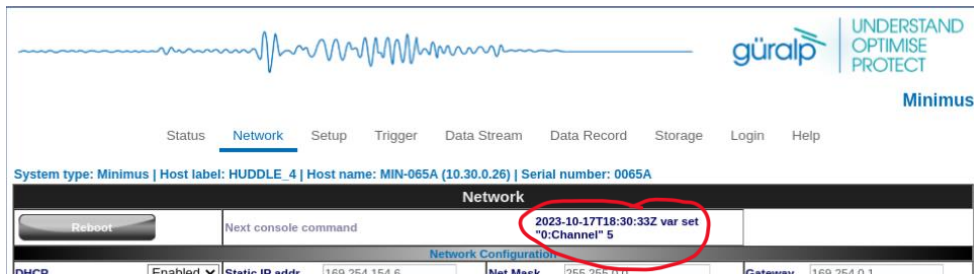


## 27. Commands within the script file

Any commands available on the digitiser serial diagnostics port can be used. The examples below can be used to enable the calibration signal generator at specific **times**:

```
var set 0:Calibration 1
```

The number '1' represents the enumeration of the pulldown list

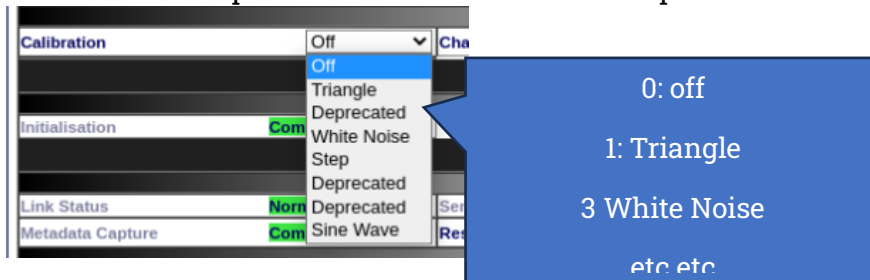

## 28. Example to instigate calibration

```
2023-10-17T18:30:33Z      var set "0:Channel" 5
2023-10-17T18:30:50Z      var set "0:Lookup generator speed" 7
2023-10-17T18:30:55Z      var set "0:calibration" 7
2023-10-17T18:35:13Z      var set "0:calibration" 0
2023-10-17T18:35:33Z      var set "0:Channel" 0
```

Note: The circles space is the TAB character. Using spaces instead won't work!



Figure 3 Resulting cal as seen on Discovery

## 29. Status of the script running process

```
MINP-7163-> futrcmds show
config = 1
2023-04-11T09:59:13Z      system time
2023-04-11T09:59:33Z      ver
2023-04-11T09:59:53Z      futrcmds ?
offset = 0x0000
MINP-7163-> system time
Tue Apr 11 09:58:59 2023
MINP-7163-> futrcmds clear
```

Note: sending a new script file replaces the existing queued up commands  
The clear command removes the entire script.

## 30. Example futrcmds.txt file

The following file will create a single step

```
2023-04-17T03:28:00Z  var set "Cal Signal" 3
2023-04-17T03:28:20Z  var set "Level" 0
2023-04-17T03:28:40Z  var set "Timebase" 16
2023-04-17T03:47:20Z  var set "Cal Signal" 0
```

### 0:Calibration 4

This command will set the signal type, in this example 3 will create a step on sensor , other options include, sinewave, triangle wave and random noise. See pulldown menu in webpage for enumerarions.

Note the script waits for 10 seconds before the next command.

### Level 0

This will set step size to 100% - see pulldown menu on webpage for other options.

## Timebase 16

Set 100 second repetition rate

## Cal Signal 0

Switch off the step cal.

This command will switch off the DAC creating the calibration signal and **stop the recording of the special calibration stream.**

---

## 31. GüVü app

The GüVü app provides monitoring and control of near-by digitisers using the Bluetooth protocol. It is available for both Android and Apple devices.

GüVü can be downloaded from the Google Play store at:

<https://play.google.com/store/apps/details?id=com.guralp.whisper>


or from the Apple store at:


<https://itunes.apple.com/us/app/id1208418113>

---

## 32. Getting started


Steps for launching the GüVü App:

1. Launch by clicking on the GüVü icon from either the Apps Menu or from the Home Screen.
2. Wait a few seconds for the app splash screen.
3. Press the Bluetooth icon () to enable Bluetooth connectivity (if not already enabled) and to search for available devices to with which to pair.
4. Select the appropriate device from the list to pair. Wait a few seconds for the main viewer screen to show.

The instrument connection screen can also be accessed by pressing the menu icon () on the main instrument status window, and selecting the "Connect" option.

If you experience problems connecting, try forcing GüVü to quit and then re-launching the app.


Once the device is connected, the main view of the app will be displayed. This screen displays a number of status indicators associated with both the Minimus<sub>2</sub> and connected sensors. These features are summarised in the figure below:

Access the menu by pressing the menu icon () on the main instrument status window:

---

## 33. Selecting data sources


Güralp view can provide status information about all connected sensors, including digital instruments (*e.g.* Güralp Certis) and analogue instruments.

To select the instrument source that provides information to the main status screen of GüVü, tap the menu icon () on the main instrument status window, and then tap the "Select data source" option.

The data source selection screen shows a list of connected instruments. Select an instrument name: this is now the instrument that will be displayed on the main instrument status window.

---

## 34. View settings

The user can customise the view of the main instrument status window. Four different view options can be cycled through by tapping the menu icon () on the main instrument status window:



- **Show all** – the default view setting; show state-of-health status, mass positions, and sensor traces on a single screen;
  - **Show status view** – show state-of-health on the main screen only;
  - **Show mass graph view** – show mass position traces on the main screen only; and
  - **Show velocity graph view** - show sensor traces on the main screen only.
- 

## 35. Instrument control

Several features of the Minimus<sub>2</sub> and connected instruments can be controlled and configured remotely over Bluetooth using GüVü:


- Analogue instrument centring
- Clearing and un-mounting SD card
- Rebooting the Minimus<sub>2</sub>
- Enable/disable power-saving mode
- Lock/unlock sensor masses
- Station meta-data (User Label, Station Name, Network Code, Site Name)
- Network setting (IP, Netmask, Gateway)
- Changing channels' sampling rates

In each case, GüVü will report whether the selected command has been successfully sent to the device.

These options can be accessed by tapping the menu icon (  ) and choosing the "Device control" option. To access the instrument control and configuration sub-menu, a PIN code has to be entered by selecting the text entry box and tapping  .Note: Any change to the sample rates requires a system reboot to take effect.

The default PIN code used to access the Instrument Control menu is "0000".

## 1. Setting the PIN code

The PIN code for accessing the instrument control menu of GüVü can be changed from the "Setup" tab of the web page. The new four-digit PIN code should be entered into the "Bluetooth PIN" field. The new value is applied by keying  ; or clicking the left mouse button in any other setting box.


Digitizer Config			
Auto Refresh	<input type="text" value="1"/>	Auto Reboot	<input type="text" value="On Error"/>
Host Label	<input type="text" value="SPRT-MIN"/>	Station Code	<input type="text" value="TEST"/>
Bluetooth PIN	<input type="text" value="0000"/>	Bluetooth	<input type="text" value="Enabled"/>
Deploy Mode	<input type="text" value="Normal"/>	Deploy	<input type="text" value=""/>


## 36. Emailing a deployment report

The GüVü app has a feature that allows the user to generate an automatic deployment report that can then be filed via email.

The deployment report includes the following details:

- System name;
- Station name;
- Network code;
- Instrument user label;
- Memory card storage size and recording status;
- Location of site (GNSS latitude, longitude, elevation);
- Time of deployment;
- GNSS lock quality;
- Power supply status;
- Instrument temperature and humidity recordings.

To send a deployment report, tap the menu icon (  ) and choose the "Deployment report" option. GüVü will then open the default email application on the device, showing a draft email which will include the parameters described above.

Lastly, click the  download button to initiate a file transfer using your browser's standard mechanism.

## 37. Using Guralp's Power Pack Module

The PPM offers a battery charge controller that communicated with the digitiser via a serial port. This allows the digitiser to record battery capacity, voltage, current, temperature etc. This information can be viewed as a data stream much like a seismic channel. It can also be written to Miniseed files on the internal SD cards for later analysis.

The behaviour of the power system in relation to the solar panels can be better understood by viewing this data.

There is a 12V accessory output from the battery pack that can be turned on/off remotely or on a timer to power items such as a cellular modem.

The screenshot shows the Guralp Minimus Lite web interface. At the top, there is a navigation menu with options: Status, Network, Setup, Power (selected), Trigger, Data Stream, Data Record, Storage, Login, and Help. Below the menu, the system information is displayed: System type: Minimus Lite | Host label: Tom Min2 Test | Host name: MINL-6A65 (10.30.0.15) | Serial number: 0656A.

The main content area is divided into two sections:

- Power Supply Status:** This section contains a 'Battery Status' table and a 'Battery Ship Mode' button.

Battery Status			
Version	1.3-134	Total Capacity	34,190 Amp Hrs
Capacity	94%	Volts	8.179 Volts
Current	-43 milli Amps	Life	33 Days 17 Hrs
- Accessory Power Control:** This section contains various controls for the accessory power output.

Accessory Power Control					
Accessory Power	Timed	Accessory Type	Modem	Minimum Battery Percentage	80
Current State	On	Start Time 1 (hrs-mins)	00 09	End Time 1 (hrs-mins)	09 00
Start Time 2 (hrs-mins)	09 09	End Time 2 (hrs-mins)	10 00	On-Time	10 s
<input checked="" type="checkbox"/> Turn on with CAP					


At the bottom of the interface, contact information for Guralp Systems Limited is provided: Midas House, Calveva Park, Aldermaston, Reading, RG7 8EA, UK. Tel: +44 118 981 9056, Fax: +44 118 981 9943, E-Mail: sales@guralp.com, support@guralp.com.

The **Accessory Power** mode (currently set to 'Timed') defines the operation of the accessory power output from the power pack module. This can be 'on' or 'off' permanently or based on some combination of time and battery capacity.

In the 'timed' mode, the output is 'on' if the system time falls between either start/end time AND the battery capacity is above the stated percentage.

If the trigger option is set, the modem comes on for the 'On-Time' when a CAP message is sent as a result of a trigger event.

When 'Modem' mode is set, the power remains on whilst a download is in progress.

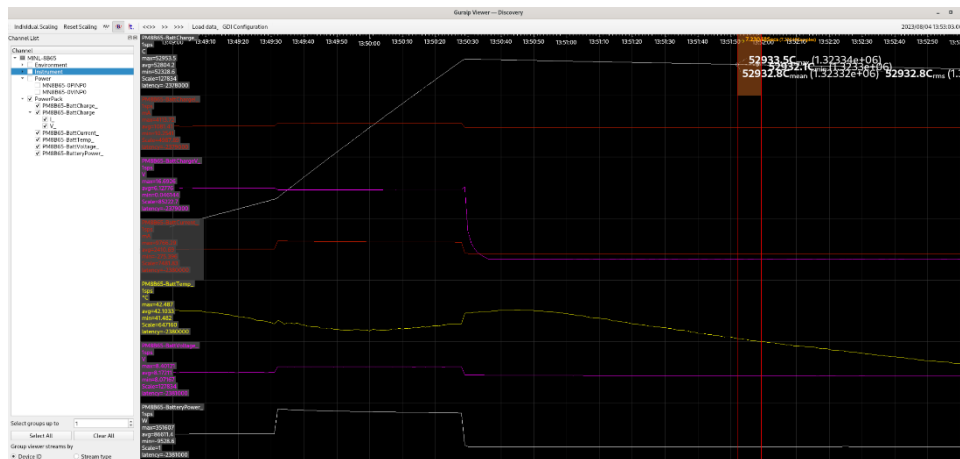




## Advanced troubleshooting


In the unlikely event of the user experiencing problems with the operation of the Minimus<sub>2</sub>, a diagnostics tool is available via the GNSS connector. This connector provides a serial console which can be accessed using a terminal emulator.

The user should first plug in the serial adapter to the GNSS connector, which is then attached to a 9-pin COM port on your PC/laptop (if a 9-pin COM port is not available, a serial-to-USB converter should be used instead and connected to an available USB port. Güralp recommend converters based on the FTDI chip-set.)

A connection is then made using a terminal emulator, such as minicom under Linux or PuTTY under Windows. The appropriate COM port should be entered as the "Serial line", and the "Speed" should be set to 115200.

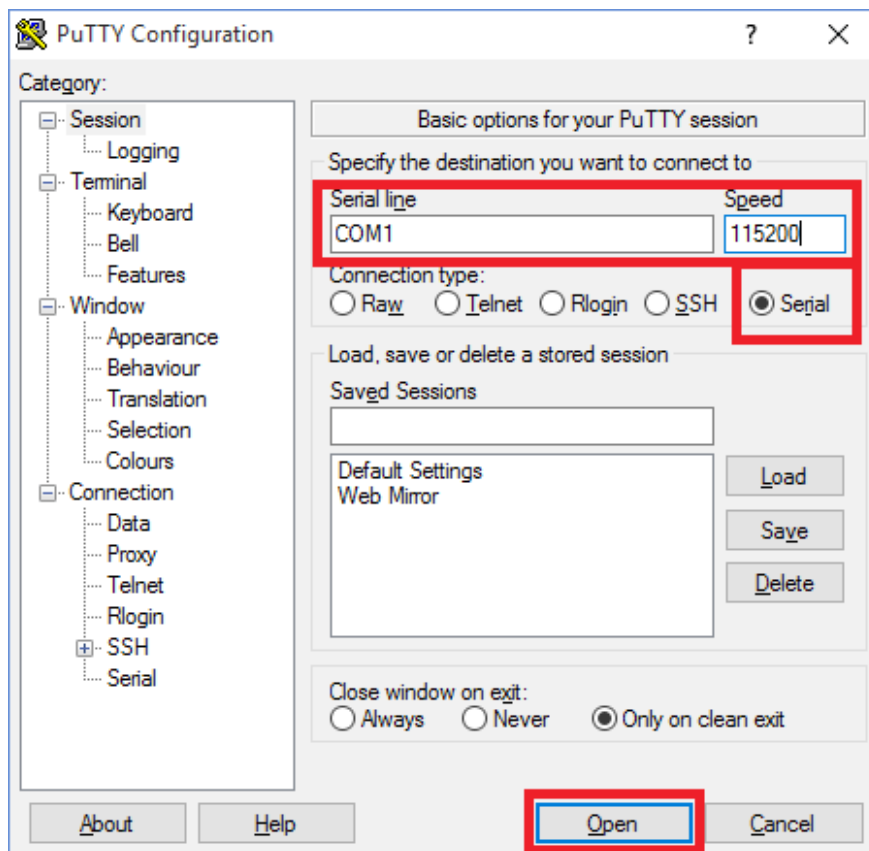

Next, select "Serial" from the bottom of the Category menu in the left-hand pane and check that the settings match those shown in the screen-shot below.

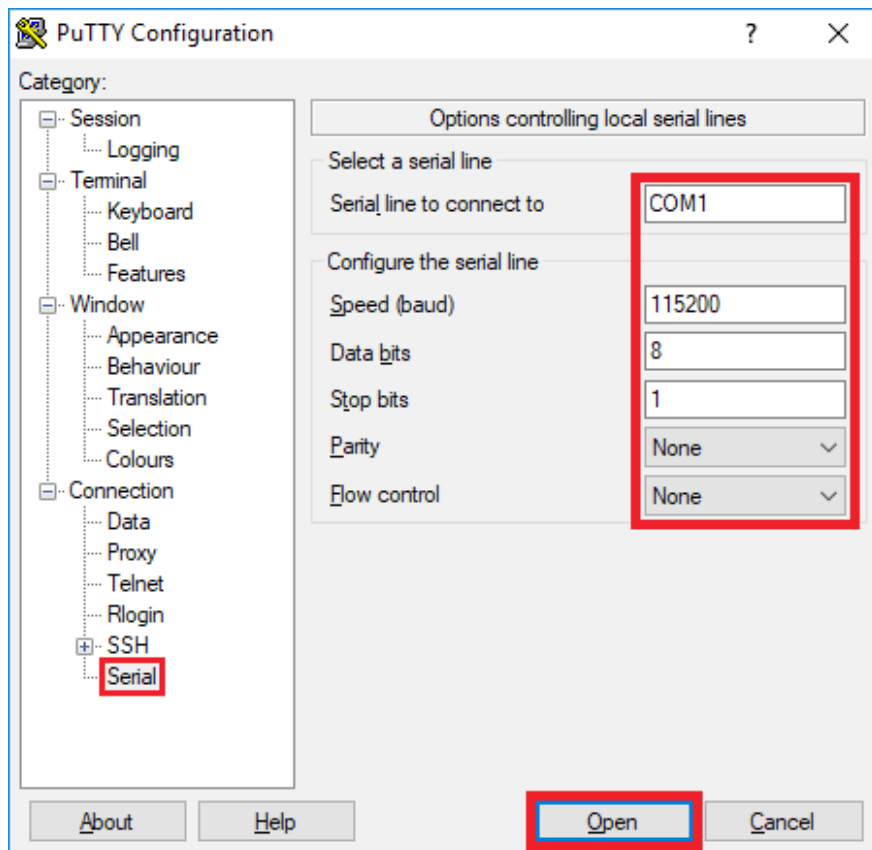

Finally click the **Open** button and a terminal window will open, connected to the console of the Minimus<sub>2</sub>.

In the event of any operational issues, the Gralp Support Team may request you to interact with the console in order to diagnose and fix problems.

## 1. Reset all settings during boot phase

The Minimus<sub>2</sub> can be reset to its factory settings during its boot-up stage. This is useful in cases where the user is not able to communicate with the Minimus<sub>2</sub> via a network connection, where the unit is not responsive, or where it does not appear in the Discovery software's scan results.

To carry out a full system reset, connect to the terminal port via a serial connection (as described in Section 4 on page 6565). During the middle part of the boot phase, when the text @GRALP SYSTEMS and the firmware version number is displayed, key **Ctrl** + **R**. This causes all settings (except Username, Password and Bluetooth PIN) to revert to their factory default values, and the Minimus<sub>2</sub> will re-boot. It may be necessary to enter this key combination several times.

Once the "@GRALP SYSTEMS" banner has been printed, keying **Ctrl** + **R** (at least once) will cause all settings (except Username, Password and Bluetooth PIN) to revert to their default values and cause the Minimus<sub>2</sub> to reboot.

## Appendix 1 – Instrument/channel names

The tables in this section show the names and codes of the streamed channels along with the record names and channel codes for recorded data. The first character “x” in miniSEED channel code represents the sample rate. The possible values are shown in the table below:

<b>F</b>	≥ 1000 Hz to < 5000 Hz
<b>C</b>	≥ 250 Hz to < 1000 Hz
<b>H</b>	≥ 80 Hz to < 250 Hz
<b>B</b>	≥ 10 Hz to < 80 Hz
<b>M</b>	> 1 to < 10
<b>L</b>	≈ 1
<b>V</b>	≈ 0.1 Hz
<b>U</b>	≈ 0.01 Hz
<b>R</b>	≥ 0.0001 Hz to < 0.001

The “Data record names” of the seismic channels and MEMS accelerometer channels are postfixed with “A” or “B”. This notation distinguishes between the two different sample rates that is possible to select for each recorded channel. For example, the recorded streams `S0AccZA` and `S0AccZB` carry digitisations of the same signal, differing only in the sample rate.

## Appendix 2 - Digital interconnectivity and devices

The Minimus<sub>2</sub> has a serial port on the Analogue connector. This can be used for several different protocols depending on what instrument is in use.

The protocols can be selected permanently by added a resource variable to the system. The value of this variable dictates the protocol.

Setting the resource variable can be done from the diagnostics serial port either by direct connection to the system or via the console connection from Discovery (double click the digitiser in the list of devices)

From the Minimus<sub>2</sub> prompt:

```
MINL-1234 -> resource add uartp6 $20
```

The value \$20 comes from the table below:

\$20	Port forwarding or serial port to TCP socket
\$60	Güralp digital instrument such as Certis
\$70	Güralp 3T to gain access to Calibration and Poles/Zeros etc

Note: Use resource del uartp6 to disable this port.

## Appendix 3 – network ports

The following network ports are used by the Minimus<sub>2</sub>:

Port	Layer 4 Protocol	Description
80	TCP	HTTP server
1565	TCP	GDI transmission protocol
1567	TCP/UDP	GCF transmission protocol
4242	TCP	File exchange protocol
4244	TCP	Remote console
11788	UDP	Remote procedure calls
18000	TCP	SEEDlink transmission protocol

# Appendix 4 – Connector pin-outs


## 1. Ethernet

This is an Amphenol RJField-series 8P8C connector. It consists of a standard ISO 8877 8P8C modular socket (often called RJ45) in a bayonet mounting compatible with MIL-DTL-26482 (formerly MIL-C-26482).

Pin	10BASE-T & 100BASE-TX	1000BASE-T
1	Transmit Data +	BI_DA+
2	Transmit Data -	BI_DA-
3	Receive Data +	BI_DB+
4	<i>not connected</i>	BI_DC+
5	<i>not connected</i>	BI_DC-
6	Receive Data -	BI_DB-
7	<i>not connected</i>	BI_DD+
8	<i>not connected</i>	BI_DD-



This connector accepts unmodified ISO 8877 8P8C modular connectors (often called RJ45 connectors or Ethernet "Cat 5/6" connectors).

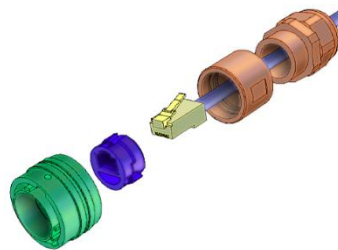


When used in hostile environments, a standard Ethernet cable can have a mating environmental shield (Amphenol part number RJF6MN) fitted.

## 2. Power

This is a standard 4-pin military-specification bayonet plug, conforming to MIL-DTL-26482 (formerly MIL-C-26482).

Pin	Function
A	Ground
B	10-36 V DC input
C	<i>not connected</i>
D	<i>not connected</i>

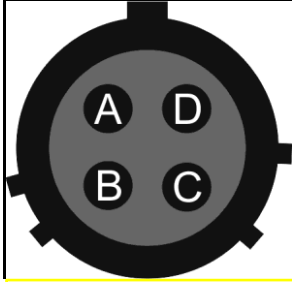

Wiring details for the compatible socket as seen from the cable end (*i.e.* when assembling).

**Caution:** Observe the correct polarity when connecting the power supply. The **red** lead (from pin B) must be connected to the **positive terminal**, typically labelled '+', and the **black** lead (from pin A) must be connected to the **negative terminal**, typically labelled '-'. An incorrect connection risks destroying the digitiser, the power supply and any connected instruments.


### 3. GNSS/serial

This is a 14-pin LEMO EEG.1K socket. Suitable mating connectors can be found in the LEMO FGG.1K.314 range.

- To engage the mating connector, line up the red marks and push firmly home.
- To disengage, hold the mating connector by the gnurled outer sleeve and pull steadily.



Pin	Function
1	Ground
2	<i>not connected</i>
3	Ground
4	Debug (serial) receive
5	Debug (serial) transmit
6	<i>not connected</i>
7	GNSS power
8	GNSS pulse-per-second signal – RS-422 positive
9	GNSS receive – RS-422 positive
10	GNSS transmit – RS-422 positive
11	GNSS transmit – RS-422 negative
12	<i>not connected</i>
13	GNSS pulse-per-second signal – RS-422 negative
14	GNSS receive – RS-422 negative

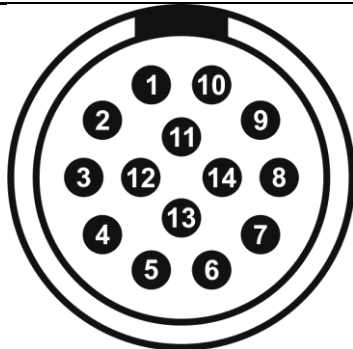


Wiring details for the compatible plug, FGG.1K.314.\*, as seen from the cable end (*i.e.* when assembling).

### 4. Digital

This is a standard 10-pin military-specification bayonet sockets, conforming to MIL-DTL-26482 (formerly MIL-C-26482).



Pin	Function
A	Ground
B	Power
C	RS422 serial transmit – positive
D	RS422 serial transmit – negative
E	RS422 serial receive – negative
F	<i>not connected</i>
G	<i>not connected</i>
H	<i>not connected</i>
I	<i>not connected</i>
J	RS422 serial receive – positive

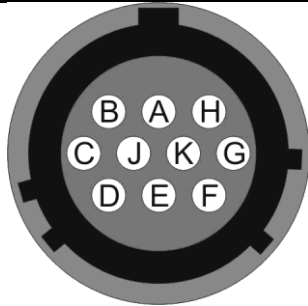

Wiring details for the compatible plug, \*\*\*-12-10P, as seen from the cable end (*i.e.* when assembling).


## 5. Analogue 1 and Analogue 2

These are standard 26-pin male military-specification bayonet plugs, conforming to MIL-DTL-26482 (formerly MIL-C-26482).



Pin	Function	Pin	Function
<b>A</b>	Vertical Acceleration/Velocity – differential non-inverting input	<b>P</b>	Calibration signal (all channels)
<b>B</b>	Vertical Acceleration/Velocity – differential inverting input	<b>R</b>	Calibration enable – vertical channel
<b>C</b>	N/S Acceleration/Velocity – differential non-inverting input	<b>S</b>	Calibration enable – N/S channel
<b>D</b>	N/S Acceleration/Velocity – differential inverting input	<b>T</b>	Calibration enable – E/W channel
<b>E</b>	E/W Acceleration/Velocity – differential non-inverting input	<b>U</b>	Centre
<b>F</b>	E/W Acceleration/Velocity – differential inverting input	<b>V</b>	Aux sensor input – differential non-inverting (or single) input
<b>G</b>	Vertical mass positions	<b>W</b>	Unlock
<b>H</b>	<i>not connected</i>	<b>X</b>	Lock
<b>J</b>	N/S mass positions	<b>Y</b>	Logic – ground*
<b>K</b>	<i>BUSY</i> line	<b>Z</b>	Sensor RS232 transmit
<b>L</b>	E/W mass positions	<b>a</b>	Sensor RS232 receive
<b>M</b>	Auxiliary sensor input – differential inverting input	<b>b</b>	Power – ground*
<b>N</b>	Signal – ground*	<b>c</b>	Power – positive

\* “Power – ground” and “Logic – ground” are connected together internally and also connected to the digitizer case.

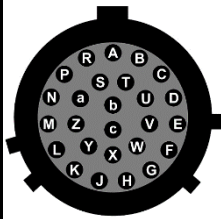

Wiring details for the compatible socket, \*\*\*-16-26S, as seen from the cable end (*i.e.* when assembling).

## Appendix 5 – Dimensions and drawings

# Appendix 6 – Guralp Discovery installation

Guralp Discovery is a software package for Microsoft Windows, MAC and Linux, which facilitates the identification, configuration and management of Guralp digitisers and instruments.

Guralp Discovery has a conventional `.msi` -based installer. Once installed, the software can check whether it is the current version and can update itself using a button on the Help→About menu.

## 1. Installation in Linux

The Linux version of Discovery 64-bit is delivered in a self-contained package.

To install Guralp Discovery:

1. Open the terminal
2. Visit [www.guralp.com/sw/download-discovery.shtml](http://www.guralp.com/sw/download-discovery.shtml) to download the appropriate installation script or use the command

```
wget
http://www.guralp.com/download/discovery/Discovery.run
```

3. Make the downloaded file executable using the command

```
chmod +x Discovery.run
```

4. Run the script with the `-h` option to see the installer's help message:

```
./Discovery.run -h
```

```
Online installer for Guralp Systems Discovery
application
```

```
Usage: ./Discovery.run [parameters]
```

```
Parameters:
```

```
-h : this message
```

```
-i : perform installation
```

```
-o <directory> : output directory (default
/opt/guralp/discovery)
```

5. Execute the script, either accepting the default installation directory

```
./Discovery.run -i
```

or providing your own, alternative location

```
./Discovery.run -i -o /usr/lib/discovery
```

The script proceeds through the following installation stages:

1. A confirmation prompt:

```
Guralp Discovery will be installed in:  
/opt/guralp/discovery. [C]ontinue/[A]bort
```

Type **C** to continue installation in listed directory, or **A** to abort and change directory using the `-o` execution parameter

2. Downloading. The following message is printed:

```
Downloading Discovery from Guralp Systems  
server [Downloading]
```

This step downloads the discovery package from the Guralp server. It is around 50 MiB in size so downloading may take a long time if you have a slow Internet connection.

3. Next, the following message is printed:

```
Creating installation directory:  
/opt/guralp/discovery [OK]
```

This step creates the installation directory. If an error occurs at this stage, please make sure that the user running the installation script has permission to create the specified directory.

4. The downloaded archive is now unpacked into the specified installation directory. The following message is printed:

```
Unpacking Discovery to /opt/guralp/discovery  
[OK]
```

5. The next step removes the downloaded file from the disk.

```
Removing downloaded Discovery archive [OK]
```

6. At this point, the installation is complete. The message

```
Discovery is now installed in:  
/opt/guralp/discovery/discovery
```

is displayed and the application is available in the specified directory.

---

## 2. Installation in Mac

To install Guralp Discovery in a macOS machine:

1. Open Safari, visit [www.guralp.com/sw/download-discovery.shtml](http://www.guralp.com/sw/download-discovery.shtml) and download the appropriate disk-image file.
2. Either save the downloaded file on a local drive, or automatically open it with DiskImageMounter.


3. If you saved the file to disk, navigate to the download location and open Discovery.dmg with DiskImageMounter.
4. Successful mounting should result in Discovery drag and drop installation window
5. Drag and drop discovery.app to the Applications folder.
6. When finished, the installation is complete and the Discovery app can be found in Launcher or Applications folder in Finder.

---

### 3. Installation in Windows


To install Guralp Discovery on a Windows machine:

1. Download the appropriate installer – 32-bit or 64-bit – from <https://www.guralp.com/sw/download-discovery.shtml>
2. Double-click the downloaded file. You may be asked whether you wish to continue: answer yes.
3. The following screen asks where, in the Start Menu, you would like to place the Discovery short-cut. The default location is normally satisfactory but you can change it from here if you wish.

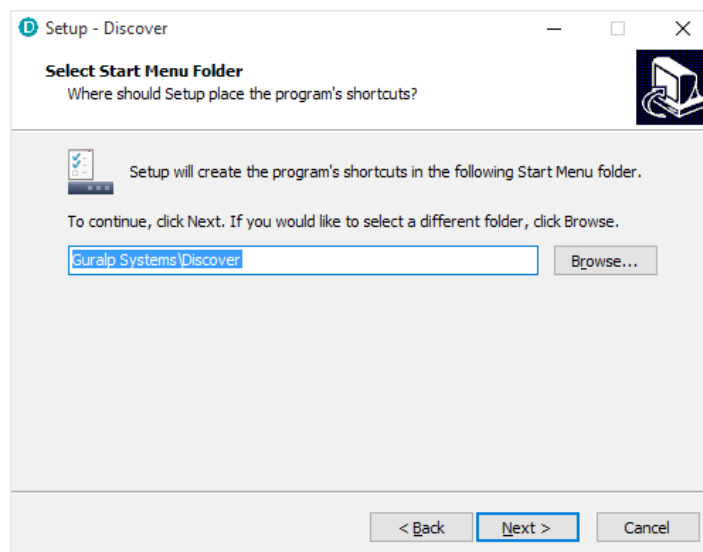


Click  , key  or key  +  to continue.

4. The next screen asks whether you would like to place an icon for Discovery on the desktop:

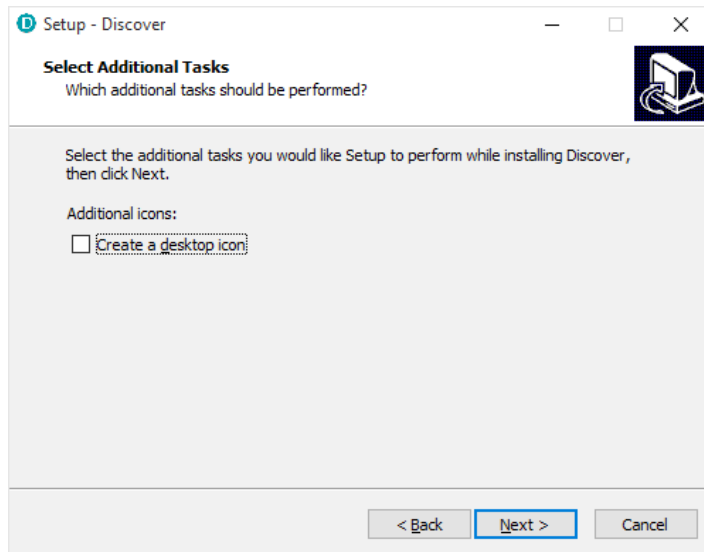


Tick the check-box if you wish and then click **Next >**, key **Enter** or key **Alt** + **N** to continue.

5. The installer then offers a last chance to change any of your decisions:

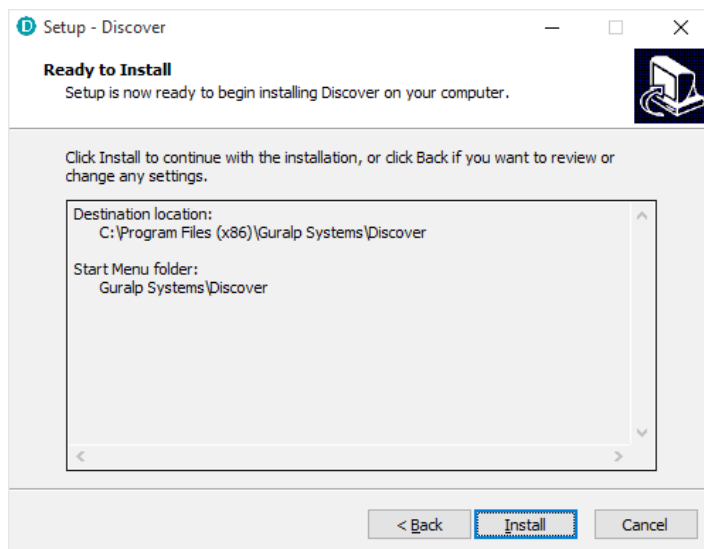


Click **Install**, key **Enter** or key **Alt** + **I** if you are happy with your choices or click **< Back** (or key **Alt** + **B**) if you wish to revisit any of them.

6. Once you have clicked **Install**, the installation begins and a progress screen is displayed:

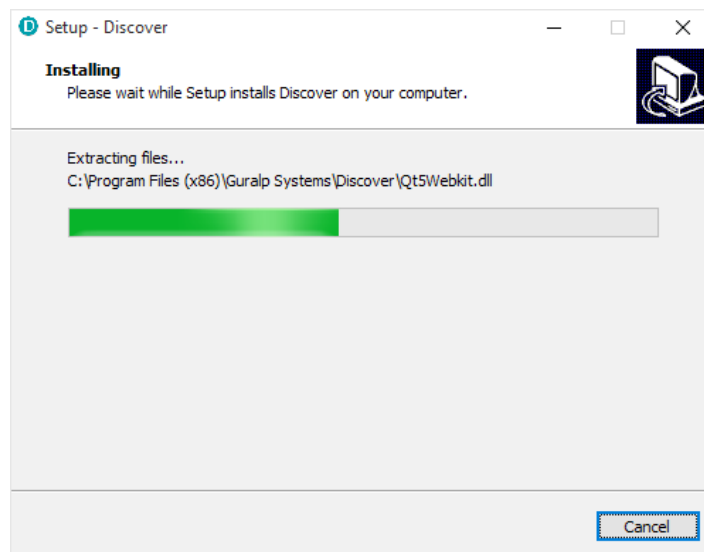

Pressing **Cancel** or keying **Esc** now will remove all of the installed files (except the installer itself) and reverse any changes made so far.

7. Once installation is complete, the following screen is displayed:

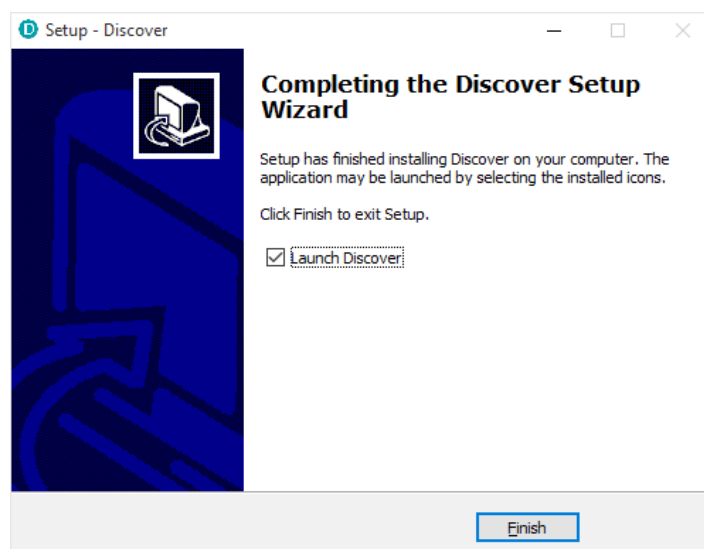

Press **Finish**, key **Enter** or key **Alt** + **F** to close the installer and launch Discovery.

**Note:** Discovery for Windows 64-bit requires Microsoft Visual C++ 2015. Discovery may ask to install it if it is not installed yet.

## 4. Configuring Windows Firewall

Windows Firewall can interfere with Discovery's ability to send information to instruments and/or receive information from instruments over the network. If you




use Windows Firewall, you should make special provision for allowing Discovery to communicate, as described in this section.

1. Click in the “Ask me anything” search box at the bottom left of your Windows screen:



2. Type “allow an app”


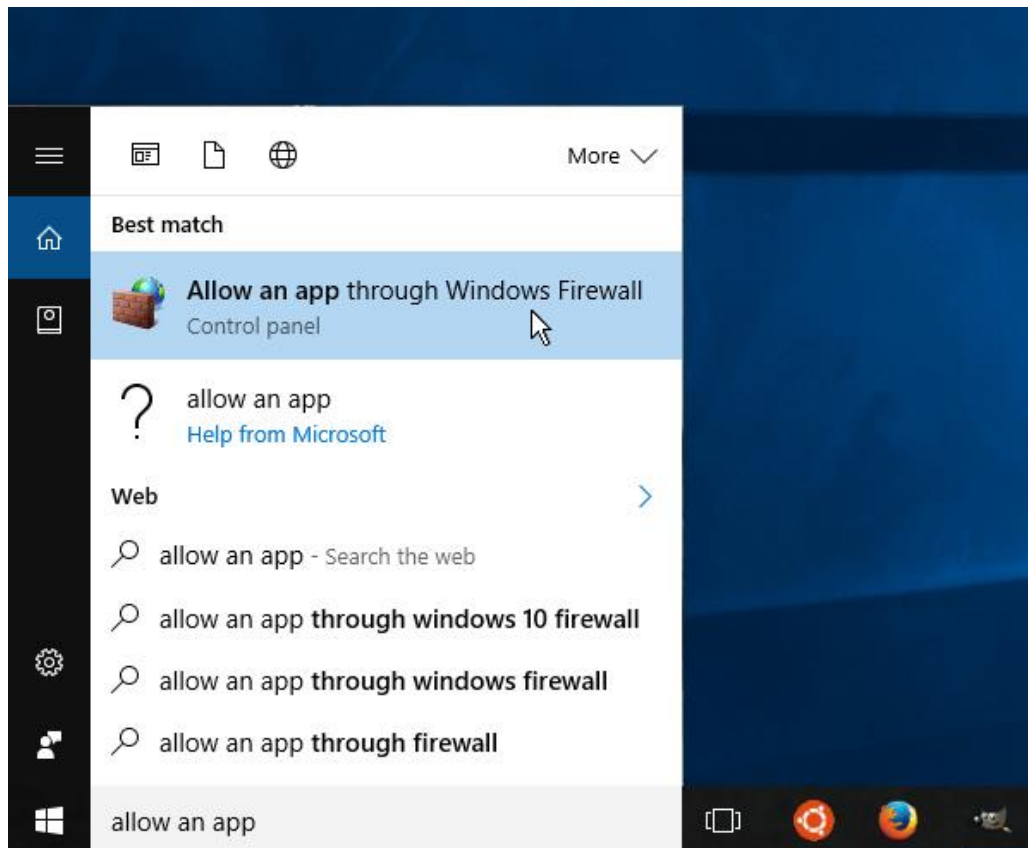



3. Select “Allow an app through Windows Firewall” from the search results.
4. Windows will display the “Windows Firewall Allowed Applications” screen.



This displays a list of applications in alphabetical order. Each application is provided with three check-boxes which indicate whether the application can communicate with networked devices in the “Domain” profile, the “Private” profile or the “Public” profile. (Profiles are also known as “network locations”).

The “Domain” profile applies to networks where the host system can authenticate to a domain controller. The “Private” profile is a user-assigned profile and is used to designate private or home networks. The default profile is the “Public” profile, which is used to designate public networks such as Wi-Fi hotspots at coffee shops, airports, and other locations.

For a more complete discussion of this topic, please see <http://www.tenforums.com/tutorials/6815-network-location-set-private-public-windows-10-a.html> or your Windows documentation.



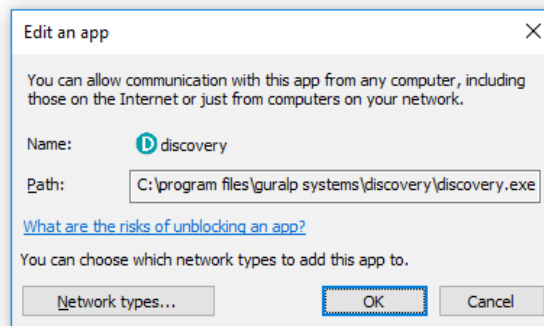
5. First click the  buttons to activate the interface.
6. Highlight the “discovery” line and then click the  button. The “Edit an app” window is shown:




7. Click the  button. The “Choose network types” window is shown:
8. After making appropriate changes, click  first in the “Choose network types” window, then in the “Edit an app” window, then in the “Windows Firewall Allowed Applications”. This closes the Windows Firewall “Allowed Applications” tool and saves the changes that you have made.


---

## 5. Update

If a PC running Güralp Discovery has an Internet connection, Discovery can check whether an update is available. To initiate this, click About from the Help menu or type  +  followed by .

A screen like the following is displayed:

The currently installed version is shown. If this is the most recent version available, the screen will say Up to date and the  button will be disabled, as shown above. If a newer version is available, the screen will look like this:

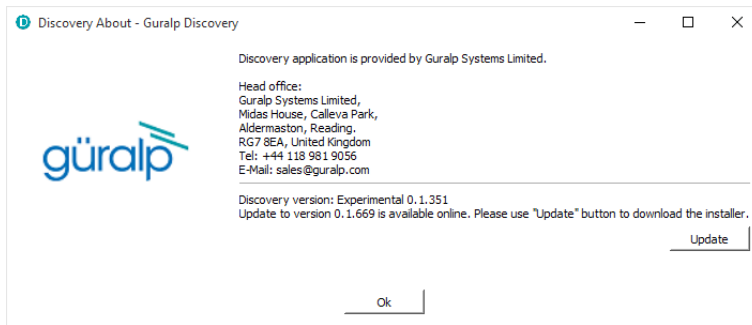


If you want to proceed with downloading the newer version, click the  button. This does not commit to an immediate upgrade: it just downloads the installer. If you do not wish to download the installer, click  to close the "Discovery About" dialogue.

If you clicked , you may see the following warning if the previous installer is still in your download folder:

Simply click  or key  to continue: the download will start immediately.

While the download is in progress, the following indicator will be displayed:

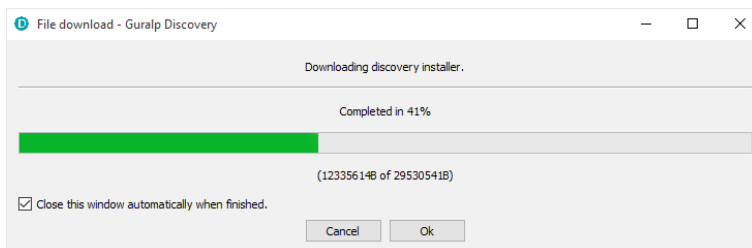

When the download is complete, the following screen is displayed:

If you wish to complete the installation immediately, click . If you would rather defer the installation, click  and run the installer at a more convenient time.

Once the upgrade is complete, start Discovery in the usual way. Windows, recognising that the program has changed, may ask you to specify how you wish Discovery to interact with the Windows Firewall. Because Discovery requires network communication in order to function, it is important that you understand the options available.

The following screen is displayed:

The screen provides three check-boxes which indicate whether Discovery can communicate with networked devices in the "Domain" profile, the "Private" profile or the "Public" profile. (Profiles are also known as "network locations".)

The “Domain” profile applies to networks where the host system can authenticate to a domain controller. The “Private” profile is a user-assigned profile and is used to designate private or home networks. The default profile is the “Public” profile, which is used to designate public networks such as Wi-Fi hotspots at coffee shops, airports, and other locations.

For a more complete discussion of this topic, please see [www.tenforums.com/tutorials/6815-network-location-set-private-public-windows-10-a.html](http://www.tenforums.com/tutorials/6815-network-location-set-private-public-windows-10-a.html) or your Windows documentation.

# Appendix 6 – IP address configuration on PC or Laptop


With APIPA (Automatic Private IP Addressing), a laptop or PC can automatically configure itself with an IP address in the range 169.254.0.1 to 169.254.255.254. The default subnet mask is 255.255.0.0.

Connect the Minimus<sub>2</sub> to the laptop or PC using the blue Ethernet cable and power it up.

## 1. On Linux

On your Linux computer, open the terminal and type the command

```
sudo bash
```

Key  and provide the appropriate password. Then, enter the command

```
ifconfig
```

to identify the Ethernet network interface to which the Minimus<sub>2</sub> is connected. Once you have identified the correct interface, connect the Minimus<sub>2</sub>, power it up and enter the commands

```
ifconfig wlp2s0 down
```

```
ifconfig wlp2s0 up
```

replacing `wlp2s0` with the name of the appropriate interface on your PC.

Enter the command `ifconfig` again to verify that the IPv4 address of the Ethernet adapter is now included in the network 169.254.0.0/16 - *i.e.* the address begins 169.154...



```
wlp2s0 flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
inet 169.254.139.29 netmask 255.255.0.0 broadcast 169.254.255.255
ether 94:65:9c:ab:3c:9a txqueuelen 1000 (Ethernet)
RX packets 556837 bytes 722823565 (689.3 MiB)
RX errors 0 dropped 0 overruns 0 frame 0
TX packets 320424 bytes 42811910 (40.8 MiB)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```

In the example above, the interface has been allocated address 169.254.139.29, which is in the correct network.

## 2. On macOS

Click the Apple icon in the upper-left corner of the screen, and select "System Preferences."




1. Click the "Network" icon to open the Network Preferences pane and select "Ethernet" from the list on the left side of the window.

2. Click the gear button, , in the lower-left corner of the window, then click "Make Service Inactive." Click the "Apply" button to disable the NIC (Network Interface Card).
3. With the Minimus<sub>2</sub> connected and powered up, click the  button again, click "Make Service Active" and click "Apply" to re-enable the NIC.
4. Check that the interface has been assigned an address in the correct network:






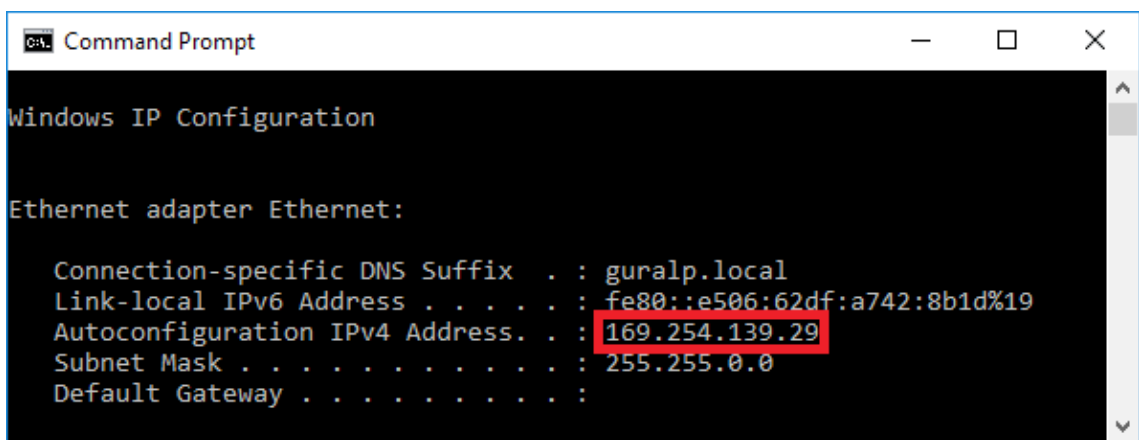
In the example above, the interface has been allocated address 169.254.56.230, which is in the correct network.

### 3. On Windows

On a Windows computer, key  +  to open the "Run" dialogue, enter `ncpa.cp1` and key .

Right-click on the network adapter which is connected to the Minimus<sub>2</sub> and select "Disable" from the context menu. Right-click on the same adapter again and select "Enable". Close the network settings window.

Key  +  and type `cmd.`, then . This opens a command window. Type the command `ipconfig` and verify that the IPv4 address of the Ethernet adapter is included in network `169.254.*.*`.



```
Command Prompt
Windows IP Configuration

Ethernet adapter Ethernet:

    Connection-specific DNS Suffix  . : guralp.local
    Link-local IPv6 Address . . . . . : fe80::e506:62df:a742:8b1d%19
    Autoconfiguration IPv4 Address. . : 169.254.139.29
    Subnet Mask . . . . . : 255.255.0.0
    Default Gateway . . . . . :
```

In the example above, the interface has been allocated address `169.254.56.230`, which is in the correct network.

---

## 4. EU Declaration of Conformity



**We**

Guralp Systems Ltd  
Midas House, Calleva Park, Aldermaston  
READING, RG7 8EA.

Tel: +44 118 981 9056  
E-mail: technical@guralp.com

**Declare under our sole responsibility that the following product**

Equipment name: Minimus<sub>2</sub> with GPS  
Model Number: MIN2-0001 and appropriate variants

**Is in conformity with the**

Radio Equipment Directive 2014/53/EU  
Electromagnetic Compatibility Directive 2014/30/EU  
Low Voltage Directive 2014/35/EU  
Restriction of Hazardous Substances (RoHS) Directive 2011/65/EU

**by applying the following harmonised standards and technical specifications:**

EN 55011, EN 55016:2009 +A1:2010 – Conducted Emissions  
EN 55011, EN 55032 :2009 +A1:2010 – Radiated Emissions  
EN 61000-4-2:2009 – Electrostatic Discharge Immunity  
EN 61000-4-3:2006 +A1:2008 +A2:2010 – Radiated RF Immunity  
EN 61000-4-4:2012 – Electrical Fast Transients Immunity  
EN 61000-4-5:2014 – Voltage Surge Immunity  
EN 61000-4-6:2014 – Conducted RF Immunity  
EN 61000-4-8:2010 – Power Frequency Magnetic Field Immunity  
IEC 61010-1 3rd Edition - Low voltage Safety  
2011/65/EU – RoHS

Signed for and on behalf of  
Guralp Systems Ltd  
on 25 November 2022

Systems Director



---

## Revision History